



SERVICE INFORMATION

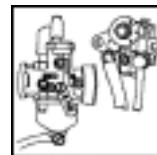

SALES DIVISION
NETWORK TECHNICAL INFORMATION

ELYSTAR 50cc


Subject: AIR FILTER FOAM FITTING

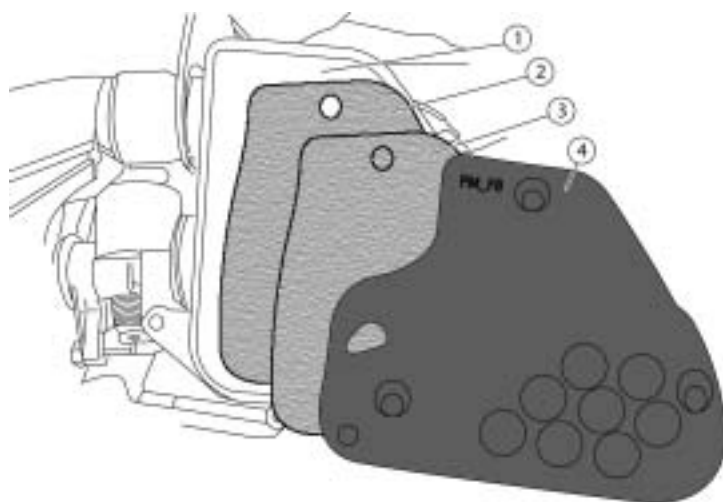

Composition :

1. air filter housing
2. first foam
3. second foam
4. air filter cover

Reminder: the air filter foams must be changed at each 5000 km service

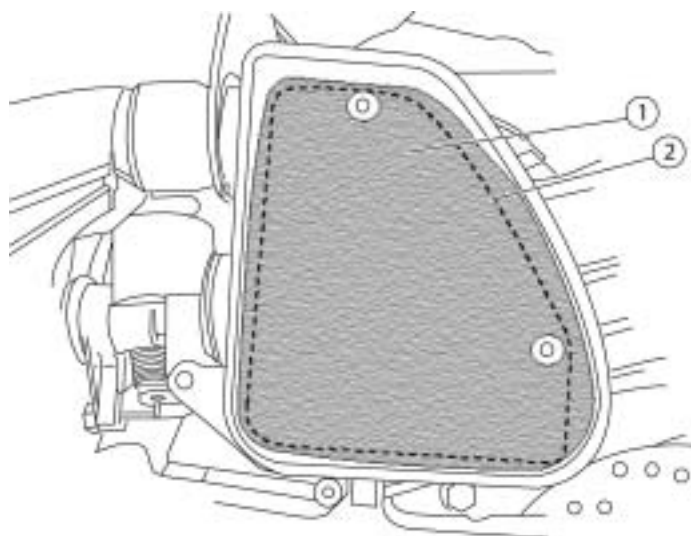

The two foams (1) must be located flat in the filter housing so that the cover is always pressing down on the whole of the perimeter of the foam filters: pressure area (2)

	Dealership	Spare parts	Mechanic 1	Mechanic 2	Mechanic 3
Signature					