FOREWORD

This manual contains an introductory description on the SUZUKI GSX-R1000 and procedures for its inspection/service and overhaul of its main components.

Other information considered as generally known is not included.

Read the GENERAL INFORMATION section to familiarize yourself with the motorcycle and its maintenance. Use this section as well as other sections to use as a guide for proper inspection and service. This manual will help you know the motorcycle better so that you can assure your customers of fast and reliable service.

- * This manual has been prepared on the basis of the latest specifications at the time of publication. If modifications have been made since then, differences may exist between the content of this manual and the actual motorcycle.
- * Illustrations in this manual are used to show the basic principles of operation and work procedures. They may not represent the actual motorcycle exactly in detail.
- * This manual is written for persons who have enough knowledge, skills and tools, including special tools, for servicing SUZUKI motorcycles. If you do not have the proper knowledge and tools, ask your authorized SUZUKI motorcycle dealer to help you.

▲ WARNING

Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual.

Improper repair may result in injury to the

Improper repair may result in injury to the mechanic and may render the motorcycle unsafe for the rider and passenger.


GROUP INDEX

GENERAL INFORMATION	1
PERIODIC MAINTENANCE	2
ENGINE	3
FI SYSTEM DIAGNOSIS	4
FUEL SYSTEM AND THROTTLE BODY	5
EXHAUST SYSTEM	6
COOLING AND LUBRICATION SYSTEM	7
CHASSIS	8
ELECTRICAL SYSTEM	9
SERVICING INFORMATION	10
EMISSION CONTROL INFORMATION	11
WIRING DIAGRAM	12

SUZUKI MOTOR CORPORATION

HOW TO USE THIS MANUAL TO LOCATE WHAT YOU ARE LOOKING FOR:


- 1. The text of this manual is divided into sections.
- 2. The section titles are listed in the GROUP INDEX.
- 3. Holding the manual as shown at the right will allow you to find the first page of the section easily.
- 4. The contents are listed on the first page of each section to help you find the item and page you need.

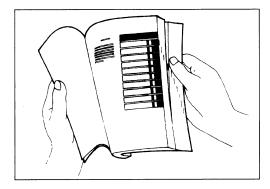

COMPONENT PARTS AND WORK TO BE DONE

Under the name of each system or unit, is its exploded view. Work instructions and other service information such as the tightening torque, lubricating points and locking agent points, are provided.

Example: Front wheel

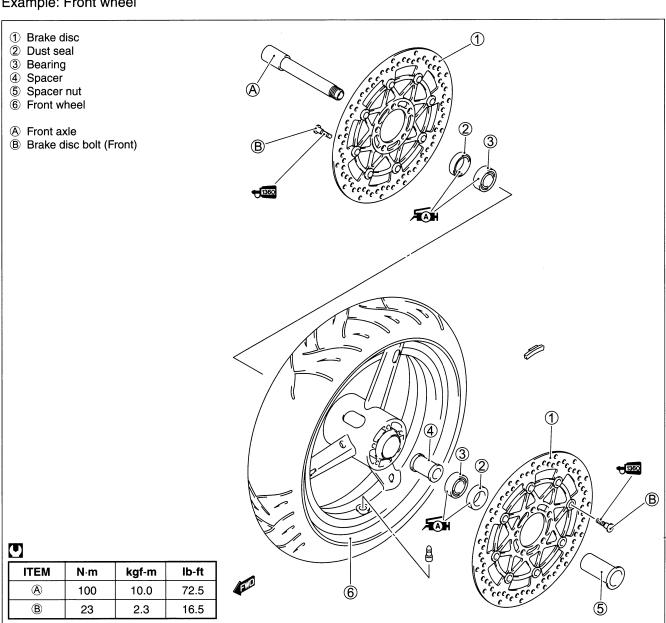

SYMBOL

Listed in the table below are the symbols indicating instructions and other information necessary for servicing. The meaning of each symbol is also included in the table.

SYMBOL	DEFINITION	SYMBOL	DEFINITION
	Torque control required. Data beside it indicates specified torque.	1360	Apply THREAD LOCK SUPER "1360". 99000-32130
일	Apply oil. Use engine oil unless otherwise specified.	LLC	Use engine coolant.
M/O	Apply molybdenum oil solution. (Mixture of engine oil and SUZUKI MOLY PASTE in a ratio of 1:1)	FORK	Use fork oil. 99000-99044-L01
FAH	Apply SUZUKI SUPER GREASE "A". 99000-25010 (Others) 99000-25030 (USA)	BF	Apply or use brake fluid.
FMH	Apply SUZUKI MOLY PASTE. 99000-25140	Ų V J	Measure in voltage range.
1215	Apply SUZUKI BOND "1215". 99000-31110 (Except USA)	A	Measure in current range.
1207B	Apply SUZUKI BOND "1207B". 99104-31140 (USA)	Ω	Measure in resistance range.
1207B	Apply SUZUKI BOND "1207B". 99000-31140 (Except USA)		Measure in diode test range.
1303	Apply THREAD LOCK SUPER "1303". 99000-32030	(10)	Measure in continuity test range.
1322	Apply THREAD LOCK SUPER "1322". 99000-32110 (Except USA)	TOOL	Use special tool.
1342	Apply THREAD LOCK "1342". 99000-32050 (USA)	DATA	Indication of service data.

ABBREVIATIONS USED IN THIS MANUAL

E Α **ABDC** : After Bottom Dead Center **ECM** : Engine Control Module AC Engine Control Unit (ECU) : Alternating Current ACL : Air Cleaner, Air Cleaner Box (FI Control Unit) ECT Sensor : Engine Coolant Temperature API : American Petroleum Institute **ATDC** : After Top Dead Center Sensor (ECTS), Water Temp. ATM Pressure: Atmospheric Pressure Sensor (WTS) : Atmospheric Pressure sensor **EVAP** : Evaporative Emission **EVAP Canister: Evaporative Emission** (APS, AP Sensor) A/F : Air Fuel Mixture Canister (Canister) EXC System : Exhaust Control System (EXCS) : Exhaust Control Valve (EXCV) **EXC Valve** В EXCV Actuator: Exhaust Control Valve Actuator **BBDC** : Before Bottom Dead Center (EXCVA) **BTDC** : Before Top Dead Center B+ : Battery Positive Voltage F FΙ : Fuel Injection, Fuel Injector C FΡ : Fuel Pump CKP Sensor : Crankshaft Position Sensor **FPR** : Fuel Pressure Regulator (CKPS) : Fuel Pump Relay FP Relay CKT : Circuit CLP Switch : Clutch Lever Position Switch G (Clutch Switch) **GEN** CMP Sensor : Camshaft Position Sensor : Generator GND : Ground (CMPS) CO : Carbon Monoxide **GP Switch** : Gear Position Switch CPU : Central Processing Unit Н D HC : Hydrocarbons DC : Direct Current DMC : Dealer Mode Coupler DOHC : Double Over Head Camshaft IAP Sensor : Intake Air Pressure Sensor (IAPS) DRL : Daytime Running Light IAT Sensor : Intake Air Temperature Sensor (IATS) IG : Ignition LCD : Liquid Crystal Display LED : Light Emitting Diode

LH

(Malfunction Indicator Lamp)

: Left Hand

M

MAL-Code : Malfunction Code

(Diagnostic Code)

Max

: Maximum

MIL

: Malfunction Indicator Lamp

(LED)

Min

: Minimum

N

NOX

: Nitrogen Oxides

0

OHC

: Over Head Camshaft

OPS

: Oil Pressure Switch

PCV

: Positive Crankcase

Ventilation (Crankcase Breather)

R

RH

: Right Hand

ROM

: Read Only Memory

S

SAE

: Society of Automotive Engineers

STC System

: Secondary Throttle Control System

(STCS)

STP Sensor

: Secondary Throttle Position Sensor

(STPS)

ST Valve

: Secondary Throttle Valve (STV)

STV Actuator : Secondary Throttle Valve Actuator

(STVA)

TO Sensor

: Tip Over Sensor (TOS)

TP Sensor

: Throttle Position Sensor (TPS)

TPC Valve

: Tank Pressure Control Valve (TPCV)

SAE-TO-FORMER SUZUKI TERM

This table lists SAE (Society of Automotive Engineers) J1930 terms and abbreviations which may be used in this manual in compliance with SAE recommendations, as well as their former SUZUKI names.

SAE TERM		
FULL TERM	ABBREVIATION	FORMER SUZUKI TERM
Α		
Air Cleaner	ACL	Air Cleaner, Air Cleaner Box
В		
Barometric Pressure	BARO	Barometric Pressure, Atmospheric
		Pressure (APS, AP Sensor)
Battery Positive Voltage	B+	Battery Voltage, +B
C		
Camshaft Position Sensor	CMP Sensor	Camshaft Position Sensor (CMPS)
Crankshaft Position Sensor	CKP Sensor	Crankshaft Position Sensor (CKPS),
		Crank Angle
D		
Data Link Connector	DLC	Dealer Mode Coupler
Diagnostic Test Mode	DTM	
Diagnostic Trouble Code	DTC	Diagnostic Code, Malfunction Code
E		
Electronic Ignition	EI	
Engine Control Module	ECM	Engine Control Module (ECM)
		FI Control Unit, Engine Control Unit (ECU)
Engine Coolant Level	ECL	Coolant Level
Engine Coolant Temperature	ECT	Coolant Temperature, Engine Coolant Tem-
		perature
		Water Temperature
Engine Speed	RPM	Engine Speed (RPM)
Evaporative Emission	EVAP	Evaporative Emission
Evaporative Emission Canister	EVAP Canister	—— (Canister)
Exhaust Control System	EXCS	EXC System (EXCS)
Exhaust Control Valve	EXCV	EXC Valve (EXCV)
Exhaust Control Valve Actuator	EXCVA	EXCV Actuator (EXCVA)
F		
Fan Control	FC	
Fuel Level Sensor		Fuel Level Sensor, Fuel Level Gauge
Fuel Pump	FP	Fuel Pump (FP)

SAE TERM		
FULL TERM	ABBREVIATION	FORMER SUZUKI TERM
G	-	
Generator	GEN	Generator
Ground	GND	Ground (GND, GRD)
1		
Idle Speed Control	ISC	_
Ignition Control	IC	Electronic Spark Advance (ESA)
Ignition Control Module	ICM	
Intake Air Temperature	IAT	Intake Air Temperature (IAT), Air Temperature
М)
Malfunction Indicator Lamp	MIL	LED Lamp
		Malfunction Indicator Lamp (MIL)
Manifold Absolute Pressure	MAP	Intake Air Pressure (IAP), Intake Vacuum
Mass Air Flow	MAF	Air Flow
o		
On-Board Diagnostic	OBD	Self-Diagnosis Function
		Diagnostic
Open Loop	OL	
P		
Programmable Read Only Memory	PROM	_
Pulsed Secondary Air Injection	PAIR	Pulse Air Control (PAIR)
Purge Valve	Purge Valve	Purge Valve (SP Valve)
R		
Random Access Memory	RAM	_
Read Only Memory	ROM	ROM
s		
Secondary Air Injection	AIR	
Secondary Throttle Control System	STCS	STC System (STCS)
Secondary Throttle Valve	STV	ST Valve (STV)
Secondary Throttle Valve Actuator	STVA	STV Actuator (STVA)
т		
Throttle Body	тв	Throttle Body (TB)
Throttle Body Fuel Injection	тві	Throttle Body Fuel Injection (TBI)
Throttle Position Sensor	TP Sensor	TP Sensor (TPS)
Tank Pressure Control Valve	TPC Valve	TPC Valve (TPCV)
v		
Voltage Regulator	VR	Voltage Regulator
Volume Air Flow	VAF	Air Flow

WIRE COLOR

В : Black : Gray R : Red Gr : White ВΙ : Blue : Light blue W LbI Br : Brown : Light green Υ : Yellow Lg

Dg : Dark green O : Orange
G : Green P : Pink

B/BI : Black with Blue tracer B/Br : Black with Brown tracer B/G : Black with Green tracer B/Lg : Black with Light green tracer B/R : Black with Red tracer B/W : Black with White tracer B/Y : Black with Yellow tracer BI/B : Blue with Black tracer BI/G : Blue with Green tracer : Blue with Red tracer BI/R BI/W : Blue with White tracer BI/Y : Blue with Yellow tracer : Green with Black tracer G/BI : Green with Blue tracer G/B G/W : Green with White tracer G/Y : Green with Yellow tracer Gr/B : Gray with Black tracer Gr/R : Gray with Red tracer Gr/W : Gray with White tracer Gr/Y : Gray with Yellow tracer O/B : Orange with Black tracer O/G : Orange with Green tracer O/R : Orange with Red tracer O/W : Orange with White tracer O/Y : Orange with Yellow tracer P/B : Pink with Black tracer P/W : Pink with White tracer R/B : Red with Black tracer R/BI : Red with Blue tracer R/W : Red with White tracer W/B : White with Black tracer W/BI : White with Blue tracer W/R : White with Red tracer Y/B : Yellow with Black tracer Y/BI : Yellow with Blue tracer Y/G : Yellow with Green tracer Y/R : Yellow with Red tracer Y/W : Yellow with White tracer

GENERAL INFORMATION

CONTENTS	
WARNING/CAUTION/NOTE	1- 2
GENERAL PRECAUTIONS	1- 2
SUZUKI GSX-R1000K3 ('03-MODEL)	1- 4
SERIAL NUMBER LOCATION	1- 4
FUEL, OIL AND ENGINE COOLANT RECOMMENDATION	
FUEL (FOR USA AND CANADA)	
FUEL (FOR OTHER COUNTRIES)	
ENGINE OIL (FOR USA)	
ENGINE OIL (FOR OTHER COUNTRIES)	
BRAKE FLUID	
FRONT FORK OIL	1- 6
ENGINE COOLANT	1- 6
WATER FOR MIXING	
ANTI-FREEZE/ENGINE COOLANT	1- 6
LIQUID AMOUNT OF WATER/ENGINE COOLANT	1- 6
BREAK-IN PROCEDURES	1- 7
CYLINDER IDENTIFICATION	1- 7
INFORMATION LABELS	1- 8
SPECIFICATIONS	1- 9
DIMENSIONS AND DRY MASS	1- 9
ENGINE	1- 9
DRIVE TRAIN	1- 9
CHASSIS	1-10
ELECTRICAL	1-10
CAPACITIES	1-10
COUNTRY AND AREA CODES	1-11

WARNING/CAUTION/NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words WARNING, CAUTION and NOTE have special meanings. Pay special attention to the messages highlighted by these signal words.

▲ WARNING

Indicates a potential hazard that could result in death or injury.

CAUTION

Indicates a potential hazard that could result in motorcycle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

Please note, however, that the warnings and cautions contained in this manual cannot possibly cover all potential hazards relating to the servicing, or lack of servicing, of the motorcycle. In addition to the WARN-INGS and CAUTIONS stated, you must use good judgement and basic mechanical safety principles. If you are unsure about how to perform a particular service operation, ask a more experienced mechanic for advice.

GENERAL PRECAUTIONS

▲ WARNING

- * Proper service and repair procedures are important for the safety of the service mechanic and the safety and reliability of the motorcycle.
- * When 2 or more persons work together, pay attention to the safety of each other.
- * When it is necessary to run the engine indoors, make sure that exhaust gas in forced out-
- * When working with toxic or flammable materials, make sure that the area you work in is wellventilated and that you follow all of the material manufacturer's instructions.
- * Never use gasoline as a cleaning solvent.
- * To avoid getting burned, do not touch the engine, engine oil, radiator and exhaust system until they have cooled.

After servicing the fuel, oil, water, exhaust or brake systems, check all lines and fittings related to the system for leaks.

CAUTION

- * If parts replacement is necessary, replace the parts with Suzuki Genuine Parts or their equivalent.
- * When removing parts that are to be reused, keep them arranged in an orderly manner so that they may be reinstalled in the proper order and orientation.
- * Be sure to use special tools when instructed.
- * Make sure that all parts used in reassembly are clean. Lubricate them when specified.
- * Use the specified lubricant, bond, or sealant.
- * When removing the battery, disconnect the negative cable first and then the positive cable.
- * When reconnecting the battery, connect the positive cable first and then the negative cable, and replace the terminal cover on the positive terminal.
- * When performing service to electrical parts, if the service procedures not require use of battery power, disconnect the negative cable the battery.
- * When tightening the cylinder head and case bolts and nuts, tighten the larger sizes first.


 Always tighten the bolts and nuts diagonally from the inside toward outside and to the specified tightening torque.
- * Whenever you remove oil seals, gaskets, packing, O-rings, locking washers, self-locking nuts, cotter pins, circlips and certain other parts as specified, be sure to replace them with new ones. Also, before installing these new parts, be sure to remove any left over material from the mating surfaces.
- * Never reuse a circlip. When installing a new circlip, take care not to expand the end gap larger than required to slip the circlip over the shaft. After installing a circlip, always ensure that it is completely seated in its groove and securely fitted.
- * Use a torque wrench to tighten fasteners to the specified torque. Wipe off grease and oil if a thread is smeared with them.

After reassembling, check parts for tightness and proper operation.

* To protect the environment, do not unlawfully dispose of used motor oil, engine coolant and other fluids: batteries, and tires.

To protect Earth's natural resources, properly dispose of used motorcycle and parts.


SUZUKI GSX-R1000K3 ('03-MODEL)

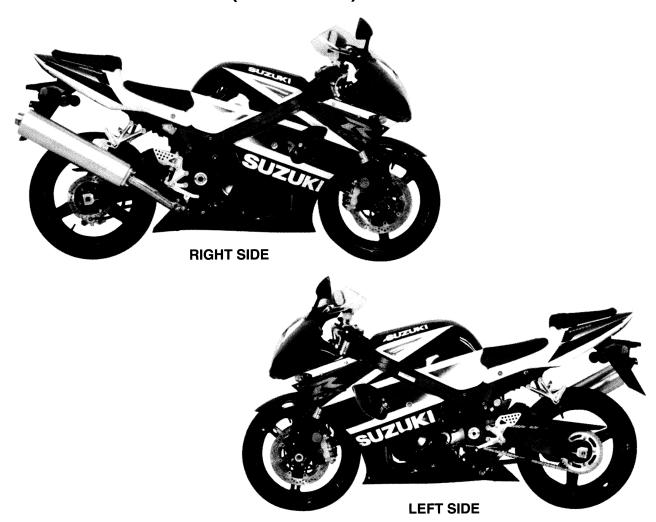


• Difference between photographs and actual motorcycles depends on the markets.

SERIAL NUMBER LOCATION

The frame serial number or V.I.N. (Vehicle Identification Number) ① is stamped on the right side of the steering head pipe. The engine serial number ② is located on the rear side of the crankcase. These numbers are required especially for registering the machine and ordering spare parts.

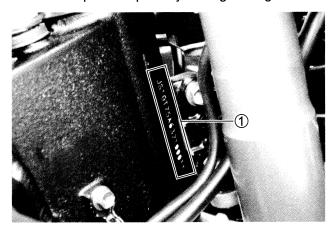

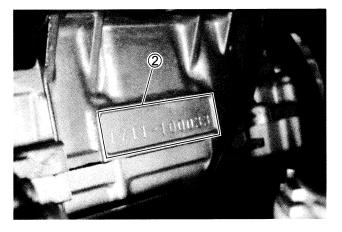

FUEL, OIL AND ENGINE COOLANT RECOMMENDATION FUEL (FOR USA AND CANADA)

Use only unleaded gasoline of at least 90 pump octane ($\frac{R+M}{2}$).

Gasoline containing MTBE (Methyl Tertiary Butyl Ether), less than 10 % ethanol, or less than 5 % methanol with appropriate cosolvents and corrosion inhibitor is permissible.

FUEL (FOR OTHER COUNTRIES)


Gasoline used should be graded 95 octane (Research Method) or higher. An unleaded gasoline is recommended.

ENGINE OIL (FOR USA)

SUZUKI recommends the use of SUZUKI PERFORMANCE 4 MOTOR OIL or an oil which is rated SF or SG under the API (American Petroleum Institute) service classification. The recommended viscosity is SAE 10W-40. If an SAE 10W-40 oil is not available, select and alternative according to the following chart.

ENGINE OIL (FOR OTHER COUNTRIES)

Use a premium quality 4-stroke motor oil to ensure longer service life of your motorcycle. Use only oils which are rated SF or SG under the API service classification. The recommended viscosity is SAE 10W-40. If an SAE 10W-40 motor oil is not available, select an alternative according to the right chart.

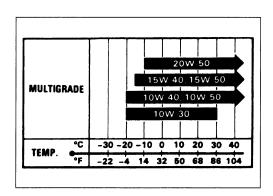

BRAKE FLUID

Specification and classification: DOT 4

▲ WARNING

Since the brake system of this motorcycle is filled with a glycol-based brake fluid by the manufacturer, do not use or mix different types of fluid such as silicone-based and petroleum-based fluid for refilling the system, otherwise serious damage will result.

Do not use any brake fluid taken from old or used or unsealed containers.

Never re-use brake fluid left over from a previous servicing, which has been stored for a long period.

FRONT FORK OIL

Use fork oil L01 or an equivalent fork oil.

ENGINE COOLANT

Use an anti-freeze/engine coolant compatible with an aluminum radiator, mixed with distilled water only.

WATER FOR MIXING

Use distilled water only. Water other than distilled water can corrode and clog the aluminum radiator.

ANTI-FREEZE/ENGINE COOLANT

The engine coolant perform as a corrosion and rust inhibitor as well as anti-freeze. Therefore, the engine coolant should be used at all times even though the atmospheric temperature in your area does not go down to freezing point.

Suzuki recommends the use of SUZUKI COOLANT anti-freeze/engine coolant. If this is not available, use an equivalent which is compatible with an aluminum radiator.

LIQUID AMOUNT OF WATER/ENGINE COOLANT

Solution capacity (total): Approx. 2 400 ml (2.5/2.1 US/Imp qt)

For engine coolant mixture information, refer to cooling system section, page 7-2

CAUTION

Mixing of anti-freeze/engine coolant should be limited to 60 %. Mixing beyond it would reduce its efficiency. If the anti-freeze/engine coolant mixing ratio is below 50 %, rust inhabiting performance is greatly reduced. Be sure to mix it above 50 % even though the atmospheric temperature does not go down to the freezing point.

BREAK-IN PROCEDURES

During manufacture only the best possible materials are used and all machined parts are finished to a very high standard but it is still necessary to allow the moving parts to "BREAK-IN" before subjecting the engine to maximum stresses. The future performance and reliability of the engine depends on the care and restraint exercised during its early life. The general rules are as follows.

• Keep to these break-in engine speed limits:


Initial 800 km (500 miles): Below 6 000 r/min Up to 1 600 km (1 000 miles): Below 9 000 r/min Over to 1 600 km (1 000 miles): Below 12 500 r/min

• Upon reaching an odometer reading of 1 600 km (1 000 miles) you can subject the motorcycle to full throttle operation.

However, do not exceed 12 500 r/min at any time.


CYLINDER IDENTIFICATION

The four cylinders of this engine are identified as No.1, No.2, No.3 and No.4 cylinder, as counted from left to right (as viewed by the rider on the seat.)

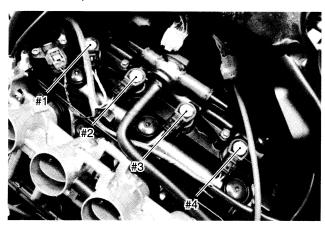

INFORMATION LABELS

	GSX-R1000	GSX-R1000UF
① Noise label	○ For E-03, 24, 33	
② Information label	○ For E-03, 28, 33	
③ Vacuum hose routing label	○ For E-33	
4 Fuel caution label	○ For E-02, 24	
⑤ Fuel information label	0	0
6 Manual notice label	○ For E-03, 33	
7 Frame caution plate	0	0
Warning screen label	0	0
Warning steering label	0	0
1 Tire air pressure label	0	0
1 Warning safety label	0	0
② ICES Canada label	○ For E-28	
③ ID plate	○ Except E-03, 28, 33	0
4 E-19 ID label		0
Safety plate	○ For E-03, 28, 33	

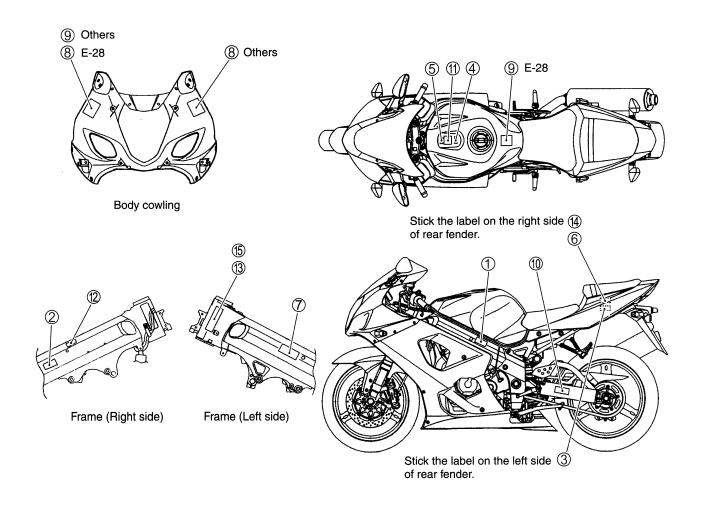

SPECIFICATIONS DIMENSIONS AND DRY MASS

Overall length	2 070 mm (81.5 in)
Overall width	715 mm (28.1 in)
Overall height	1 145 mm (45.1 in)
Wheelbase	1 410 mm (55.5 in)
Ground clearance	130 mm (5.1 in)
Seat height	820 mm (32.3 in)
Dry mass	168 kg (370 lbs)
	169 kg (372 lbs)E-33

ENGINE

Type	Four stroke, liquid-cooled, DOHC
Number of cylinders	4
Bore	73.0 mm (2.874 in)
Stroke	59.0 mm (2.323 in)
Displacement	988 cm³ (60.3 cu.in)
Compression ratio	12.0:1
Fuel system	Fuel injection
Air cleaner	Non-woven fabric element
Starter system	Electric
Lubrication system	Wet sump
Idle speed	1 150 ± 100 r/min

DRIVE TRAIN

Clutch	Wet multi-plate type
Transmission	6-speed constant mesh
Gearshift pattern	1-down, 5-up
Primary reduction ratio	1.553 (73/47)
Gear ratios, Low	2.687 (43/16)
2nd	2.052 (39/19)
3rd	1.681 (37/22)
4th	1.450 (29/20)
5th	1.304 (30/23)
Тор	1.208 (29/24)
Final reduction ratio	2.470 (42/17)
Drive chain	DID 530, 110 links

01140010	
CHASSIS	
Front suspension	Inverted telescopic, coil spring, oil damped
Rear suspension	Link type, coil spring, oil damped
Front fork stroke	120 mm (4.7 in)
Rear wheel travel	130 mm (5.1 in)
Steering angle	27 °
Caster	23.5 °
Trail	91 mm (3.6 in)
Turning radius	3.4 m (11.2 ft)
Front brake	Disc brake, twin
Rear brake	Disc brake
Front tire size	120/70 ZR 17 M/C (58 W), tubeless
Rear tire size	190/50 ZR 17 M/C (73 W), tubeless
ELECTRICAL	
Ignition type	Electronic ignition (Transistorized)
Ignition timing	8 ° B.T.D.C.at 1 150 r/min#1.4
ignition timing	4 ° B.T.D.C.at 1 150 r/min#2-3
Spork plug	NGK CR9E or DENSO U27ESR-N
Spark plug Battery	12 V 36.0 kC (10 Ah)/10 HR
Generator	Three-phase A.C.generator
Main fuse	30 A
Fuse	15/15/15/15/10/10 A
	12 V 55 W (H7) + 12 V 60/55 W (H4)
Headlight	12 V 18 W
Turn signal light	12 V 16 W
License plate light	LED
Brake light/Taillight	LED
Speedometer light	
Tachometer light	LED
Neutral indicator light	LED
High beam indicator light	LED
Turn signal indicator light	LED
Position/Parking light	12 V 5 W Except E-03, 24, 28, 33
Oil pressure/Coolant temperature/Fuel injection warning light	LED
Fuel level indicator light	LED
Engine RPM indicator light	LED
CAPACITIES	
Fuel tank, including reserve	18 L (4.8/4.0 US/Imp gal)Including E-33
Engine oil,oil change	3 000 ml (3.2/2.6 US/Imp qt)
with filter change	3 300 ml (3.5/2.9 US/Imp qt)
overhaul	3 600 ml (3.8/3.2 US/lmp qt)
Coolant	2 400 ml (2.5/2.1 US/lmp qt)
	500 L(47.0/47.0 LIO/I)

509 ml (17.2/17.9 US/lmp oz)

These specifications are subject to change without notice.

Front fork oil (each leg).....

COUNTRY AND AREA CODES

The following codes stand for the applicable country (-ies) and area (-s).

MODEL	CODE	COUNTRY or AREA
GSX-R1000	E-02	U.K.
	E-03	U.S.A. (Except for california)
	E-19	EU
	E-24	Australia
	E-28	Canada
	E-33	California (U.S.A.)
GSX-R1000UF	E-19	EU

PERIODIC MAINTENANCE

00/// 2/// 0	
PERIODIC MAINTENANCE SCHEDULE2- 2	?
PERIODIC MAINTENANCE CHART2- 2	?
LUBRICATION POINTS2- 4	ļ
MAINTENANCE AND TUNE-UP PROCEDURES2- 5	5
AIR CLEANER2- 5	5
SPARK PLUG2- 6	;
VALVE CLEARANCE2- 8	}
ENGINE OIL AND OIL FILTER2-13	}
EXHAUST CONTROL VALVE2-14	ļ
FUEL LINE2-15	;
ENGINE IDLE SPEED2-15	;
THROTTLE VALVE SYNCHRONIZATION2-16	;
EVAPORATIVE EMISSION CONTROL SYSTEM (E-33 ONLY)2-16	;
PAIR (AIR SUPPLY) SYSTEM2-16	;
THROTTLE CABLE PLAY2-17	•
CLUTCH2-18	}
COOLING SYSTEM2-19)
DRIVE CHAIN2-22	?
BRAKE2-25	;
TIRES2-28	}
STEERING2-29)
FRONT FORK2-29)
REAR SUSPENSION2-29)
EXHAUST PIPE BOLT AND NUT2-30)
CHASSIS BOLTS AND NUTS2-31	1
COMPRESSION PRESSURE CHECK2-33	;
COMPRESSION TEST PROCEDURE2-33	;
OIL PRESSURE CHECK2-34	ļ

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Mileages are expressed in terms of kilometers, miles and time for your convenience.

IMPORTANT: The periodic maintenance intervals and service requirements have been established in accordance with EPA regulations. Following these instructions will ensure that the motorcycle will not exceed emission standards and it will also ensure the reliability and performance of the motorcycle.

NOTE:

More frequent servicing may be required on motorcycles that are used under severe conditions.

PERIODIC MAINTENANCE CHART

Interval	miles	600	4 000	7 500	11 000	14 500								
	km	1 000	6 000	12 000	18 000	24 000								
Item	months	1	6	12	18	24								
Air cleaner element		_	I	1	R	I								
Spark plugs			l	R	I	R								
Valve clearance			_	_		ı								
Exhaust valve		I	_	ı	_	ı								
Engine oil		R	R	R	R	R								
Engine oil filter		R			R									
Fuel line			I	I	I	I								
Fuer line 		Replace fuel hose every 4 years.												
Idle speed		l	1	I	I	I								
Throttle valve synchronization		1				1								
Throttle valve synchronization		(E-33 only)		'										
Evaporative emission control system		_	_ _											
(E-33 only)		Replace vapor hose every 4 years.												
PAIR (air supply) system		_		ı	_	I								
Throttle cable play		l	l	l	I	l								
Clutch cable play		_	I	I	I	l								
Radiator hoses		_	ł		l	I								
Hadiatol Hoses		Replace every 4 years.												
Engine coolant			Repla	ce every 2 y	years.									
Drive chain		l		l	l	l								
		Clean	and lubricat	e every 1 00	00 km (600 i	miles).								
Brakes		I	ı	I	l	l								
Brake hoses		_												
Diake 110969	: 		Repla	ce every 4 y	years.									


Interval	miles	600	4 000	7 500	11 000	14 500								
	km	1 000	6 000	12 000	18 000	24 000								
Item	months	1	6	12	18	24								
Brake fluid			I	I	I									
L		Replace every 2 years.												
Tires			I	I	l									
Steering		1	_	I		I								
Front forks			_	I	_	I								
Rear suspension			_	I		I								
Exhaust pipe bolts and muffler bolt and	l nut	Т		Т		Т								
Chassis bolts and nuts		T	Т	Т	Т	Т								

NOTE:

I=Inspect and clean, adjust, replace or lubricate as necessary; R=Replace; T=Tighten

LUBRICATION POINTS

Proper lubrication is important for smooth operation and long life of each working part of the motorcycle. Major lubrication points are indicated below.

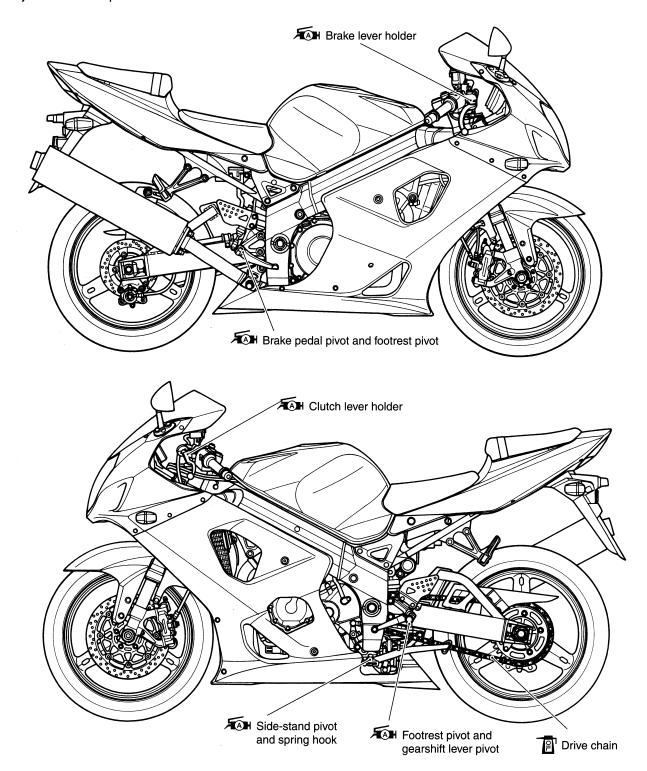

NOTE:

- * Before lubricating each part, clean off any rusty spots and wipe off any grease, oil, dirt or grime.
- * Lubricate exposed parts which are subject to rust, with a rust preventative spray whenever the motorcycle has been operated under wet or rainy conditions.

 
MAINTENANCE AND TUNE-UP PROCEDURES

This section describes the servicing procedures for each item of the Periodic Maintenance requirements.

AIR CLEANER

Inspect every 6 000 km (4 000 miles, 6 months). Replace every 18 000 km (11 000 miles, 18 months).

- Remove the front and rear seats. (\$\tilde{\top} 8-6)
- Lift and support the fuel tank. (5-5)
- Remove the air cleaner element by removing the screws.



NOTE:

Always apply air pressure on the throttle body side of the air cleaner element. If air pressure is applied improperly, dirt will be forced into the pores of the air cleaner element thus restricting air flow through the air cleaner element.


• Reinstall the cleaned or new air cleaner element in the reverse order of removal.

NOTE:

If driving under dusty conditions, clean the air cleaner element more frequently. Make sure that the air cleaner is in good condition at all times. The life of the engine depends largely on this component.

• Remove the drain plug from the air cleaner box to allow any water to drain out.



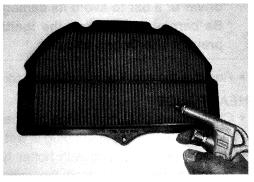



SPARK PLUG

Inspect at 6 000 km (4 000 miles, 6 months) and replace every 12 000 km (7 500 miles, 12 months) thereafter.

SPARK PLUG AND IGNITION COIL/PLUG CAP REMOVAL

- Remove the front and rear seat. (8-6)
- Lift and support the fuel tank. (5-5)
- Remove the air cleaner box. (5-15)
- Disconnect all lead wire couplers from ignition coil/plug caps.

CAUTION

Disconnect the lead wire coupler before removing the ignition coil/plug cap to avoid lead wire coupler damage.

• Remove the ignition coils/plug caps.

CAUTION

- * Do not pry up the ignition coil/plug cap with a screw driver or a bar to avoid its damage.
- * Be careful not to drop the ignition coil/plug cap to prevent short/open circuit.
- Remove the spark plugs with a spark plug wrench.

HEAT RANGE

 Check spark plug heat range by observing electrode color. If the electrode of the spark plug is wet appearing or dark color, replace the spark plug with hotter type one. If it is white or glazed appearing, replace the spark plug with colder type one.


	Hot type	Standard	Cold type
NGK	CR8E	CR9E	CR10E
ND	U24ESR-N	U27ESR-N	U31ESR-N


NOTE:

"R" type spark plug has a resistor located at the center electrode to prevent radio noise.

CARBON DEPOSITS

- · Check carbon deposits on the spark plug.
- If carbon is deposited, remove it using a spark plug cleaner machine or carefully use a tool with a pointed end.

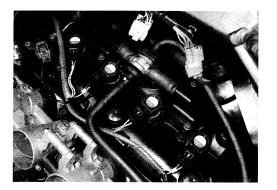

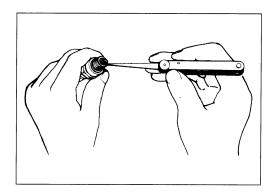

SPARK PLUG GAP

- Measure the spark plug gap with a thickness gauge.
- Adjust the spark plug gap if necessary.

DATA Spark plug gap:

Standard: 0.7 - 0.8 mm (0.028 - 0.031 in)

09900-20803: Thickness gauge

ELECTRODE'S CONDITION

- Check the condition of the electrode.
- If it is extremely worn or burnt, replace the spark plug.
 Replace the spark plug if it has a broken insulator, damaged thread, etc.

CAUTION

Confirm the thread size and reach when replacing the plug. If the reach is too short, carbon will be deposited on the screw portion of the plug hole and engine damage may result.

SPARK PLUG AND IGNITION COIL/PLUG CAP INSTALLATION

• Install the spark plugs to the cylinder head with fingers, and then tighten them to the specified torque.




CAUTION


Do not crossthread or over tighten the spark plug, or the spark plug will damage the aluminum threads of the cylinder head.


 Install the ignition coils/plug caps and connect their lead wire couplers.


CAUTION

- * Do not hit the ignition coil/plug cap with a plastic hammer when installing it.
- * Place the ignition coil/spark plug cap so that the coupler does not touch the cylinder head cover.

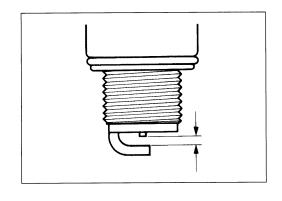

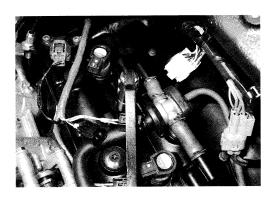

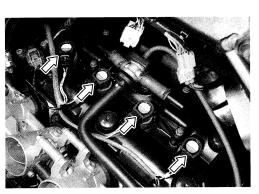


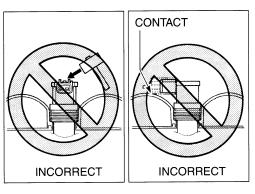

VALVE CLEARANCE

Inspect every 24 000 km (15 000 miles, 24 months).

- Remove the right under cowling. (8-3)
- Remove the front and rear seats. (8-6)
- Lift and support the fuel tank. (5-5)
- Remove the spark plugs. (2-6)
- Remove the cylinder head covers. (3-15)

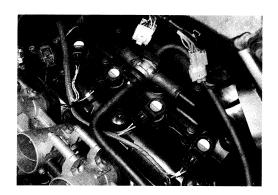


The valve clearance specification is different for intake and exhaust valves. Valve clearance must be checked and adjusted, 1) at the time of periodic inspection, 2) when the valve mechanism is serviced, and 3) when the camshafts are removed for servicing.


PATA Valve clearance (when cold):

Standard: IN.: 0.10 - 0.20 mm (0.004 - 0.008 in) EX.: 0.20 - 0.30 mm (0.008 - 0.012 in)


NOTE:


- * The cam must be at positions, (A) or (B), in order to check the valve clearance, or to adjust valve clearance. Clearance readings should not be taken with the cam in any other position than these two positions.
- * The clearance specification is for COLD state.
- * To turn the crankshaft for clearance checking, be sure to use a wrench, and rotate in the normal running direction. All spark plugs should be removed.
- Remove the valve timing inspection cap ①.

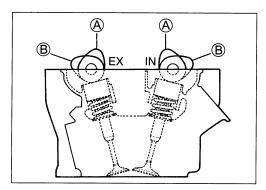

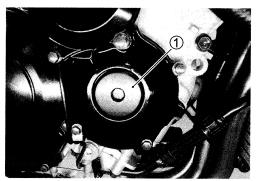


• Turn the crankshaft to bring the "Top" line on the starter clutch to the index mark and also to bring the notches (A) on the left ends of both camshafts (Ex and In) to the positions as shown.

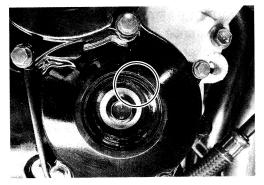

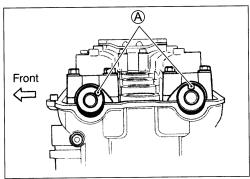


- In this condition, read the valve clearance at the valves (In and Ex of No.4 cylinder, Ex of No.3 and In of No.2).
- If the clearance is out of specification, adjust the clearance.
 (2-10)


09900-20803: Thickness gauge

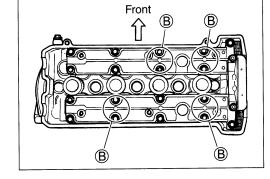

- Turn the crankshaft 360 degrees (one rotation) to bring the "TOP" line on the starter clutch to the index mark of valve timing inspection hole and also to bring the notches (A) to the position as shown.
- Read the clearance at the remaining valves © and adjust the clearance if necessary. (2-2-10)


0	Notch (A)	position
Cam position	Exhaust Camshaft	Intake Camshaft
B	←Front 🔿	←Front 💍
©	←Front ②	←Front ۞

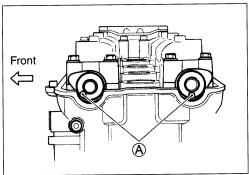


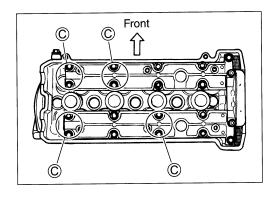

The clearance is adjusted by replacing the existing tappet shim by a thicker or thinner shim.

- Remove the intake or exhaust camshafts. (3-16)
- Remove the tappet and shim by fingers or magnetic hand.
- Check the figures printed on the shim. These figures indicate the thickness of the shim, as illustrated.
- Select a replacement shim that will provide a clearance within the specified range. For the purpose of this adjustment, a total of 25 sizes of tappet shim are available ranging from 1.20 to 2.20 mm in steps of 0.05 mm. Fit the selected shim to the valve stem end, with numbers toward tappet. Be sure to check shim size with micrometer to ensure its size. Refer to the tappet shim selection table (2-11, 2-12) for details.

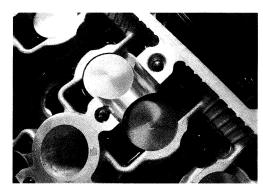

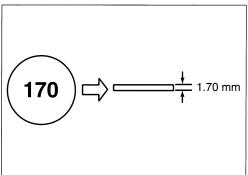


NOTE:

- * Be sure to apply engine oil to tappet shim top and bottom faces.
- * When seating the tappet shim, be sure the figure printed surface faces the tappet.

NOTE:

Reinstall the camshafts in the specified manner. (3-98)

 After replacing the tappet shim and camshafts, rotate the engine so that the tappet is depressed fully. This will squeeze out oil trapped between the shim and the tappet that could cause an incorrect measurement. Then check the clearance again to confirm that it is within the specified range.

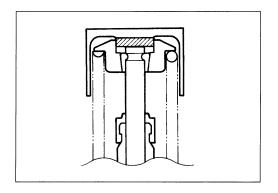

- After finishing the valve clearance adjustment, reinstall the following items.
- * Cylinder head cover (3-103)
- * Spark plug and plug cap (2-7)
- * Valve timing inspection plug (3-103)

(INTAKE SIDE)

TAPPET SHIM SET (12800-05830)

TAPPET SHIM SELECTION TABLE [INTAKE] TAPPET SHIM NO. (12892-05C00-XXX)

																						Metabure present still size. Metab alcorocco in vortical caluma with present chim size in horizontal	0115011181				
220	2.20	2.10	2.15																			<u>.</u>	= = D				
215	2.15	2.05	2.10		2.20																		30				
210	2.10	2.00	2.05		2.20																	ido ido	= 0 = 1				
205	2.05	1.95	2.00		2.15	2.20														2	ט ה	0,000	בי בי				
200	2.00	1.90	1.95		2.10	2.15	2.20													<u> </u>	Π Σ	d+i/y	<u> </u>		ши	ши	ШL
195	1.95	1.85	1.90		2.05	2.10	2.15	2.20												9	Measure valve clearance. Engine is COLD	100			0.23 r	1.70 mm	1.80
190	1.90	1.80	1.85		2.00	2.05	2.10	2.15	2.20										ļ	 	ice.	Size.	<u> </u>				
185	1.85	1.75	1.80	EQUIR	1.95	2.00	2.05	2.10	2.15	2.20										SHA L	earar • ehim		D .	щ	<u>.s</u>	e Se	pesn
180	1.80	1.70	1.75	AENT F	1.90	1.95	2.00	2.05	2.10	2.15	2.20								i	SH.	alve c	reser	ב ה	EXAMPLE	rance	im siz	to be
175	1.75	1.65	1.70	SPECIFIED CLEARANCE/NO ADJUSTMENT REQUIRED	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20								HOW TO USE THIS CHARI:	sure v	Measure present sinin size.	֓֞֞֜֜֝֓֞֜֟֓֓֓֓֓֓֓֓֓֓֓֓֓֓֟֓֓֓֓֓֓֡֓֓֓֓֓֡֓֜֡֓֡֓֡֓֡֓	. ॲ 	Valve clearance is	Present shim size	Shim size to be used
170	1.70	1.60	1.65	NO A	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20						İ	<u>}</u>	Mea			5	Valve	Pres	Shir
165	1.65	1.55	1.60	RANCE	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20					:	오.	<u>-</u> : =	≓≣	Ė				
160	1.60	1.50	1.55	CLEA	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20												
155	1.55	1.45	1.50	ECIFIE	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20											
150	1.50	1.40	1.45	SPI	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20										
145	1.45	1.35	1.40		1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20									
140	1.40	1.30	1.35		1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		1						
135	1.35	1.25	1.30		1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20							
130	1.30	1.20	1.25		1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20						
125	1.25		1.20		1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		•			
120	1.20				1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20				
SUFFIX NO.	PRESENT SHIM SIZE (mm)																	(-		2				
	MEASURED VALVE CLEARANCE (mm)	0.00-0.04	0.05-0.09	0.10-0.20	0.21-0.25	0.26-0.30	0.31-0.35	0.36-0.40	0.41-0.45	0.46-0.50	0.51-0.55	0.56-0.60	0.61-0.65	0.66-0.70	0.71-0.75	0.76-0.80	0.81-0.85	0.86-0.90	0.91-0.95	0.96-1.00	1.01-1.05	1.06-1.10	1.11-1.15				

(EXHAUST SIDE)

TAPPET SHIM SELECTION TABLE [EXHAUST] TAPPET SHIM NO. (12892-05C00-XXX)

TAPPET SHIM SET (12800-05830)

																							Match clearance in vertical column with present shim size in horizontal			
220	2.20	2.05	2.10	2.15																			in bo			
215	2.15	2.00	2.05	2.10		2.20																	n size			
210	2.10	1.95	2.00	2.05		2.20																	nt shir			
205	2.05	1.90	1.95	2.00		2.15	2.20														, OLD		prese			
200	2.00	1.85	1.90	1.95		2.10	2.15	2.20													EISC		with		E E	Ē
195	1.95	1.80	1.85	1.90		2.05	2.10	2.15	2.20												NGIN		olumr		0.33 mm 1.70 mm	1.80 mm
190	1.90	1.75	1.80	1.85		2.00	2.05	2.10	2.15	2.20										<u>::</u>	ce. "E	size.	tical c		0 - 1	_
185	1.85	1.70	1.75	1.80	EQUIR	1.95	2.00	2.05	2.10	2.15	2.20									CHAR	earan	shim .	in ver	Ц	ე. ეთე იე ∐	Isea
180	1.80	1.65	1.70	1.75	MENT R	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_						THIS	alve cl	resent	rance	EVANDI E	ance i	o ne r
175	1.75	1.60	1.65	1.70	SPECIFIED CLEARANCE/NO ADJUSTMENT REQUIRED	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20							HOW TO USE THIS CHART:	Measure valve clearance. "ENGINE IS COLD"	Measure present shim size	h clea		Valve clearance is Present shim size	Snim size to be used
170	1.70	1.55	1.60	1.65	NO AL	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20						M 70	Meas	Meas	Matc	Color	Valve Prese	ב ה
165	1.65	1.50	1.55	1.60	RANCE	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_			오	<u>.</u> :	= :	Ë			
160	1.60	1.45	1.50	1.55	CLEA	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_								
155	1.55	1.40	1.45	1.50	CIFIE	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20									
150	1.50	1.35	1.40	1.45	SPI	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20								
145	1.45	1.30	1.35	1.40		1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_					
140	1.40	1.25	1.30	1.35		1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_				
135	1.35	1.20	1.25	1.30		1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_			
130	1.30	\angle	1.20	1.25		1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20				
125	1.25			1.20		1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		_	
120	1.20					1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20		
SUFFIX NO.	PRESENT SHIM SIZE (mm)	0.05-0.09	0.10-0.14	0.15-0.19	0.20-0.30	0.31-0.35	0.36-0.40	0.41-0.45	0.46-0.50	0.51-0.55	0.56-0.60	0.61-0.65	0.66-0.70	0.71-0.75	0.76-0.80	0.81-0.85	0.86-0.90	0.91-0.95	0.96-1.00	1.01-1.05	1.06-1.10	1.11-1.15	1.16-1.20	1.21-1.25		
MEASIIBED	VALVE CLEARANCE (mm)	0.	0.	0.	0.	Ö	0.		O	0.	0	0.	.O	0	0	0.6	0.6	0.	0.	1.1	1.1	-	-	1		

ENGINE OIL AND OIL FILTER

(ENGINE OIL)

Replace initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.

(OIL FILTER)


Replace initially at 1 000 km (600 miles, 1 months) and every 18 000 km (11 000 miles, 18 months) thereafter.

ENGINE OIL REPLACEMENT


- Remove the under cowling. (8-3)
- Keep the motorcycle upright.
- Place an oil pan below the engine, and drain oil by removing the oil drain plug 1 and filler cap 2.
- Tighten the drain plug ① to the specified torque, and pour fresh oil through the oil filler. The engine will hold about 3.0 L (3.2/2.6 US/Imp qt) of oil. Use an API classification of SF or SG oil with SAE 10W/40 viscosity.


Oil drain plug: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

- Start up the engine and allow it to run for several minutes at idling speed.
- Turn off the engine and wait about three minutes, then check the oil level through the inspection window. If the level is below mark "L", add oil to "F" level. If the level is above mark "F", drain oil to "F" level.

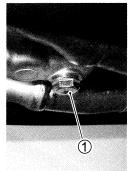



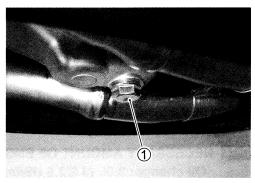

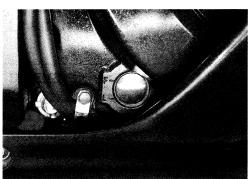

OIL FILTER REPLACEMENT

 
- Drain the engine oil as described in the engine oil replacement procedure.
- Remove the oil filter ① with the special tool.

09915-40610: Oil filter wrench

- Apply engine oil lightly to the gasket of the new oil filter before installation.
- Install the new oil filter. Turn it by hand until you feel that the oil filter gasket contacts the oil filter mounting surface. Then, tighten the oil filter two full turns with the special tool.

NOTE:

To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand.




MATA NECESSARY AMOUNT OF ENGINE OIL:


Oil change: 3.0L (3.2/2.6 US/Imp qt)

Oil and filter change: 3.3L (3.5/2.9 US/Imp qt) Engine overhaul: 3.6L (3.8/3.2 US/Imp qt)

CAUTION

ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER. Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this motorcycle.

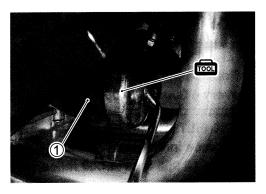

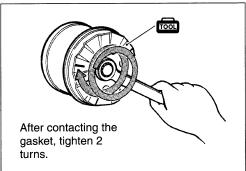


EXHAUST CONTROL VALVE

Inspect initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months) thereafter.


Check the exhaust control valve actuator for its movement when the ignition switch is turned on. If the exhaust valve actuator does not move, check exhaust valve actuator electrical circuit and exhaust valve carbon sticking. Check the exhaust control cable play. (56-14)



• Remove the two bolts and cover.

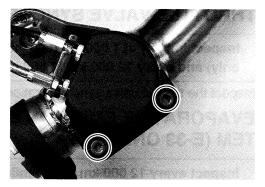

• Check the lock-nuts tightness. If the lock-nuts are loose, adjust the cable play and tighten the lock-nuts.

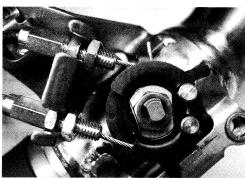

FUEL LINE

Inspect initially at 6 000 km (4 000 miles, 6 months). Replace every 4 years.

• Inspect the fuel hose 1 for damage and fuel leakage. If any defects are found, the fuel hose must be replaced.



ENGINE IDLE SPEED

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.

NOTE:

Warm up the engine before adjusting the engine idle speed.

 Start the engine, turn the throttle stop screw and set the engine idle speed as follows.

Engine idle speed: 1 150 ± 100 rpm



THROTTLE VALVE SYNCHRONIZATION

Inspect initially at 1 000 km (600 miles, 1 months) (E-33 only) and every 12 000 km (7 500 miles, 12 moths).

Inspect the throttle valve synchronization periodically. (25-25)

EVAPORATIVE EMISSION CONTROL SYSTEM (E-33 ONLY)

Inspect every 12 000 km (7 500 miles, 12 months). Replace vapor hose every 4 years.

Inspect the evaporative emission control system periodically. (311-9)

PAIR (AIR SUPPLY) SYSTEM

Inspect every 12 000 km (7 500 miles, 12 months).

Inspect the PAIR (air supply) system periodically. (11-6)

THROTTLE CABLE PLAY

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.


Adjust the throttle cable play (A) as follows.



MINOR ADJUSTMENT

1st step:


• Loosen the lock-nut 1 of the throttle returning cable 2 and fully turn in the adjuster 3.

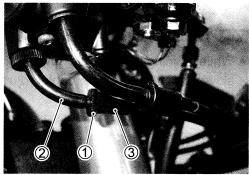

2nd step:

- Loosen the lock-nut 4 of the throttle pulling cable 5.
- Turn the adjuster 6 in or out until the throttle cable play (at the throttle grip) A is between 2.0 – 4.0 mm (0.08 – 0.16 in).
- Tighten the lock-nut 4 while holding the adjuster 6.

Throttle cable play \triangle : 2.0 – 4.0 mm (0.08 – 0.16 in)

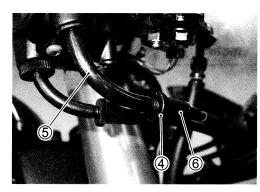

3rd step:

- While holding the throttle grip at the fully closed position, slowly turn out the adjuster 3 of the throttle returning cable 2 until resistance is felt.
- Tighten the lock-nut ① while holding the adjuster ③.

▲ WARNING

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle grip returns smoothly and automatically.

NOTE:

Major adjustment can be made at the throttle body side adjuster.

MAJOR ADJUSTMENT


- Lift and support the fuel tank with its prop stay. (5-5)
- Loosen the lock-nuts ① of the throttle returning cable ②.
- Turn the returning cable adjuster ③ to obtain proper cable play.
- Loosen the lock-nuts 4 of the throttle pulling cable 5.
- Turn the pulling cable adjuster 6 in or out until the throttle cable play A should be 2.0 – 4.0 mm (0.08 – 0.16 in) at the throttle grip.
- Tighten the lock-nuts 4 securely while holding the adjuster
 6.


PATA Throttle cable play \triangle : 2.0 – 4.0 mm (0.08 – 0.16 in)

- While holding the throttle grip at the fully closed position, slowly turn the returning cable adjuster ③ to obtain a cable slack ® of 1.0 mm (0.04 in).
- Tighten the lock-nuts ① securely.

▲ WARNING

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle grip returns smoothly and automatically.

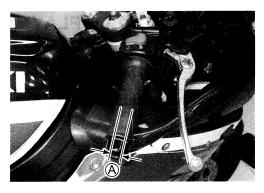

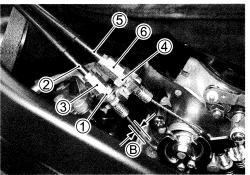



CLUTCH

Inspect every 6 000 km (4 000 miles, 6 months).

- Remove the left under cowling. (8-3)
- Turn in the adjuster ① all the way into the clutch lever assembly.
- Remove the clutch release cover.
- Loosen the lock-nut ② and turn out the adjusting screw ③ two or three rotations.
- From that position, slowly turn in the adjusting screw ③ until resistance is felt.
- From this position, turn out the adjusting screw 3 1/4 rotation, and tighten the lock-nut 2.
- Loosen the lock-nut ④, and turn the cable adjuster ⑤ to obtain 10 15 mm (0.4 0.6 in) of free play ⑥ at the clutch lever end.
- Tighten the lock-nuts 4.

Clutch lever play (A): 10 – 15 mm (0.4 – 0.6 in)
Clutch release screw: 1/4 turn out

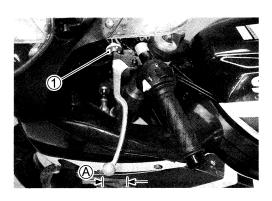

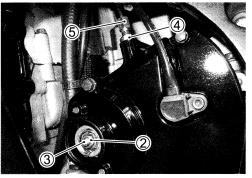



COOLING SYSTEM

Inspect every 6 000 km (4 000 miles, 6 months). Replace engine coolant every 2 years. Replace radiator hoses every 4 years.

ENGINE COOLANT LEVEL CHECK

- Keep the motorcycle upright.
- Remove the under cowling. (\$\sumset\$8-3)
- Check the engine coolant level by observing the full and lower lines on the engine coolant reservoir.
 - A Full line **B** Lower line
- If the level is below the lower line, remove the right under cowling (28-3), and add engine coolant to the full line from the engine coolant reservoir filler.

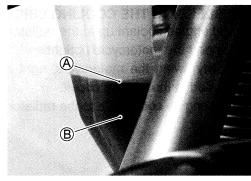

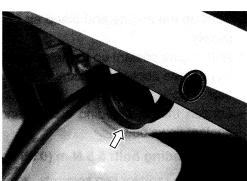

ENGINE COOLANT CHANGE

- Remove the under cowling. (8-3)
- Remove the radiator cap ①.
- Drain engine coolant by disconnecting the radiator hose 2 from the pump.


▲ WARNING


- * Do not open the radiator cap when the engine is hot, as you may be injured by escaping hot liquid or vapor.
- * Engine coolant may be harmful if swallowed or if it comes in contact with skin or eyes. If engine coolant gets into the eyes or in contact with the skin, flush thoroughly with plenty of water. If swallowed, induce vomiting and call physician immediately!
- Flush the radiator with fresh water if necessary.
- Connect the radiator hose ② securely.
- Pour the specified engine coolant up to the radiator inlet.

Engine coolant capacity (excluding reservoir): 2 150 ml (2.3/1.9 US/Imp qt)

• Bleed the air from the engine coolant circuit in the following procedure. (F2-20)


ENGINE COOLANT INFORMATION (7-2)

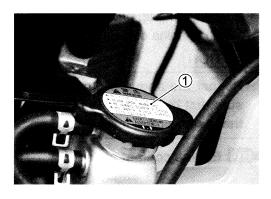

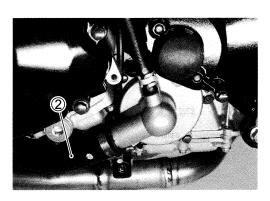

AIR BLEEDING THE COOLING CIRCUIT

 - Add engine coolant up to the radiator inlet.
- Support the motorcycle upright.
- · Slowly swing the motorcycle, right and left, to bleed the air trapped in the cooling circuit.
- Add engine coolant up to the radiator inlet.



- Add engine coolant up to the radiator inlet.
- · Repeat the above procedure until no air cames from the radiator inlet.
- Loosen the air bleeding bolt 1 and check that the engine coolant flows out.

Air bleeding bolt: 5.5 N·m (0.55 kgf-m, 4.0 lb-ft)


- Close the radiator cap securely.
- · After warming up and cooling down the engine several times, add the engine coolant up to the full level of the reservoir.


CAUTION

Repeat the above procedure several times and make sure that the radiator is filled with engine coolant up to the reservoir full level.

LLC Engine coolant capacity:


Engine side: 2 150 ml (2.3/1.9 US/Imp qt) Reverse tank side: 250 ml (0.3/0.2 US/lmp qt)

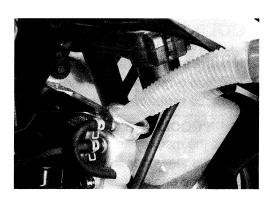


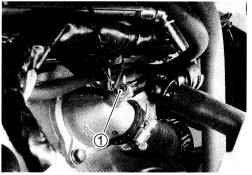

RADIATOR HOSES

- Remove the under cowling. (\$\sumset\$ 8-3)
- Check the radiator hoses for crack, damage or engine coolant leakage.
- If any defect is found, replace the radiator hose with new one.

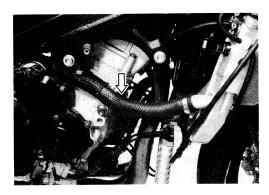

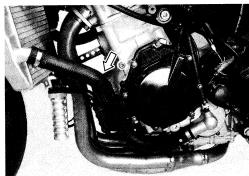

DRIVE CHAIN

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter. Clean and lubricate every 1 000 km (600 miles).


Visually check the drive chain for the possible defects listed below. (Support the motorcycle by a jack and a wooden block, turn the rear wheel slowly by hand with the transmission shifted to Neutral.)

- * Loose pins
- * Excessive wear
- * Damaged rollers
- * Improper chain adjustment
- * Dry or rusted links
- * Missing O-ring seals
- * Kinked or binding links

If any defect is found, the drive chain must be replaced.


NOTE:


When replacing the drive chain, replace the drive chain and sprockets as a set.

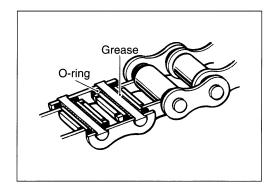

CHECKING

- Remove the axle cotter pin. (For E-03, 28 and 33)
- Loosen the axle nut 1.
- Loosen the chain adjuster lock-nuts 2.
- Tense the drive chain fully by turning both chain adjuster bolts
 3.

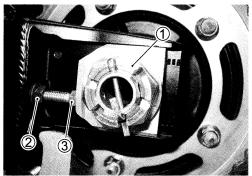


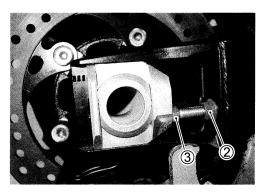

 Count out 21 pins (20 pitches) on the chain and measure the distance between the two points. If the distance exceeds the service limit, the chain must be replaced.

DATA Drive chain 20-pitch length:

Service limit: 319.4 mm (12.57 in)

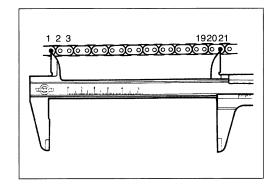

ADJUSTING

Loosen or tighten both chain adjuster bolts ① until there is 20

 30 mm (0.8 - 1.2 in) of slack at the middle of the chain between the engine and rear sprockets as shown. The chain adjuster position relative to the reference marks ⑥ on both sides of the swingarm must be equal to ensure that the front and rear wheels are correctly aligned.


DATA Drive chain slack:


Standard: 20 - 30 mm (0.8 - 1.2 in)


- Place the motorcycle on its side-stand for accurate adjustment.
- After adjusting the drive chain, tighten the axle nut ② to the specified torque.
- Tighten both chain adjuster lock-nuts ③ securely.

Rear axle nut: 100 N⋅m (10.0 kgf-m, 72.5 lb-ft)

- Install a new cotter pin. (For E-03, 28, 33)
- Recheck the drive chain slack after tightening the axle nut.

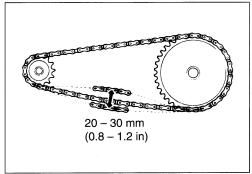

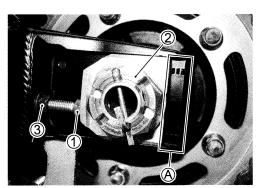

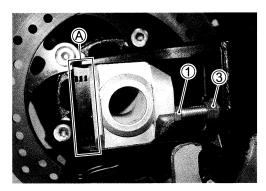

CLEANING AND LUBRICATING

• Clean the drive chain with kerosine. If the drive chain tends to rust quickly, the intervals must be shortened.


CAUTION

Do not use trichloroethylene, gasoline or any similar solvent. These fluids will damage the O-rings. Use only kerosine to clean the drive chain.

· After washing and drying the chain, oil it with a heavyweight motor oil.

CAUTION

- * Do not use any oil sold commercially as "drive chain oil". Such oil can damage the O-rings.
- * The standard drive chain is DID50V4. Suzuki recommends to use this standard drive chain as a replacement.

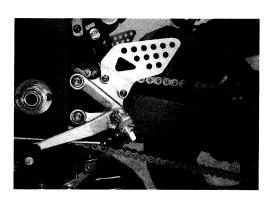

BRAKE

(BRAKE)

Inspect initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.

(BRAKE HOSE AND BRAKE FLUID) Inspect every 6 000 km (4 000 miles, 6 months). Replace hoses every 4 years. Replace fluid every 2 years.

BRAKE FLUID LEVEL CHECK

- Keep the motorcycle upright and place the handlebars
- Check the brake fluid level relative to the lower limit lines on the front and rear brake fluid reservoirs.
- When the level is below the lower limit line, replenish with brake fluid that meets the following specification.



Specification and Classification: DOT 4

▲ WARNING

- * The brake system of this motorcycle is filled with a glycol-based brake fluid. Do not use or mix different types of fluid such as silicone-based and petroleum-based fluids. Do not use any brake fluid taken from old, used or unsealed containers. Never re-use brake fluid left over from the last servicing or stored for a long period of time.
- * Brake fluid, if it leaks, will interfere with safe running and immediately discolor painted surfaces. Check the brake hoses and hose joints for cracks and fluid leakage before riding.

BRAKE PADS

Front brake


• The extent of brake pad wear can be checked by observing the grooved limit line (A) on the pad. When the wear exceeds the grooved limit line, replace the pads with new ones. (28-56)

CAUTION


- * Replace the brake pads as a set, otherwise braking performance will be adversely affected.
- * In replacing the pad, clean the piston. When reusing the pad, also clean the pad and attach a new tape on it.


NOTE:

Before installation, degrease and clean the contact portions of pad and piston.

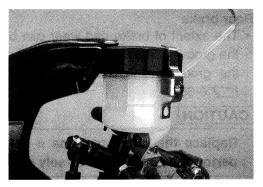



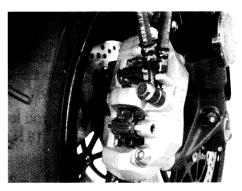


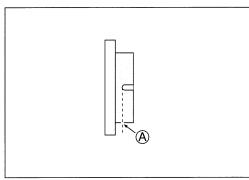


• The extent of brake pad wear can be checked by observing the grooved limit line (A) on the pad. When the wear exceeds the grooved limit line, replace the pads with new ones. ((3)8-65)

CAUTION

Replace the brake pads as a set, otherwise braking performance will be adversely affected.

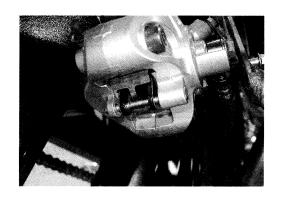

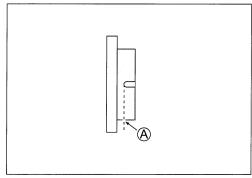


BRAKE PEDAL HEIGHT

- Loosen the lock-nut 1.
- Turn the push rod ② until the brake pedal is 60 70 mm (2.4 2.8 in) A below the top of the footrest.
- Tighten the lock-nut ① securely.
- Rear brake master cylinder rod lock-nut:

18 N·m (1.8 kgf-m, 13.0 lb-ft)

PAYA Brake pedal height A:

Standard: 60 - 70 mm (2.4 - 2.8 in)

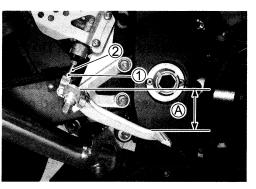

BRAKE LIGHT SWITCH

 Adjust the rear brake light switch so that the brake light will come on just before pressure is felt when the brake pedal is depressed.





AIR BLEEDING FROM BRAKE FLUID CIRCUIT

Air trapped in the brake fluid circuit acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus interferes with the full braking performance of the brake caliper. The presence of air is indicated by "sponginess" of the brake lever and also by lack of braking force. Considering the danger to which such trapped air exposes the machine and rider, it is essential that after remounting the brake and restoring the brake system to the normal condition, the brake fluid circuit be purged of air in the following manner:

 
FRONT BRAKE

- Fill the master cylinder reservoir to the top of the inspection window. Replace the reservoir cap to prevent dirt from entering.
- Attach a hose to the air bleeder valve and insert the free end of the hose into a receptacle.
- Squeeze and release the brake lever several times in rapid succession and squeeze the lever fully without releasing it. Loosen the air bleeder valve by turning it a quarter of a turn so that the brake fluid runs into the receptacle. This will remove the tension of the brake lever causing it to touch the handle-bar grip. Then, close the air bleeder valve, pump and squeeze the lever, and open the valve. Repeat this process until fluid flowing into the receptacle no longer contains air bubbles.

NOTE:


While bleeding the brake system, replenish the brake fluid in the reservoir as necessary. Make sure that there is always some fluid visible in the reservoir.

• Close the air bleeder valve and disconnect the hose. Fill the reservoir with brake fluid to the top of the inspection window.



CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials, etc.

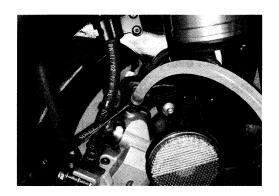

REAR BRAKE

 Bleed air from the rear brake system in the same manner as front brake.

NOTE:

 
The only of between operation from bleeding the front brake is that the rear master cylinder is actuated by a pedal.

TIRES

Inspect every 6 000 km (4 000 miles, 6 months).

TIRE TREAD CONDITION

Operating the motorcycle with excessively worn tires will decrease riding stability and consequently invite a dangerous situation. It is highly recommended to replace a tire when the remaining depth of tire tread reaches the following specification.



DATA Tire tread depth:

Service Limit: FRONT 1.6 mm (0.06 in)

REAR 2.0 mm (0.08 in)

TIRE PRESSURE

If the tire pressure is too high or too low, steering will be adversely affected and tire wear will increase. Therefore, maintain the correct tire pressure for good roadability and a longer tire life. Cold inflation tire pressure is as follows.

DATA Cold inflation tire pressure

Solo riding: Front: 250 kPa (2.50 kgf/cm², 36 psi)

Rear: 290 kPa (2.90 kgf/cm², 42 psi)

Dual riding: Front: 250 kPa (2.50 kgf/cm², 36 psi)


Rear: 290 kPa (2.90 kgf/cm², 42 psi)


CAUTION

The standard tire fitted on this motorcycle is 120/70 ZR17 M/C (58 W) for the front and 190/50 ZR17 M/C (73 W) for the rear. The use of tires other than those specified may cause instability. It is highly recommended to use the specified tires.

DATA TIRE TYPE

BRIDGESTONE (Front: BTO11F F, Rear: BTO12R F)

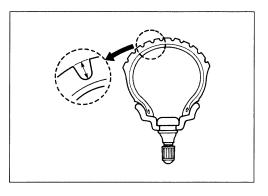


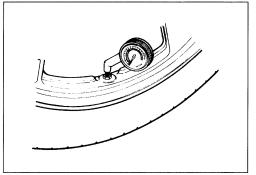

STEERING

Inspect initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months) thereafter.


The steering should be adjusted properly for smooth turning of the handlebars and safe operation. Overtight steering prevents smooth turning of the handlebars and too loose steering will cause poor stability. Check that there is no play in the front fork. Support the motorcycle so that the front wheel is off the ground. With the wheel facing straight ahead, grasp the lower fork tubes near the axle and pull forward. If play is found, readjust the steering. (8-27)

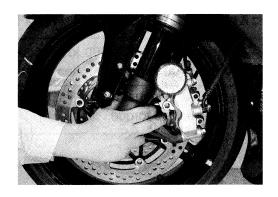

FRONT FORK

Inspect every 12 000 km (7 500 miles, 12 months).

Inspect the front forks for oil leakage, scoring or scratches on the outer surface of the inner tubes. Replace any defective parts, if necessary. (\$\sumsymbol{17} 8-14)

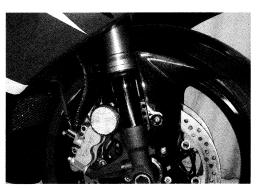

REAR SUSPENSION

Inspect every 12 000 km (7 500 miles, 12 months).


Inspect the rear shock absorbers for oil leakage and check that there is no play in the swingarm. Replace any defective parts if necessary. (38-45)



EXHAUST PIPE BOLT AND NUT

Tighten initially at 1 000 km (600 miles, 1 month) and every 12 000 km (7 500 miles, 12 months) thereafter.

• Tighten the exhaust pipe bolts, muffler mounting bolt and nut to the specified torque.

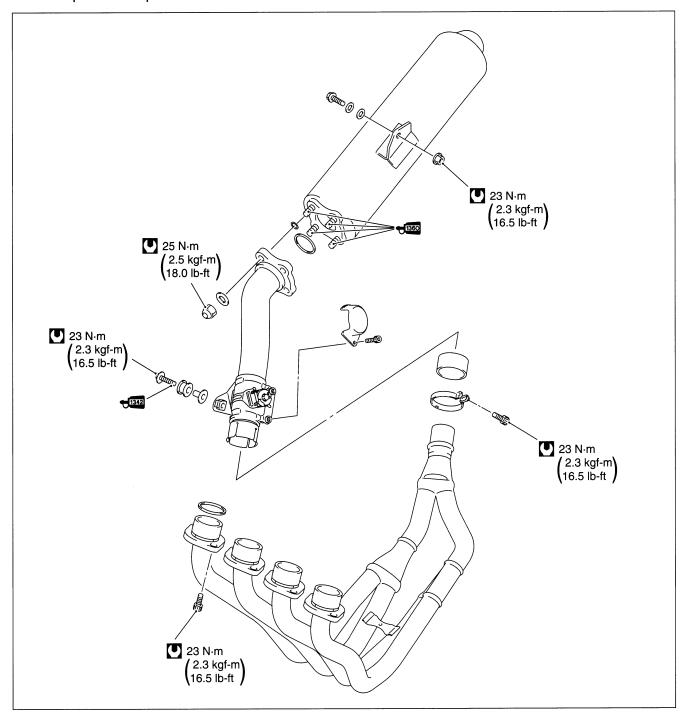



CHASSIS BOLTS AND NUTS


Tighten initially at 1 000 km (600 miles, 1 month) and every 6 000 km (4 000 miles, 6 months) thereafter.


Check that all chassis bolts and nuts are tightened to their specified torque. (Refer to page 2-32 for the locations of the following nuts and bolts on the motorcycle.)


Item	N⋅m	kgf-m	lb-ft
① Steering stem head nut	90	9.0	6.5
② Steering stem lock-nut	80	8.0	58.0
3 Front fork upper clamp bolt	23	2.3	16.5
4 Front fork lower clamp bolt	23	2.3	16.5
⑤ Front fork cap bolt	23	2.3	16.5
6 Front axle	100	10.0	72.5
	23	2.3	16.5
Handlebar clamp bolt	23	2.3	16.5
Front brake master cylinder mounting bolt	10	1.0	7.0
10 Front brake caliper mounting bolt	39	3.9	28.0
front brake caliper housing bolt	22	2.2	16.0
② Brake hose union bolt (Front & Rear)	23	2.3	16.5
③ Caliper air bleeder valve (Front & Rear)	8	0.8	6.0
4 Brake disc bolt (Front)	23	2.3	16.5
⑤ Brake disc bolt (Rear)	35	3.5	25.5
® Rear brake caliper mounting bolt	25	2.5	18.0
Rear brake caliper housing bolt	37	3.7	27.0
® Rear brake master cylinder mounting bolt	10	1.0	7.0
Rear brake master cylinder rod lock nut	18	1.8	13.0
② Front footrest bracket mounting bolt	23	2.3	16.5
② Swingarm pivot nut	100	10.0	72.5
② Swingarm pivot lock nut	90	9.0	65.0
② Rear suspension height adjuster nut	115	11.5	83.0
Rear shock absorber mounting bolt/nut (Upper & Lower)	50	5.0	36.0
② Rear cushion lever/rod mounting nut	78	7.8	56.5
26 Rear axle nut	100	10.0	72.5
② Rear sprocket nut	60	6.0	43.5
Steering damper bolt/nut	23	2.3	16.5

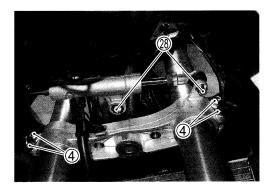


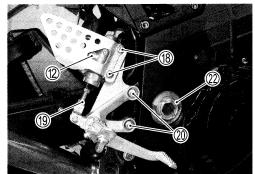


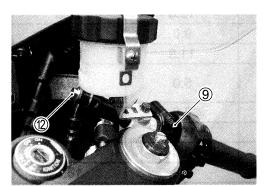


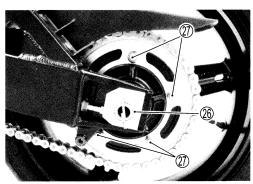

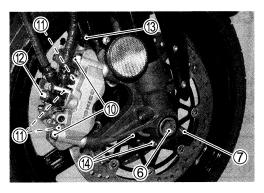

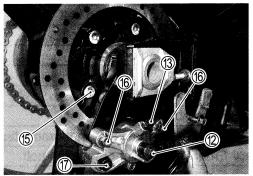

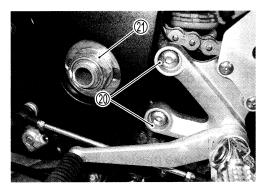

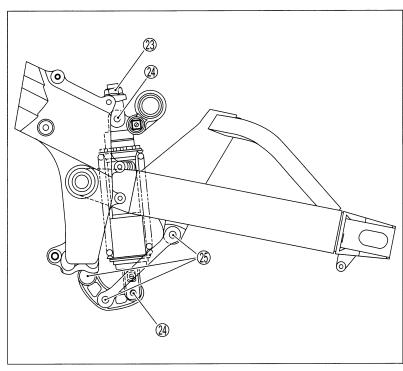

COMPRESSION PRESSURE CHECK

The compression pressure reading of a cylinder is a good indicator of its internal condition.

The decision to overhaul the cylinder is often based on the results of a compression test. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

COMPRESSION PRESSURE SPECIFICATION

Standard	Limit	Difference
1300 – 1700 kPa	1000 kPa	200 kPa
/13 - 17 kgf/cm ²	/10 kgf/cm ²	/ 2 kgf/cm ² \
185 – 242 psi <i>]</i>	148 psi /	28 psi /

Low compression pressure can indicate any of the following conditions:

- Excessively worn cylinder walls
- * Worn piston or piston rings
- * Piston rings stuck in grooves
- * Poor valve seating
- * Ruptured or otherwise defective cylinder head gasket

Overhaul the engine in the following cases:

- * Compression pressure in one of the cylinders is 1 000 kPa (10 kgf/cm², 148 psi) and less.
- * The difference in compression pressure between any two cylinders is 200 kPa (2 kgf/cm², 28 psi) and more.
- * All compression pressure readings are below 1 300 kPa (13 kgf/cm², 185 psi) even when they measure 1 000 kPa (10 kgf/cm², 148 psi) and more.

COMPRESSION TEST PROCEDURE

NOTE:


- * Before testing the engine for compression pressure, make sure that the cylinder head nuts are tightened to the specified torque values and the valves are properly adjusted.
- * Have the engine warmed up before testing.
- * Make sure that the battery is fully-charged.


Remove the related parts and test the compression pressure in the following manner.

- Lift and support the fuel tank. (5-5)
- Remove all the spark plugs. (2-6)
- Install the compression gauge and adaptor in the spark plug hole. Make sure that the connection is tight.
- Keep the throttle grip in the fully opened position.
- · Press the starter button and crank the engine for a few seconds. Record the maximum gauge reading as the cylinder compression.
- Repeat this procedure with the other cylinders.

1001 09915-64512: Compression gauge set

09913-10750: Adaptor

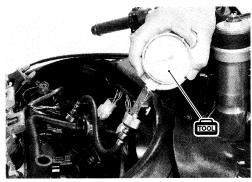

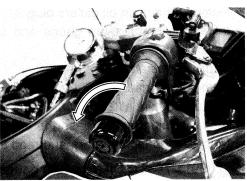

OIL PRESSURE CHECK

Check the engine oil pressure periodically. This will give a good indication of the condition of the moving parts.

OIL PRESSURE SPECIFICATION

 $100 - 400 \text{ kPa} (1.0 - 4.0 \text{ kgf/cm}^2, 14 - 57 \text{ psi})$ at 3 000 r/min., Oil temp. at 60 °C (140 °F)

If the oil pressure is lower or higher than the specification, the following causes may be considered.

LOW OIL PRESSURE

- * Clogged oil filter
- * Oil leakage from the oil passage
- * Damaged O-ring
- * Defective oil pump
- * Combination of the above items

HIGH OIL PRESSURE

- * Engine oil viscosity is too high
- * Clogged oil passage
- * Combination of the above items

OIL PRESSURE TEST PROCEDURE

Start the engine and check if the oil pressure indicator light is turned on. If the light stays on, check the oil pressure indicator light circuit. If the circuit is OK, check the oil pressure in the following manner.

- Remove the main oil gallery plug 1.
- Install the oil pressure gauge and adaptor into the main oil gallery.
- Warm up the engine as follows:

Summer: 10 min. at 2 000 r/min.

Winter: 20 min. at 2 000 r/min.


 After warming up, increase the engine speed to 3 000 r/min. (observe the tachometer), and read the oil pressure gauge.


09915-74521: Oil pressure gauge hose

09915-74540: Oil pressure gauge attachment

09915-77331: Meter (for high pressure)

Oil gallery plug (M16): 35 N·m (3.5 kgf-m, 25.5 lb-ft)

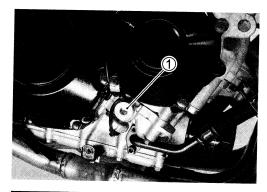

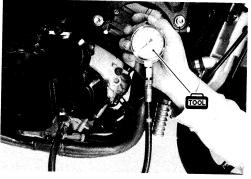

ENGINE

CONTENTS	
ENGINE COMPONENTS REMOVABLE WITH ENGINE IN PLACE	3- <i>2</i>
ENGINE REMOVAL AND INSTALLATION	3- <i>3</i>
ENGINE REMOVAL	3- <i>3</i>
ENGINE INSTALLATION	
ENGINE DISASSEMBLY	3-1 <i>5</i>
ENGINE COMPONENTS INSPECTION AND SERVICE	
CYLINDER HEAD COVER	3- <i>28</i>
PAIR CONTROL VALVE	
CAMSHAFT	
CAM CHAIN TENSION ADJUSTER	3-31
CAM CHAIN TENSIONER	3- <i>32</i>
CAM CHAIN GUIDE	3- <i>32</i>
CYLINDER HEAD AND VALVE	3- <i>32</i>
CLUTCH	3-4 <i>3</i>
OIL PUMP	3-44
STARTER CLUTCH	
GENERATOR	
WATER PUMP	
GEARSHIFT SYSTEM	
OIL PRESSURE REGULATOR	3 -46
OIL STRAINER	
TRANSMISSION	
CYLINDER	
PISTON AND PISTON RING	
CRANKCASE	
BALANCER SHAFT	
BALANCER SHAFT JOURNAL BEARING	
CRANKSHAFT AND CONROD	
CRANKSHAFT JOURNAL BEARING	
CRANKSHAFT THRUST BEARING	
ENGINE REASSEMBLY	<i>3-72</i>

ENGINE COMPONENTS REMOVABLE WITH ENGINE IN PLACE

The parts listed below can be removed and reinstalled without removing the engine from the frame. Refer to page listed in each section for removal and reinstallation instructions.

ENGINE CENTER

ITEM	REMOVAL	INSPECTION	REINSTALLATION
PAIR valve	□ 3-28	∷₹3-28	∷ ₹3-28
Starter motor	∷ ₹3-15	∷ ₹9-13	∷ ₹3-104
Breather cover	∷₹3-24		∷ ₹3-83
Thermostat	∷ ₹3-17	∷ ₹7-10	<u></u> 7-10
Cylinder head cover	∷ ₹3-15		∷ ₹3-103
Camshaft	∷ ₹3-16	∷₹3-29	∷ ₹3-98
Intake pipe			∑₹3-42
Oil filter	∷ ₹3-24		∑₹3-83
Oil cooler	∷ ₹3-4		∑₹7-19
Oil pan	∷ ₹3-24		∑₹3-82

ENGINE RIGHT SIDE

ITEM	REMOVAL	INSPECTION	REINSTALLATION
Exhaust pipe and muffler	∷ ₹3-5		∷ ₹3-14
Cam chain tension adjuster	≌3-16	∷ ₹3-31	∷ ₹3-101
Clutch cover	∷ ₹3-18		₩3-95
Clutch (plates)	∷ ₹3-18	₩3-43	∷ ₹3-92
Primary driven gear	∷ ₹3-19		∷₹3-92
Oil pump	□ 3-20	∑ 3-44	∷ ₹3-91
Gearshift shaft	□ 3-20	∷ ₹3-45	∷ ₹3-91
Starter idle gear cover	[2] 3-21		∷ ₹3-89
Starter idle gear	∷ ₹3-21		∷ ₹3-88
Starter clutch cover	∑₹3-21		∷ ₹3-89
Starter clutch	∑₹3-22	₩3-44	∷ ₹3-87
CKP sensor	∑₹3-22	∑ 74-28	₩3-86
Oil pump driven gear	∑₹3-20		∷ ₹3-91
Cam chain tensioner	∷ ₹3-22	∷ ₹3-32	∷ ₹3-87
Cam chain guide	∑₹3-22	∷ ₹3-32	∷ ₹3-87

ENGINE LEFT SIDE

ITEM	REMOVAL	INSPECTION	REINSTALLATION
Engine sprocket	∷ ₹3-8		∷ ₹3-13
Gear position switch	∷ ₹3-24	∑ 74-50	₩3-84
Generator (cover)	∷ ₹3-23	∑ ₹3-44	₩3-86
Generator rotor	₩3-23		₩3-85
Water pump	₩3-23	₩7-14	₩3-85

 
Before taking the engine out of the frame, wash the engine using a steam cleaner. Engine removal is sequentially explained in the following steps. Reinstall the engine by reversing the removal procedure.


- Remove the under cowlings. (\$\sumsymbol{2}\$ 8-3)
- Remove the front and rear seats (seat tail cover). (8-6)
- Lift and support the fuel tank with the prop stay. (5-5)


Disconnect the battery


 — lead wire.

• Drain engine oil. (2-13)



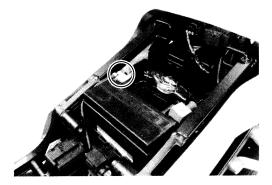

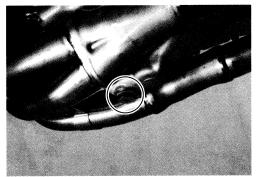

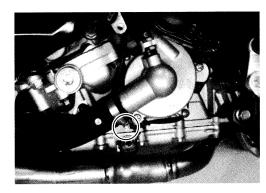

• Remove the air cleaner box. (5-15)

• Remove the throttle body. (5-16)





• Remove the oil cooler pipes.


• Remove the oil cooler.


RADIATOR


• Disconnect the reservoir inlet hoses.

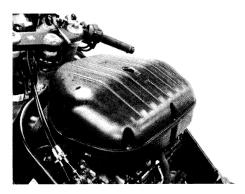

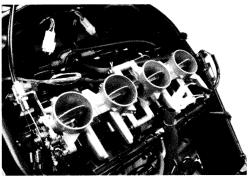

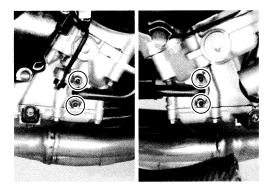

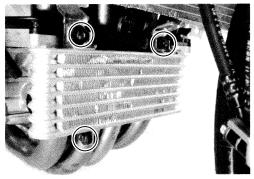

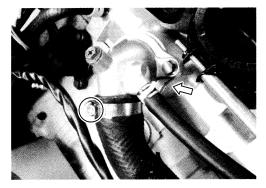



- 1
- Disconnect the cooling fan thermo-switch coupler ②.
- Remove the radiator mounting bolts.
- Remove the radiator.


CAUTION

Be careful not to bent the radiator fin.



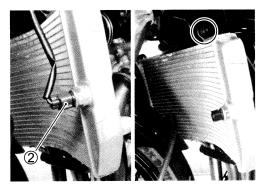


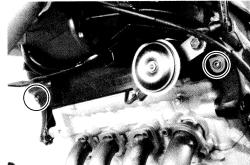

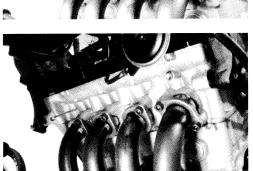


EXHAUST PIPE AND MUFFLER

 • Remove the exhaust pipe bolts.






• Remove the radiator mounting bracket ① and the oil cooler mounting bracket ②.

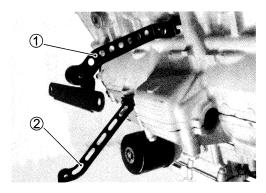


ELECTRIC PARTS


• Disconnect the oil pressure switch lead wire ① and remove it from the clamps.

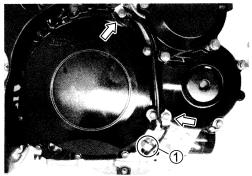


- Disconnect the starter motor lead wire 2.
- Disconnect the ground lead wire 3.

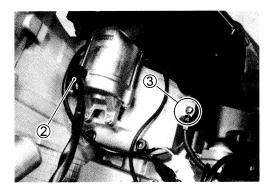

- Disconnect the crankshaft position sensor coupler 4.
- Disconnect the gear position switch coupler ⑤.
- Disconnect the ECT sensor coupler 6.

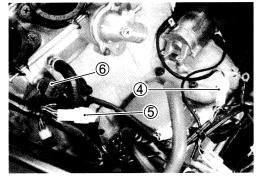


• Disconnect the generator coupler ⑦.

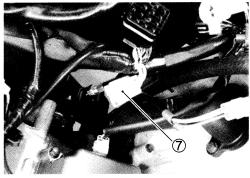

CAUTION

 Do not remove the ignition coil/plug cap before disconnecting its coupler.



CAUTION


- * Do not pry up the ignition coil/plug cap with a screw driver or a bar to avoid its damage.
- * Be careful not to drop the ignition coil/plug cap to prevent its short or open circuit.


ENGINE SPROCKET AND GEAR SHIFT LEVER


- Remove the gearshift lever.
- Remove the engine sprocket cover.

• Remove the clutch push rod ①.


- Remove the speed sensor rotor ②.
- Remove the engine sprocket nut and the washer.

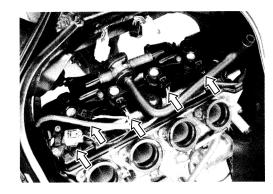

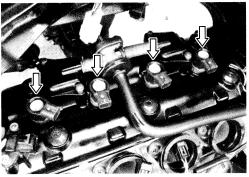

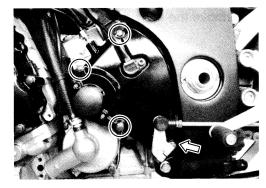




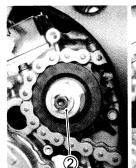





- Remove the cotter pin. (For E-03, 28, 33)
- Loosen the rear axle nut 3.
- Loosen the left and right chain adjusters 4.

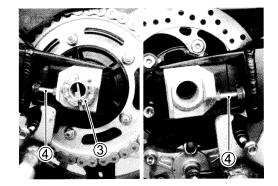

- Push the rear wheel forward and make sure that the drive chain has enough slack.
- Disengage the drive chain from the rear sprocket.

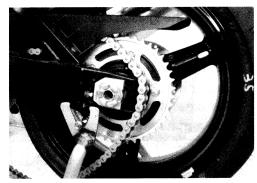

• Remove the engine sprocket ⑤.

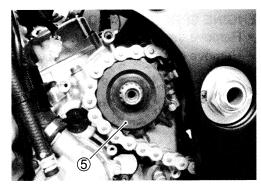


ENGINE MOUNTING


• Support the engine using an engine jack.



• Remove the engine mounting bolts (A) and (C).

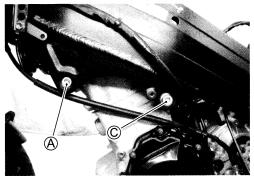



- Loosen the engine mounting pinch bolts ① and ②.
- Remove the engine mounting bolts B and D.

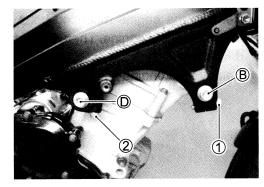


- Remove the engine mounting nut ⑤.
- Remove the engine mounting thrust adjuster lock-nut ⑦ with the special tool.
- Loosen the engine mounting thrust adjuster 6 fully.

09940-14990: Engine mounting thrust adjuster socket wrench

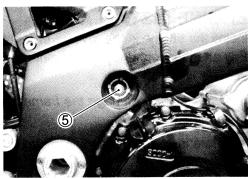

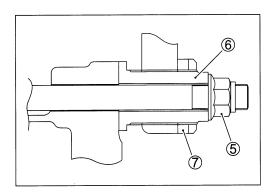

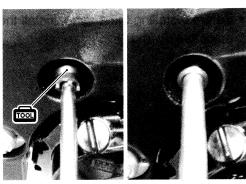



- Remove the engine mounting nut 8.
- Loosen the engine mounting thrust adjuster lock-nut 100 with the special tool.
- Loosen the engine mounting thrust adjuster 9.


09940-14990: Engine mounting thrust adjuster socket wrench

NOTE:

Do not remove the engine mounting bolts at this stage.

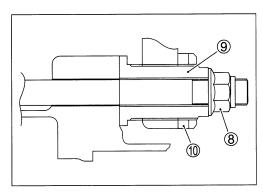

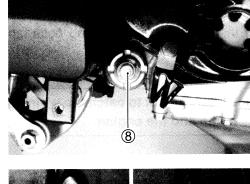

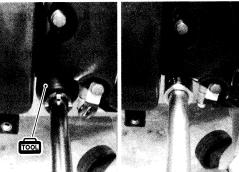

- · Remove the engine mounting bolts and gradually lower the front side of the engine. Then, take off the drive chain from the driveshaft.
- · Remove the engine assembly.


ENGINE INSTALLATION


Install the engine in the reverse order of engine removal. Pay attention to the following points:

NOTE:

Be careful not to damage the frame and engine when installing the engine.

- Before installing the engine, install the spacer ①.
- Before installing the engine, install the engine mounting thrust adjusters 2 and 3.

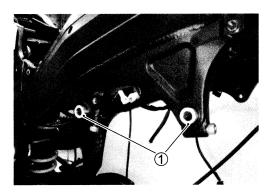

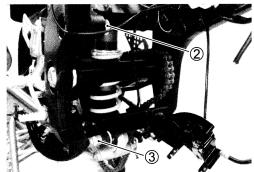

- · Gradually raise the rear side of the engine assembly, and then put the drive chain on the driveshaft.
- Install all engine mounting bolts, spacers and tighten them temporarily. (3-12)


CAUTION


Be careful not to catch the wiring harness between the frame and the engine.

- Tighten the engine mounting thrust adjusters to the specified torque.
- Tighten the engine mounting thrust adjuster lock-nuts to the specified torque with the special tool.

Engine mounting thrust adjuster lock-nut:

45 N·m (4.5 kgf-m, 32.5 lb-ft)

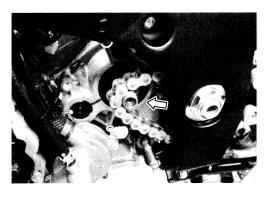

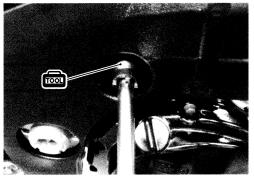



• Tighten all engine mounting bolts and nuts to the specified torque. (3-12)

NOTE:

The engine mounting nuts are self-locking. Once the nuts have been removed, they are no longer of any use.

• Tighten the engine mounting pinch bolt to the specified torque. (3-12)

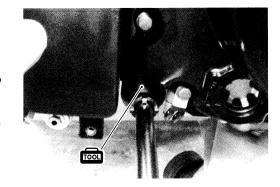

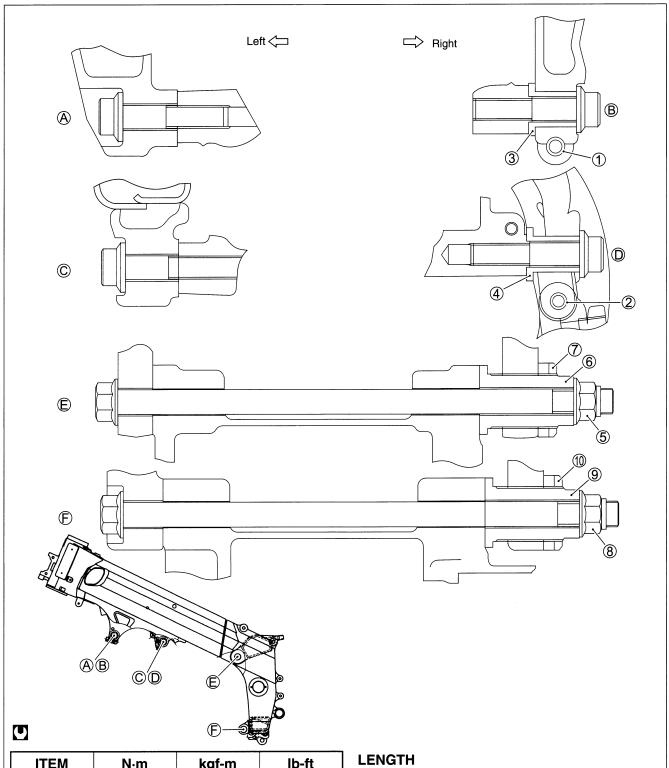


ITEM	N∙m	kgf-m	lb-ft
ABCD	55	5.5	39.8
58	75	7.5	54.0
12	23	2.3	16.5
69	23	2.3	16.5
710	45	4.5	32.5


ITEM		mm	in
Bolt	A C	45	1.77
	B D	55	2.17
	₽£	215	8.46
Spacer	34	30.5	1.20
Adjuster	69	40	1.57

- Install the engine sprocket and the washer.
- Apply a small quantity of THREAD LOCK to the drive shaft thread portion.


+1342 99000-32050: THREAD LOCK "1342"


- Tighten the engine sprocket nut ① to the specified torque.
- Engine sprocket nut: 115 N·m (11.5 kgf-m, 83.2 lb-ft)
- Install the speed sensor rotor.
- Tighten the speed sensor rotor bolt to the specified torque.
- Speed sensor rotor bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

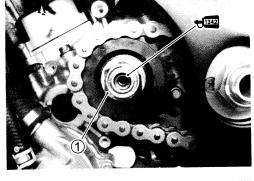


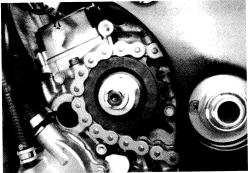


- Apply SUZUKI SUPER GREASE to the clutch push rod and install it.
- 99000-25030: SUZUKI SUPER GREASE "A" (USA)
 99000-25010: SUZUKI SUPER GREASE "A" (Others)
- Align the hole of the clutch release cylinder with the end of the clutch push rod when installing the engine sprocket cover.
- \bullet Tighten the speed sensor bolt $\ensuremath{\textcircled{2}}$ to the specified torque.
- Speed sensor bolt: 4.5 N·m (0.45 kgf-m, 3.0 lb-ft)

 

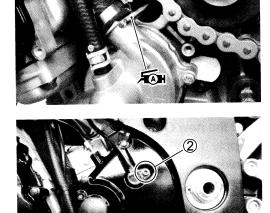

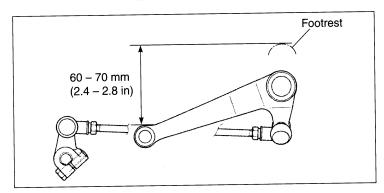

Install the radiator mounting bracket ① and oil cooler bracket
 ②.

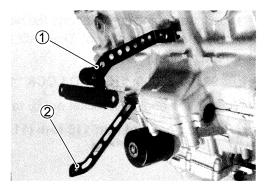

• Install the exhaust pipe.


CAUTION

Replace the gaskets with new ones.

Exhaust pipe bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)




Muffler connecting bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

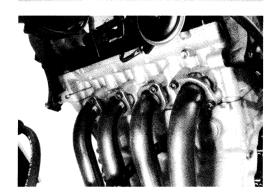

- Fit the new O-ring ③.
- Apply THREAD LOCK to the bolts, install the oil cooler pipe union.

♥342 99000-32050: THREAD LOCK "1342"

Oil cooler union bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

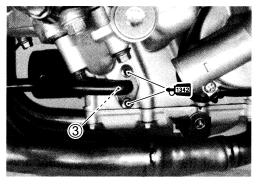

- Perform service and adjustment in the following items.
- * Engine oil (2-14)
- * Engine coolant (2-19)
- * Throttle cable play (2-17)
- * Clutch (2-18)
- * Idling adjustment (2-15)
- * Throttle valve synchronization (5-25)
- * Drive chain slack (2-22)
- * Wiring harness, cables and hoses (10-14)

ENGINE DISASSEMBLY


CAUTION

Identify the position of each removed part. Organize the parts in their respective groups (e.g., intake, exhaust) so that they can be reinstalled in their original positions.

• Remove the spark plugs. (2-6)

STARTER MOTOR

· Remove the starter motor.

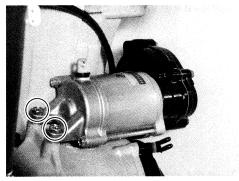


PAIR CONTROL VALVE

• Remove the PAIR control valve ①.




CYLINDER HEAD COVER

• Remove the cylinder head cover and its gaskets.

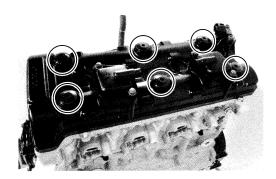


• Remove the dowel pins and O-rings.

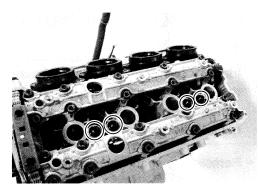



CAMSHAFTS

• Remove the valve timing inspection cap ①.

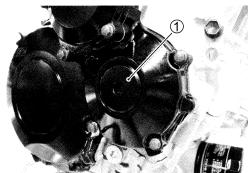


• Turn the crankshaft to bring the line (A) on the starter clutch to the index mark (B) of the valve timing inspection hole and also to bring the cams to the position as shown.

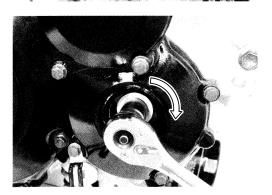

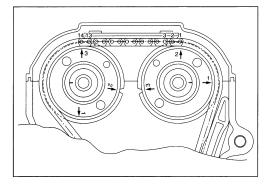



- Remove the cam chain tension adjuster cap bolt ②.
- Remove the cam chain tension adjuster with the spring and ball.

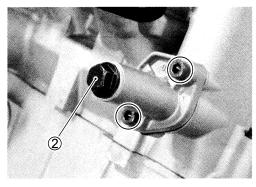



- Remove the cam chain guide ③.
- Remove the intake camshaft journal holder ④.
- Remove the exhaust camshaft journal holder ⑤.
- Remove the dowel pins.

CAUTION

Be sure to loosen the camshaft journal holder bolts evenly by shifting the wrench diagonally.

- Remove the intake camshaft 6.
- Remove the exhaust camshaft 7.

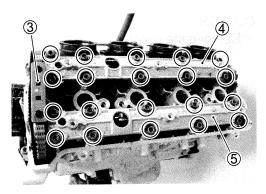

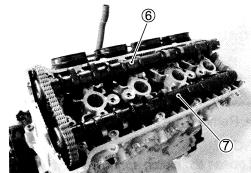

CYLINDER HEAD


- Remove the water hose 1.
- Remove the thermostat cover ② and thermostat.


THERMOSTAT INSPECTION (77-10)

 
• Remove the ECT sensor ③.

ECT SENSOR INSPECTION (7-8)

• Remove the cylinder head bolts (M6) ④.

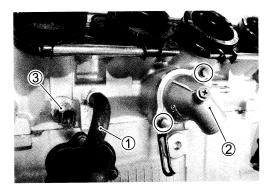

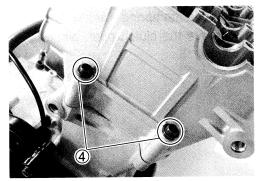




NOTE:

When loosening the cylinder head bolts, loosen each bolt little by little diagonally.

• Remove the cylinder head.

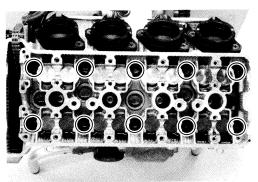

CLUTCH

· Remove the clutch cover.

• Hold the clutch housing with the special tool.

CAUTION

Do not damage the clutch plates by the special tool.


09920-53740: Clutch sleeve hub holder


• Remove the clutch springs.

NOTE:


Loosen the clutch spring set bolts little by little and diagonally.

• Remove the pressure plate and clutch drive plates and driven plates.

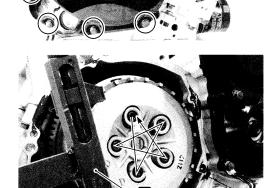

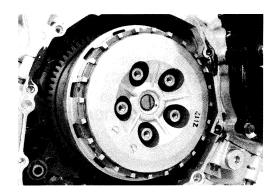


- Remove the spring washer ① and washer ②.
- Remove the clutch push piece ③, bearing ④ and the thrust washer ⑤.

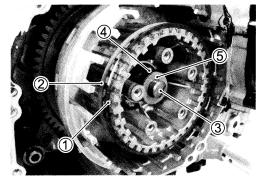

• Remove the clutch push rod 6.

NOTE:

If it is difficult to pull out the push rod ⑥, use a magnetic hand or a wire.

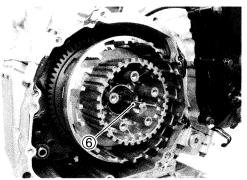


• Unlock the clutch sleeve hub nut.




• Hold the clutch sleeve hub with the special tool.

09920-53740: Clutch sleeve hub holder

• Remove the clutch sleeve hub nut.

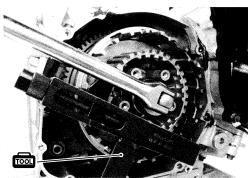


• Remove the concaved washer ④, washer ⑤, clutch sleeve hub ⑥ and washer ⑦.

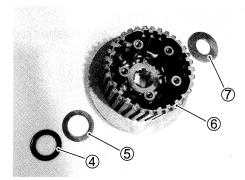


- Remove the spacer ® and bearing 9.
- Remove the primary driven gear assembly 10.

NOTE:

If it is difficult to remove the primary driven gear, rotate the crankshaft.

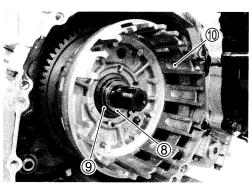

- Remove the oil pump drive gear ① from the primary driven gear assembly ②.
- Remove the thrust washer ③.

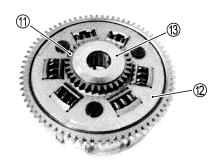


OIL PUMP


- Remove the snap ring 1.
- Remove the oil pump driven gear ②.

NOTE:

Do not drop the circlip 1, the pin 3 and the washer 4 into the crankcase.


- Remove the pin 3 and the washer 4.
- Remove the oil pump ⑤.

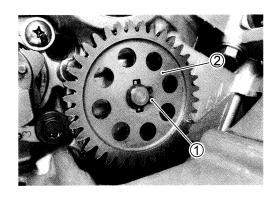

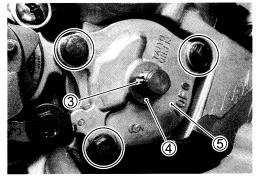


GEAR SHIFT SYSTEM

• With the snap ring ① and washer removed, remove the gearshift shaft assembly ②.

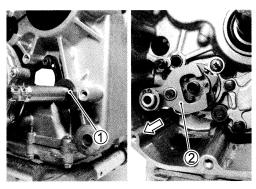


- Remove the gearshift cam plate bolt ③ and gearshift cam plate ④.
- Remove the gearshift cam stopper ⑤.

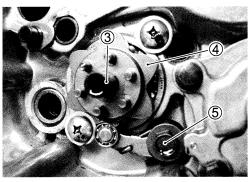


STARTER IDLE GEAR


- Remove the starter idle gear cover.
- Remove the dowel pins and gasket.

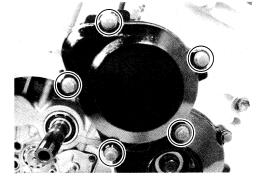


• Remove the shaft ①, washer ②, starter idle gear No.1 ③, concaved washer, bearing and washer.

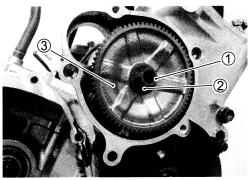

- Remove the starter clutch cover and clamp.
- Remove the dowel pins and gasket.

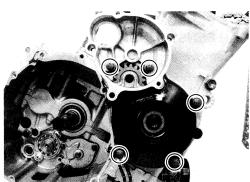

• Remove the wave washer ④, the starter idle gear No.2, ⑤ and its shaft ⑥.

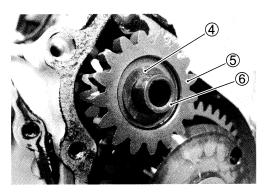

STARTER CLUTCH


• Hold the starter clutch with the special tool.


09920-34830: Starter clutch holder

- Remove the starter clutch bolt and washer.
- Remove the starter clutch assembly and washer.

CAM CHAIN, CAM CHAIN TENSIONER, CAM CHAIN GUIDE


- Remove the cam chain tensioner ① and cam chain guide ②.
- Remove the cam chain ③ and cam chain drive sprocket ④.

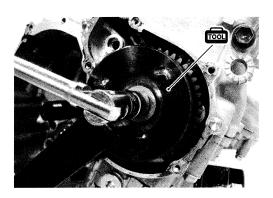

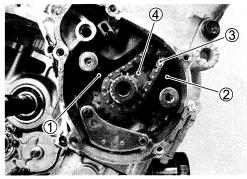


CKP SENSOR CKP SENSOR INSPECTION (74-28)

• Remove the CKP sensor ①.

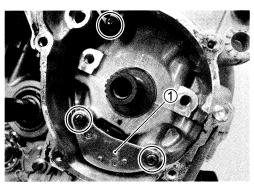

GENERATOR COVER

• Remove the generator cover.

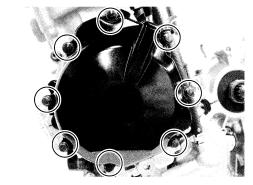


GENERATOR ROTOR

• Hold the generator rotor with the special tool.

09930-44520: Rotor holder

• Remove the generator rotor bolt.

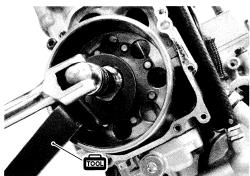


• Install a bolt (A) of suitable size to the left end of crankshaft.


SUITABLE BOLT (A) [M12, length: 28 – 38 mm]


• Remove the generator rotor with the special tool.

100 09930-34980: Rotor remover

 
WATER PUMP

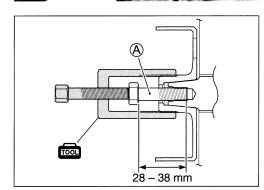

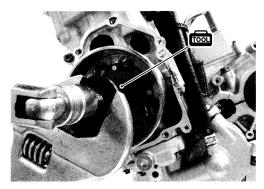




WATER PUMP SERVICING (7-11)

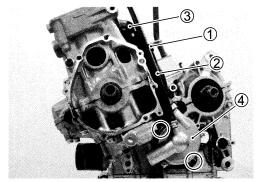



GEAR POSITION SWITCH

• Remove the gear position switch ①.

• Remove the switch contacts ② and springs ③.

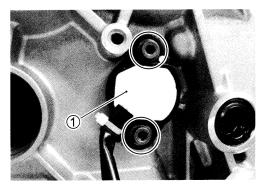

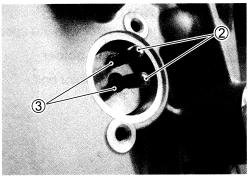

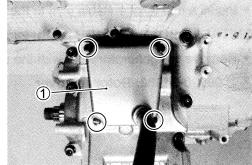


OIL FILTER

BREATHER COVER

• Remove the breather cover ①.


• Remove the oil filter with the special tool. (2-14)

09915-40610: Oil filter wrench

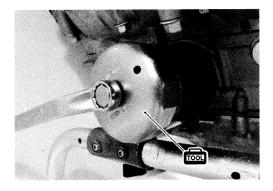

OIL PAN

• Remove the oil pan ①.

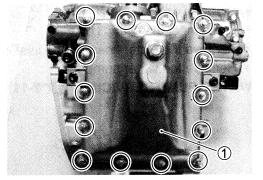

OIL PRESSURE REGULATOR

• Remove the oil pressure regulator ①.

OIL PRESSURE SWITCH

 
• Remove the oil pressure switch ②.

OIL STRAINER

• Remove the oil strainer ③ and O-ring.

LOWER CRANK CASE


• Remove the lower crankcase bolts (6 mm).





• Remove the lower crankcase assembly.


TRANSMISSION

• Remove the transmission and O-rings.

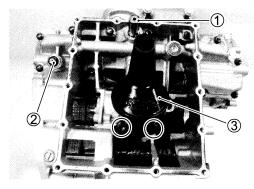

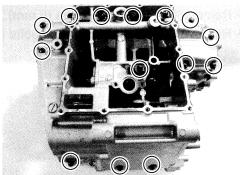

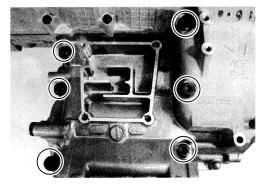

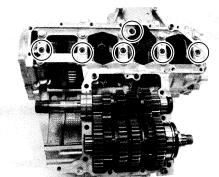


MIDDLE CRANKCASE


• Remove the crankcase bolts.

NOTE:

Loosen the crankcase bolts diagonally with the smaller sizes

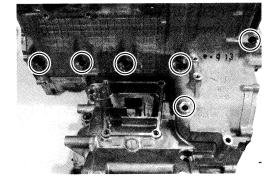


- Remove the crankcase bolts (8 mm).
- Remove the crankshaft journal bolts (9 mm).

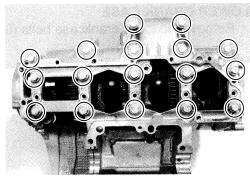


BALANCER SHAFT

• Remove the balancer shaft 1.

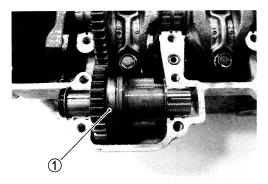

CRANKSHAFT

- Loosen the bearing cap bolts by using 12 mm, 12 point socket wrench, and tap the bearing cap bolt lightly with plastic hammer to remove the bearing cap.
- Remove the O-ring ①.
- Remove the crankshaft and thrust washers 2.

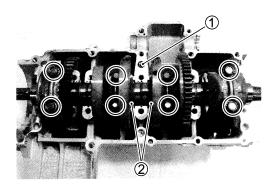



PISTON AND CONROD

• Push the conrod upward and remove the piston and conrod from the upper crankcase.

CAUTION

Be careful not to damage the cylinder wall by the con-

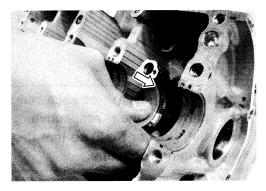


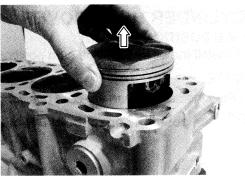

- Remove the piston pin circlip.
- Separate the piston and conrod by driving out the piston pin.

NOTE:

Scribe the cylinder number on the head of the piston.

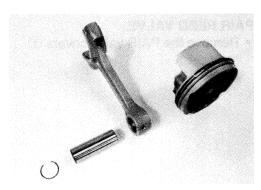

ENGINE COMPONENTS INSPECTION AND SERVICE

CAUTION

Identify the position of each removed part. Organize the parts in their respective groups (i.e., intake, exhaust, No.1 or No.2) so that they can be installed in their original locations.


CYLINDER HEAD COVER

CAM POSITION SENSOR

• Install the oil seal ① and cam position sensor ②.


When installing, clean the cam position sensor's face.

Cam position sensor bolt: 8 N·m (0.8 kgf-m, 5.8 lb-ft)

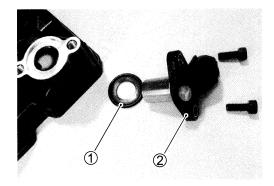

PAIR REED VALVE

• Remove the PAIR valve covers 1.

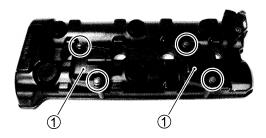

- Inspect the reed valve for the carbon deposit.
- If the carbon deposit is found in the reed valve, replace the PAIR control valve with a new one.




- Install the PAIR valves and PAIR valve covers.
- Apply THREAD LOCK to the bolts and tighten to the specified torque.

+1342 99000-32050: THREAD LOCK "1342"


PAIR reed valve bolt: 10 N·m

(1.0 kgf-m, 7.0 lb-ft)

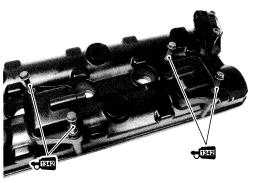

PAIR CONTROL VALVE

- Inspect that air flows through the PAIR control valve air inlet port to the air outlet ports.
- If air does not flow out, replace the PAIR valve with a new

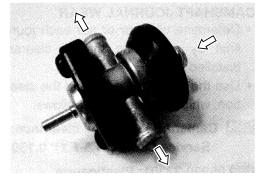

- · Connect the vacuum pump gauge to the vacuum port of the control valve as shown in the photograph.
- · Apply negative pressure of the specification slowly to the control valve and inspect the air flow.
- If air does not flow out, the control valve is in normal condition.
- If the control valve does not function within the specification, replace the control valve with a new one.

Negative pressure range: More than 66.6 kPa (491 mmHg)

100 09917-47010: Vacuum pump gauge



Use a hand operated vacuum pump to prevent the control valve damage.

CAMSHAFT

CAMSHAFT IDENTIFICATION

The exhaust camshaft can be distinguished from that of the intake by the embossed letters "EX" (for exhaust) as against letters "IN" (for intake).



CAM WEAR


- Check the camshaft for wear or damage.
- Measure the cam height Θ with a micrometer.


DATA Cam height H:

Service Limit: (IN.): 36.71 mm (1.445 in)

(EX.): 35.68 mm (1.405 in)

09900-20202: Micrometer (25 – 50 mm)

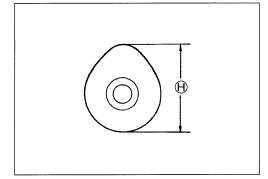

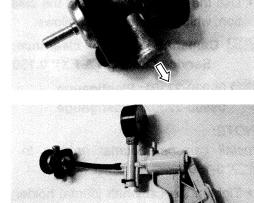

CAMSHAFT JOURNAL WEAR

- Determine whether or not each journal is worn down to the limit by measuring the oil clearance with the camshaft installed in place.
- Use the plastigauge to read the clearance at the widest portion, which is specified as follows:

DATA Camshaft journal oil clearance:

Service Limit: (IN & EX): 0.150 mm (0.0059 in)

09900-22301: Plastigauge 09900-22302: Plastigauge

NOTE:

Install camshaft journal holders to their original positions. (3-100)

Tighten the camshaft journal holder bolts evenly and diagonally to the specified torque.


Camshaft journal holder bolt: 10 N·m


(1.0 kgf-m, 7.0 lb-ft)




Do not rotate the camshaft with the plastigauge in place.

- Remove the camshaft holders, and read the width of the compressed plastigauge with envelope scale.
- This measurement should be taken at the widest part.

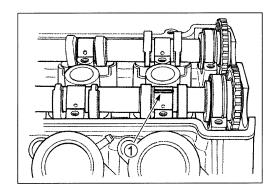

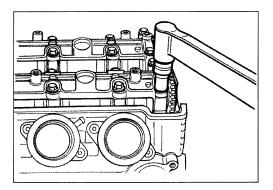

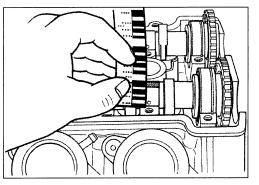

- If the camshaft journal oil clearance measured exceeds the limit, measure the inside diameter of the camshaft journal holder and outside diameter of the camshaft journal.
- Replace the camshaft or the cylinder head depending upon which one exceeds the specification.

DATA Journal holder I.D.:


Standard: (IN & EX): 24.012 – 24.025 mm (0.9454 – 0.9459 in)


09900-20602: Dial gauge (1/1000, 1 mm) 09900-22403: Small bore gauge (18 – 35 mm)

DATA Camshaft journal O.D.:

Standard (IN & EX): 23.959 - 23.980 mm (0.9433 - 0.9441 in)

09900-20205: Micrometer (0 – 25 mm)

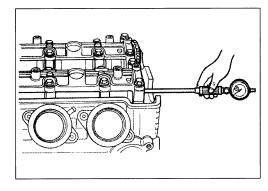

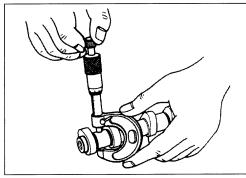

CAMSHAFT RUNOUT

- Measure the runout using the dial gauge.
- Replace the camshaft if the runout exceeds the limit.

DATA Camshaft runout:

Service Limit (IN & EX): 0.10 mm (0.004 in)

09900-20607: Dial gauge (1/100 mm)

09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)

CAM SPROCKET


- Inspect the sprocket teeth for wear.
- If they are worn, replace the sprocket/camshaft assembly and cam chain as a set.



CAM CHAIN TENSION ADJUSTER

INSPECTION

- Remove the cam chain tension adjuster cap bolt.
- Check that the push rod slides smoothly when releasing stopper ①.
- If it does not slide smoothly, replace the cam chain tension adjuster with a new one.

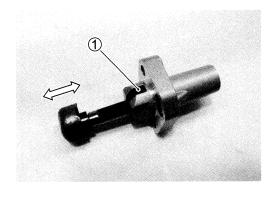

CAM CHAIN TENSIONER

INSPECTION

- Check the contacting surface of the cam chain tensioner.
- If it is worn or damaged, replace it with a new one.

CAM CHAIN GUIDE

INSPECTION

- Check the contacting surfaces of the cam chain guides.
- If they are worn or damaged, replace them with the new ones.


CYLINDER HEAD AND VALVE


VALVE AND VALVE SPRING DISASSEMBLY


• Remove the tappets ① and shims ② by fingers or magnetic hand.

CAUTION

Identify the position of each removed part.

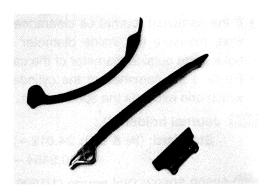

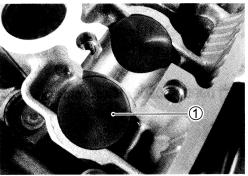

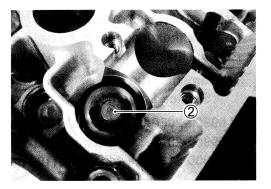


09916-14510: Valve lifter


09916-14910: Valve lifter attachment

09916-84511: Tweezers


CAUTION

Be careful not to damage the tappet sliding surface with the special tool.

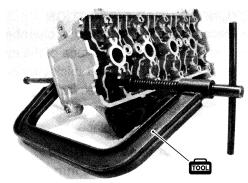

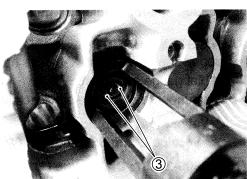

- Remove the valve spring retainer ④ and valve springs ⑤.
- Pull out the valve from the other side.

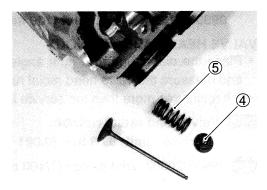


• Remove the oil seal ① and the spring seat ②.

CAUTION

Do not reuse the removed oil seal.

 Remove the other valves in the same manner as described previously.

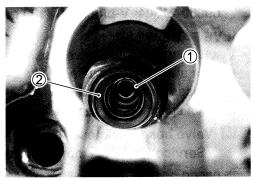

CYLINDER HEAD DISTORTION

- Decarbonize the combustion chambers.
- Check the gasketed surface of the cylinder head for distortion with a straightedge and thickness gauge, taking a clearance reading at several places indicated.
- If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder head.



Service Limit: 0.20 mm (0.008 in)

09900-20803: Thickness gauge

VALVE STEM RUNOUT

- Support the valve using V-blocks and check its runout using the dial gauge as shown.
- If the runout exceeds the service limit, replace the valve.

DATA Valve stem runout:

Service Limit: 0.05 mm (0.002 in)

09900-20607: Dial gauge (1/100 mm)

09900-20701: Magnetic stand 09900-21304: V-block set (100 mm)

VALVE HEAD RADIAL RUNOUT

- Place the dial gauge at a right angle to the valve head face and measure the valve head radial runout.
- If it measures more than the service limit, replace the valve.

DATA Valve head radial runout:

Service Limit: 0.03 mm (0.001 in)

09900-20607: Dial gauge (1/100 mm)

09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)


VALVE FACE WEAR


• Visually inspect each valve face for wear. Replace any valve with an abnormally worn face. The thickness of the valve face decreases as the face wears. Measure the valve face ①. If it is out of specification, replace the valve with a new one.


DATA Valve head thickness ①:


Service Limit: 0.5 mm (0.02 in)

09900-20102: Vernier calipers

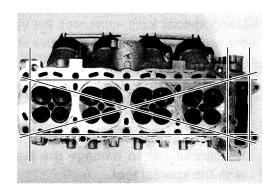

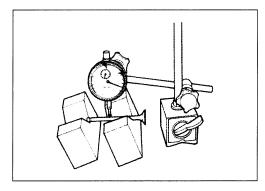

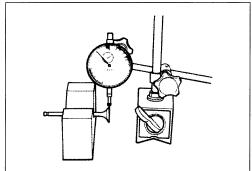

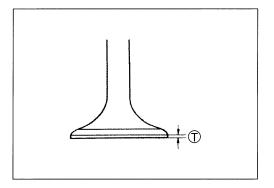

VALVE STEM DEFLECTION

- Lift the valve about 10 mm (0.39 in) from the valve seat.
- Measure the valve stem deflection in two directions, perpendicular to each other, by positioning the dial gauge as shown.
- If the deflection measured exceeds the limit, then determine whether the valve or the guide should be replaced with a new one.

DATA Valve stem deflection (IN & EX):

Service Limit: 0.35 mm (0.014 in)

09900-20607: Dial gauge (1/100 mm)

09900-20701: Magnetic stand

VALVE STEM WEAR

- If the valve stem is worn down to the limit, as measured with a micrometer, replace the valve.
- If the stem is within the limit, then replace the guide.
- After replacing valve or guide, be sure to recheck the deflection.

DATA Valve stem O.D.:


Standard (IN): 3.975 - 3.990 mm (0.1565 - 0.1571 in)


(EX): 3.955 – 3.970 mm (0.1557 – 0.1563 in)

09900-20205: Micrometer (0 – 25 mm)

NOTE:

If valve guides have to be removed for replacement after inspecting related parts, carry out the steps shown in valve guide servicing. (3-36)

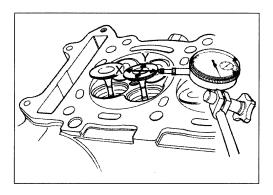

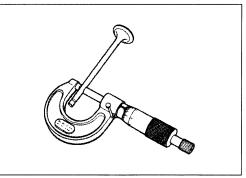

VALVE GUIDE SERVICING

• Using the valve guide remover, drive the valve guide out toward the intake or exhaust camshaft side.

09916-53310: Valve guide remover/installer

NOTE:

- * Discard the removed valve guide subassemblies.
- * Only oversized valve guides are available as replacement parts. (Part No. 11115-11D70)
- Re-finish the valve guide holes in cylinder head with the reamer and handle.


09916-49030: Valve guide reamer 09916-34542: Reamer handle


CAUTION


When refinishing or removing the reamer from the valve guide hole, always turn it clockwise.

- Apply engine oil to the valve guide hole.
- Drive the valve guide into the hole using the valve guide installer 1 and attachment 2.

09916-53310: Valve guide installer/remover 1 09916-53321: Attachment 2

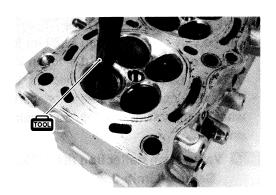

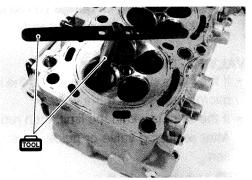

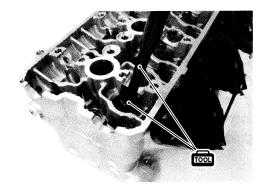

NOTE:

Install the valve guide until the attachment contacts with the cylinder head 3.

CAUTION


Failure to oil the valve guide hole before driving the new guide into place may result in a damaged guide or head.


- After installing the valve guides, re-finish their guiding bores using the reamer.
- Clean and oil the guides after reaming.

09916-33310: Valve guide reamer 09916-34542: Valve guide reamer handle

NOTE:

Insert the reamer from the combustion chamber and always turn the reamer handle clockwise.

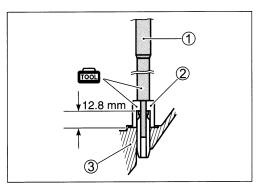

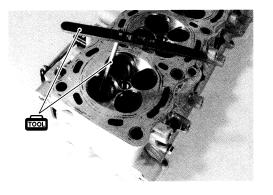

VALVE SEAT WIDTH INSPECTION


- Visually check for valve seat width on each valve face.
- If the valve face has worn abnormally, replace the valve.
- Coat the valve seat with Prussian Blue and set the valve in place. Rotate the valve with light pressure.
- Check that the transferred blue on the valve face is uniform all around and in center of the valve face.


09916-10911: Valve lapper set

DATA Valve seat width W:

Standard: 0.9 - 1.1 mm (0.035 - 0.043 in)

If the valve seat is out of specification, re-cut the seat.

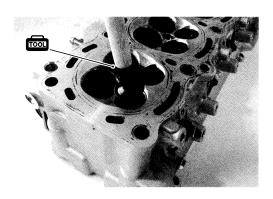


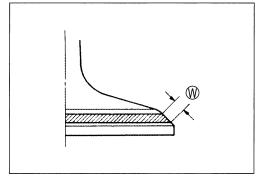

VALVE SEAT SERVICING

 \bullet The valve seats for both the intake and exhaust valves are machined to four different angles. The seat contact surface is cut at 45 $^{\circ}.$

	INTAKE	EXHAUST
15 °		N-121
30 °	N-126	
45 °	N-122	N-122
60 °	N-111	N-111

 

09916-20630: Valve seat cutter (N-126)


09916-20650: Solid pilot (N-100-4.0)


NOTE:

The valve seat cutters (N-121), (N-122) and (N-111) are included in the valve seat cutter set (09916-21111).


CAUTION

The valve seat contact area must be inspected after each cut.

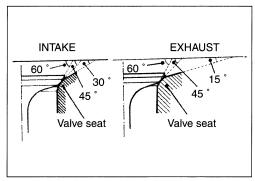

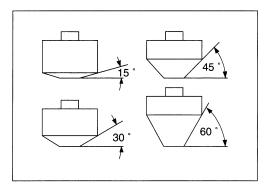


• When installing the solid pilot ①, rotate it slightly. Seat the pilot snugly. Install the 45 ° cutter, attachment and T-handle.

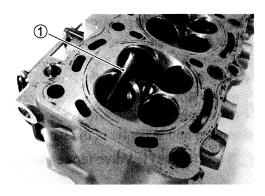

INITIAL SEAT CUT


- Using the 45 ° cutter, descale and clean up the seat. Rotate the cutter one or two turns.
- Measure the valve seat width W after every cut.

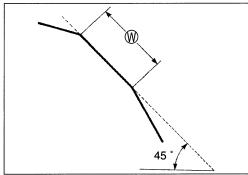

 If the valve seat is pitted or burned, use the 45 ° cutter to condition the seat some more.


NOTE:


Cut only the minimum amount necessary from the seat to prevent the possibility of the valve stem becoming too close to the camshaft.

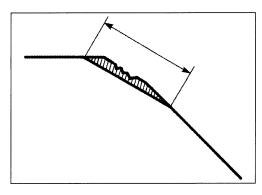

TOP NARROWING CUT


• If the contact area W is too high on the valve, or if it is too wide, use the 15 $^{\circ}$ (for the exhaust side) and the 30 $^{\circ}$ (for the intake side) to lower and narrow the contact area.

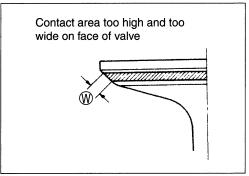

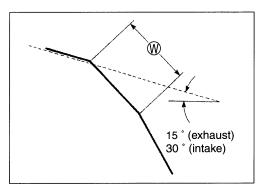

BOTTOM NARROWING CUT

• If the contact area (1) is too wide or too low, use the 60 ° cutter to narrow and raise the contact area.

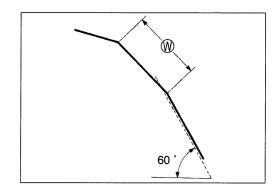



FINAL SEAT CUT

If the contact area W is too low or too narrow, use the 45° cutter to raise and widen the contact area.

NOTE:

After cutting the 15 $^{\circ}$, 30 $^{\circ}$ and 60 $^{\circ}$ angles, it is possible that the valve seat (45 $^{\circ}$) is too narrow. If so, re-cut the valve seat to the correct width.

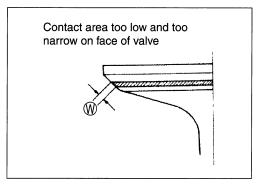

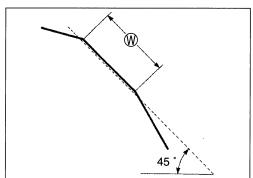


 After the desired seat position and width is achieved, use the 45 ° cutter very lightly to clean up any burrs caused by the previous cutting operations.

CAUTION

Do not use lapping compound after the final cut is made. The finished valve seat should have a velvety smooth finish but not a highly polished or shiny finish. This will provide a soft surface for the final seating of the valve which will occur during the first few seconds of engine operation.



After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been reinstalled. (2-8)

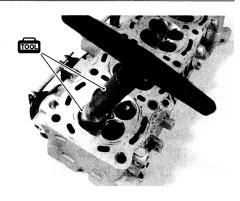

- Clean and assemble the head and valve components. Fill the intake and exhaust ports with gasoline to check for leaks.
- If any leaks occur, inspect the valve seat and face for burrs or other things that could prevent the valve from sealing.

▲ WARNING

Always use extreme caution when handling gasoline.

VALVE STEM END CONDITION

 
Check the valve stem end face for pitting and wear.



VALVE SPRING

The force of the coil springs keeps the valve seat tight. Weakened springs result in reduced engine power output, and often account for the chattering noise coming from the valve mechanism.

- · Check the valve springs for proper strength by measuring their free length and also by the force required to compress them.
- If the spring length is less than the service limit, or if the force required to compress the spring does not fall within the range specified, replace the spring.





09900-20102: Vernier calipers

DAVA Valve spring tension: Standard: (IN & EX):

127 – 147 N, 13.0 – 15.0 kgf/32.85 mm

(28.7 - 33.1 lbs/1.28 in)

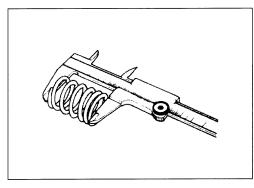

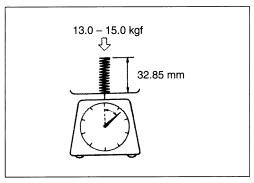

VALVE AND VALVE SPRING REASSEMBLY

- Install the valve spring seats.
- Apply MOLYBDENUM OIL SOLUTION to each oil seal ①, and press-fit them into position.

MOLYBDENUM OIL SOLUTION

CAUTION

Do not reuse the removed oil seals.

 
 Insert the valves, with their stems coated with MOLYBDE-NUM OIL SOLUTION all around and along the full stem length without any break.

CAUTION

When inserting each valve, take care not to damage the lip of the oil seal.

MOLYBDENUM OIL SOLUTION

- Install the valve springs with the small-pitch portion (A) facing cylinder head.
- B: Large-pitch portion




09916-14510: Valve lifter


09916-14910: Valve lifter attachment


09916-84511: Tweezers


CAUTION


Be sure to restore each spring and valve to their original positions.

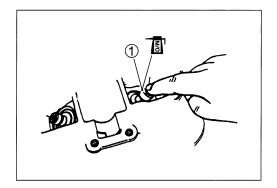

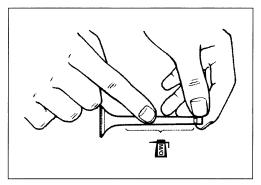

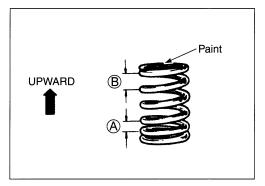

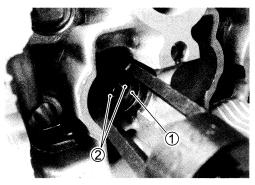


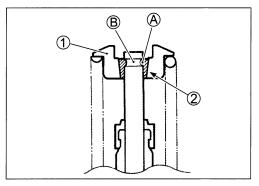

· Install the tappet shims and the tappets to their original position.

NOTE:


- * Apply engine oil to the shim and tappet before fitting them.
- * When seating the tappet shim, be sure the figure printed surface faces the tappet.

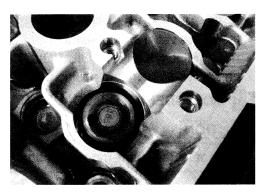




INTAKE PIPE

- Remove the intake pipe.
- Install the intake pipe in the following procedure.
- Apply SUZUKI SUPER GREASE to the O-rings.

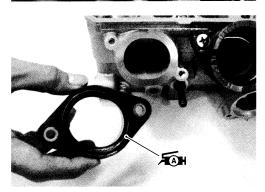


- Apply THREAD LOCK to the screw and install the intake pipes.
- **+**1342 99000-32050: THREAD LOCK "1342"
- Make sure that the "UP" mark (A) face upward.

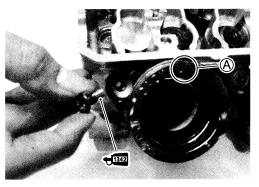

WATER BYPASS UNION

- Remove the water bypass union.
- Apply SUZUKI BOND to the thread part of the water bypass union and tighten it to the specified torque.
- ■1207B 99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)
- **(■)** Water bypass union: 14 N·m (1.4 kgf-m, 10.0 lb-ft)

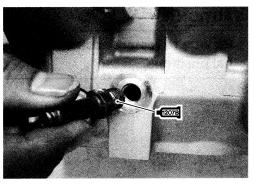

CLUTCH

CLUTCH DRIVE PLATES INSPECTION

NOTE:

- * Wipe off engine oil from the clutch drive plates with a clean raa.
- * Clutch drive plate No.1: Green paint
- * Clutch drive plate No.2: Brown paint
- Measure the thickness of drive plates with a vernier calipers.
- If each drive plate thickness is less than the limit, replace it with a new one.



Service Limit: 2.42 mm (0.095 in)

09900-20102: Vernier calipers

- Measure the claw width of drive plates with a vernier calipers.
- Replace the drive plates found to have worn down to the limit.

DAVA Drive plate claw width:

Service Limit: 13.05 mm (0.5138 in)

09900-20102: Vernier calipers

CLUTCH DRIVEN PLATES INSPECTION

NOTE:

Wipe off engine oil from the clutch driven plates with a clean rag.

- Measure each driven plate for distortion with a thickness gauge and surface plate.
- Replace driven plates which exceed the limit.

DAVA Driven plate distortion:

Service Limit: 0.10 mm (0.004 in)

09900-20803: Thickness gauge

CLUTCH SPRING INSPECTION

- Measure the free length of each coil spring with a vernier calipers, and compare the length with the specified limit.
- Replace all the springs if any spring is not within the limit.


DATA Clutch spring free length:


Service Limit: 73.9 mm (2.909 in)


09900-20102: Vernier calipers


CLUTCH BEARING INSPECTION


- Inspect the clutch release bearing for any abnormality, particularly cracks, to decide whether it can be reused or should be replaced.
- Smooth engagement and disengagement of the clutch depends on the condition of this bearing.

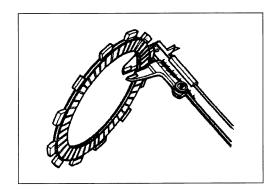

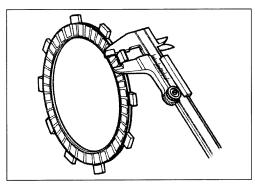

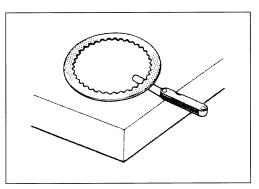


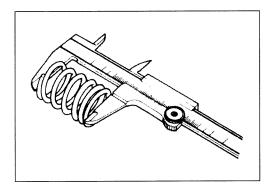

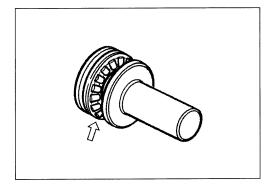

CLUTCH SLEEVE HUB/PRIMARY DRIVEN GEAR ASSEMBLY

• Inspect the slot of the clutch sleeve hub and primary driven gear assembly for damage or wear caused by the clutch plates. If necessary, replace it with a new one.

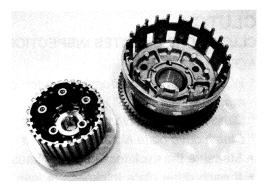

OIL PUMP

INSPECTION

- Rotate the oil pump by hand and check that it moves smoothly.
- If it does not move smoothly, replace the oil pump assembly.

 
CAUTION

- * Do not attempt to disassemble the oil pump assembly.
- * The oil pump is available only as an assembly.




INSPECTION


- Install the starter driven gear onto the starter clutch.
- Turn the starter driven gear by hand.
- Inspect the starter clutch for a smooth movement.
- Inspect that the gear turns one direction only.



• If they are found to be damaged, replace them with new ones.

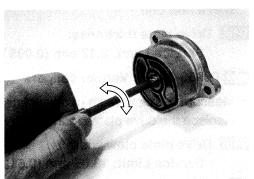



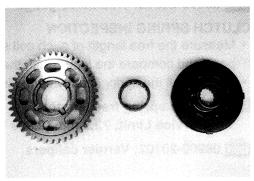

GENERATOR

INSPECTION (79-9)

REASSEMBLY

• When installing the generator stator set bolts, tighten them to the specified torque.

Generator stator set bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

NOTE:

Be sure to install the grommet to the generator cover.



WATER PUMP

(7-14)

GEARSHIFT SYSTEM

GEARSHIFT SHAFT/GEARSHIFT ARM DISASSEMBLY

- Remove the following parts from the gearshift shaft/gearshift arm.
- 1 Washer

⑤ Plate return spring

2 Snap ring

- 6 Washer
- 3 Gearshift shaft return spring
- Snap ring
- 4 Gearshift cam drive plate



- Inspect the gearshift shaft/gearshift arm for wear or bend.
- Inspect the return springs for damage or fatigue.
- Replace the arm or spring if there is anything unusual.




- Install the following parts to the gearshift shaft/gearshift arm as shown in the right illustration.
- 1 Washer

⑤ Plate return spring


2 Circlip


- 6 Washer
- 3 Gearshift shaft return spring
- ⑦ Circlip
- 4 Gearshift cam drive plate

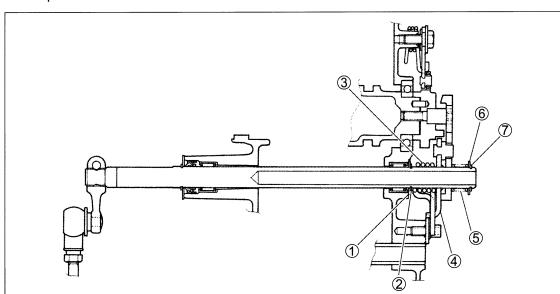


NOTE:

When installing the gearshift shaft return spring, position the stopper [®] of the gearshift arm between the shaft return spring ends [®].

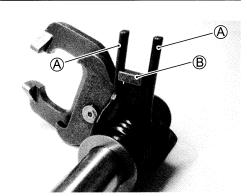

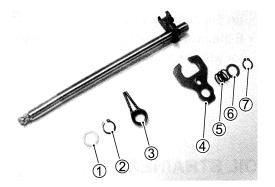

- Inspect the operation of the oil pressure regulator by pushing on the piston with a proper bar.
- If the piston does not operate, replace the oil pressure regulator with a new one.

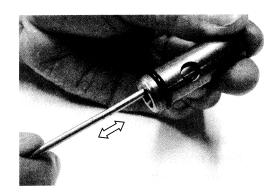


OIL STRAINER


- Inspect the oil strainer body for damage.
- Clean the oil strainer if necessary.



TRANSMISSION

- Disassemble the countershaft and drive shaft. Pay attention to the following point.
- Remove the 6th drive gear circlip from its groove and slide it towards the 3rd/4th drive gear.
- Slide the 6th ① and 2nd ② drive gears toward the 3rd/4th drive gears, then remove the 2nd drive gear circlip ③.

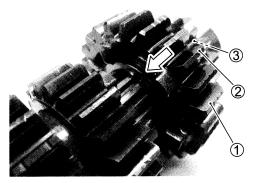

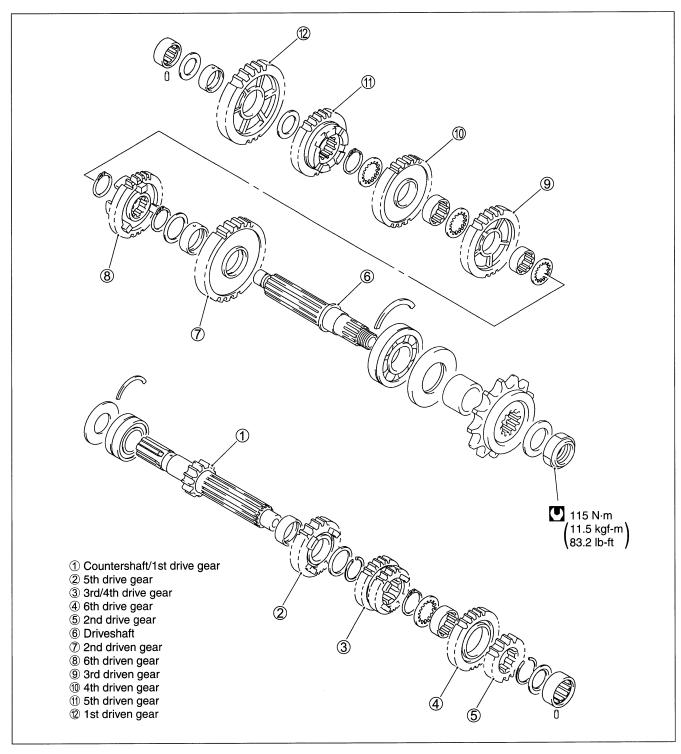

Assemble the countershaft and driveshaft in the reverse order of disassembly. Pay attention to the following points:

NOTE:

- * Rotate the bearings by hand to inspect for smooth rotation.

 Replace the bearings if there is anything unusual.
- * Before installing the gears, apply engine oil to the driveshaft and countershaft.
- * When installing the oil seal, apply SUZUKI SUPER GREASE to it.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

CAUTION

- * Never reuse a snap ring. After a snap ring has been removed from a shaft, it should be discarded and a new snap ring must be installed.
- * When installing a new snap ring, do not expand the end gap larger than required to slip the snap ring over the shaft.
- * After installing a snap ring, make sure that it is completely seated in its groove and securely fitted.


NOTE:


When reassembling the transmission, attention must be given to the locations and positions of washers and snap rings. The cross sectional view shows the correct position of the gears, bushings, washers and snap rings. (3-49)


 When installing a new snap ring, pay attention to its direction of the circlip. Fit it to the side where the thrust is as shown in the illustration.


CAUTION


When installing the gear bushing onto the shaft, align the shaft oil hole 1 with the bushing oil hole 2.

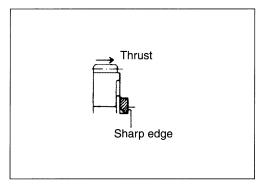

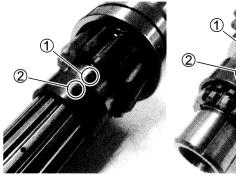


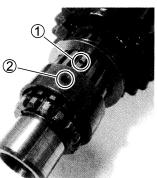

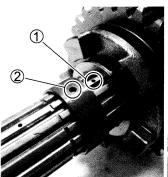

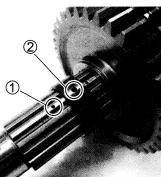

TRANSMISSION PARTS LOCATION

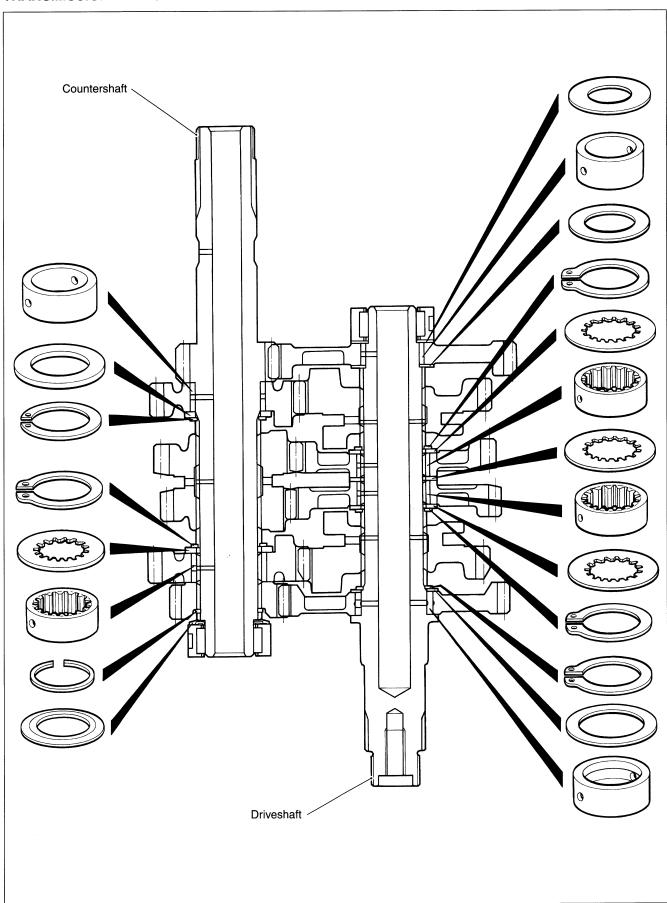

CYLINDER

CRANKCASE SERVICING (3-53) CYLINDER DISTORTION

- Check the gasketed surface of the cylinder for distortion with a straightedge and thickness gauge, taking a clearance reading at several places as indicated.
- If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder.


DATA Cylinder distortion:


Service Limit: 0.20 mm (0.008 in)

09900-20803: Thickness gauge

CYLINDER BORE

- Inspect the cylinder wall for any scratches, nicks or other damage.
- Measure the cylinder bore diameter at six places.

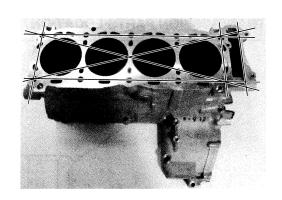


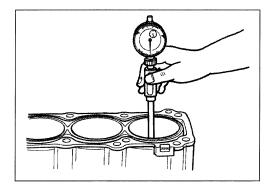

DATA Cylinder bore:

Standard: 73.000 - 73.015 mm (2.8740 - 2.8746 in)

09900-20508: Cylinder gauge set

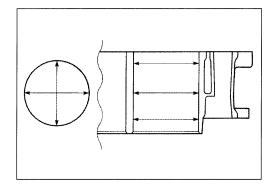

PISTON AND PISTON RING

PISTON DIAMETER


- Using a micrometer, measure the piston outside diameter at 15 mm (0.6 in) from the piston skirt end.
- If the measurement is less than the limit, replace the piston.


DATA Piston diameter:

Service Limit: 72.880 mm (2.8693 in)

at 15 mm (0.6 in) from the skirt end

09900-20203: Micrometer (50 – 75 mm)

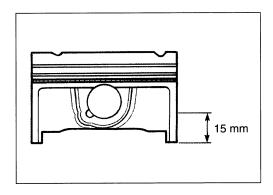

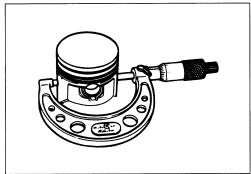

PISTON TO CYLINDER CLEARANCE

- Subtract the piston diameter from the cylinder bore diameter. (3-50)
- If the piston to cylinder clearance exceeds the service limit, replace both the cylinder and the piston.

DATA Piston to cylinder clearance:

Service Limit: 0.120 mm (0.0047 in)

PISTON PINS AND PIN BORE

- Measure the piston pin bore inside diameter using the small bore gauge.
- If the measurement is out of specifications replace the piston.

PAIA Piston pin bore I.D.:

Service Limit: 16.030 mm (0.6311 in)

09900-20602: Dial gauge (1/1000 mm)


09900-22401: Small bore gauge (10 - 18 mm)


- Measure the piston pin outside diameter at three positions using the micrometer.
- If any of the measurements are out of specification, replace the piston pin.

DATA Piston pin O.D.:

Service Limit: 15.980 mm (0.6291 in)

09900-20205: Micrometer (0 – 25 mm)

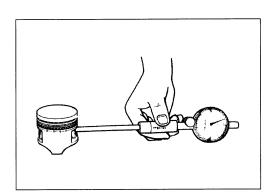

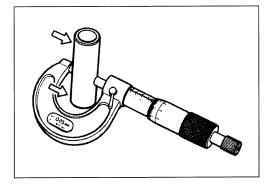

PISTON RING TO GROOVE CLEARANCE

- Measure the side clearances of the 1st and 2nd piston rings using the thickness gauge.
- If any of the clearances exceed the limit, replace both the piston and piston rings.

09900-20803: Thickness gauge 09900-20205: Micrometer (0 – 25 mm)

PATA Piston ring to groove clearance:

Service Limit (1st): 0.18 mm (0.0071 in) (2nd): 0.15 mm (0.0059 in)

PAYA Piston ring groove width:

Standard (1st): 1.01 - 1.03 mm (0.0398 - 0.0406 in)

(2nd): 0.81 - 0.83 mm (0.0319 - 0.0327 in) (Oil) : 1.51 – 1.53 mm (0.0594 – 0.0602 in)

Piston ring thickness:

Standard (1st): 0.97 - 0.99 mm (0.0382 - 0.0390 in) (2nd): 0.77 – 0.79 mm (0.0303 – 0.0311 in)



- Measure the piston ring free end gap using vernier calipers.
- Next, fit the piston ring squarely into the cylinder and measure the piston ring end gap using the thickness gauge.
- If any of the measurements exceed the service limit, replace the piston ring with a new one.

PAIA Piston ring free end gap:

Service Limit (1st): 6.4 mm (0.25 in) (2nd): 8.2 mm (0.32 in)


09900-20102: Vernier calipers


DATA Piston ring end gap:


Service Limit (1st): 0.50 mm (0.020 in)


(2nd): 0.50 mm (0.020 in)

09900-20803: Thickness gauge

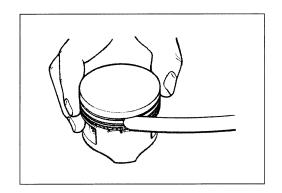

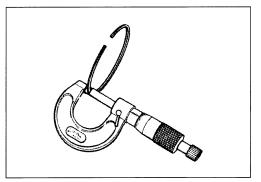

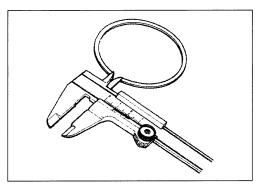


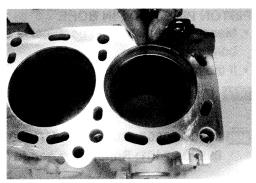


CRANKCASE

GEARSHIFT FORK AND GEARSHIFT CAM Removal

 Remove the gearshift cam bearing retainer ① and gearshift fork retainer ② from the lower crankcase.

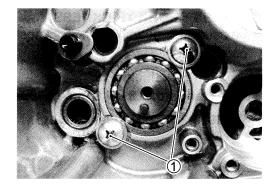

- Remove the gearshift fork shafts and gearshift forks from the lower crankcase.
- Remove the gear shift cam and its bearing.

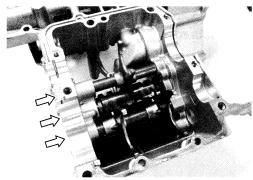

GEARSHIFT FORK TO GROOVE CLEARANCE

- Using a thickness gauge, check the gearshift fork clearance in the groove of its gear.
- The clearance for each gearshift fork plays an important role in the smoothness and positiveness of the shifting action.

Shift fork to groove clearance:

Service Limit: 0.50 mm (0.020 in)

09900-20803: Thickness gauge

• If the clearance checked is noted to exceed the limit specified, replace the fork or its gear, or both.





 Measure the gearshift fork groove width using the vernier calipers.

Shift fork groove width:

Standard: 5.0 – 5.1 mm (0.197 – 0.201 in)

1001 09900-20102: Vernier calipers

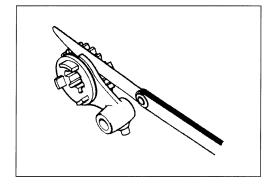

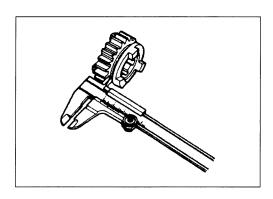

GEARSHIFT FORK THICKNESS

 Measure the gearshift fork thickness using the vernier calipers.

DATA Shift fork thickness:


Standard: 4.8 - 4.9 mm (0.189 - 0.193 in)

09900-20102: Vernier calipers

- Inspect the gearshift cam bearing for abnormal noise and smooth rotation.
- Replace the bearings if there is anything unusual.




- Inspect the gearshift cam bearing ①, and gearshift shaft bearings ②, ③ for abnormal noise and smooth rotation while they are in the crankcase.
- Replace a bearing if there is anything unusual.

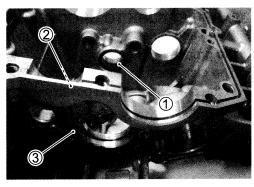

Bearing removal

• Remove the gearshift shaft bearing with the special tool.

09921-20210: Bearing remover 09930-30102: Sliding shaft

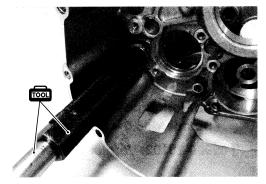


• Remove the gearshift cam bearing with the special tools.

09921-20240: Bearing remover set (25 mm) 09910-20115: Conrod stopper


CAUTION

- * Don't damage the crankcase by the conrod stopper.
- * Be careful not to lean the bearing remover.

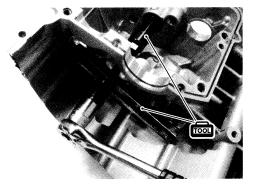

- Remove the oil seal 4.
- Remove the gearshift shaft bearing with the special tool.

09921-20240: Bearing remover set (15 mm)

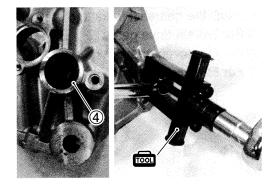


Installation


• Install the bearings with the special tool.



NOTE:


The stamped mark side of the gearshift shaft bearing faces outside.

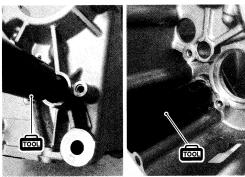

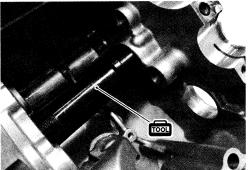




• Install the oil seal 1.

 



NOTE:

The stamped mark side of the gearshift cam bearing faces outside.

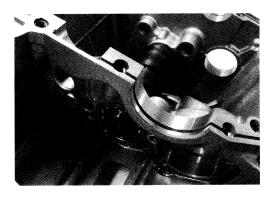

- Install the gearshift forks and their shafts as shown.
- 1) For 3rd/4th drive gears
- 2 For 6th driven gear
- 3 For 5th driven gear

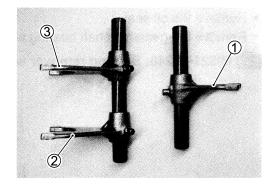

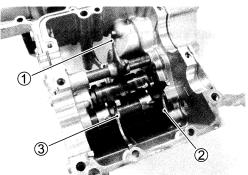


- Apply a small quantity of THREAD LOCK to the bearing retainer screws and the shift fork shaft retainer bolt.
- Tighten them to the specified torque.

+1342 99000-32050: THREAD LOCK "1342"


■ Bearing retainer screw: 10 N·m (1.0 kgf-m, 7.0 lb-ft)


Gearshift fork shaft retainer bolt: 19 N·m

(1.9 kgf-m, 13.7 lb-ft)

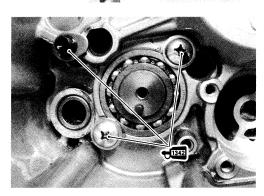


• Remove the piston cooling oil jets ① from the upper crank-case.

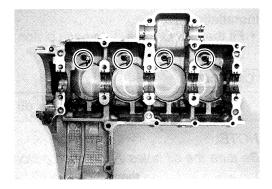


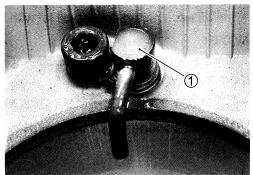

 Remove the oil jet (for transmission) from the lower crankcase.

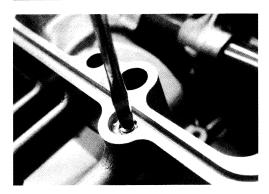


 Remove the oil jet ② (for cam chain tension adjuster) from the cylinder head.

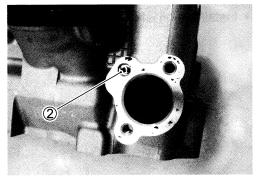

Inspection and cleaning

- Check the oil jets for clogging.
- If they are clogged, clean their oil passage with a proper wire and compressed air.
- 1 Piston cooling oil jet
- 2 Oil jet (#14) (For transmission)
- ③ Oil jet (#8) (For cam chain tension adjuster)

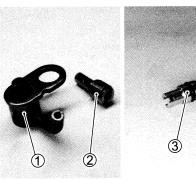

• Fit the new O-rings ① to each piston cooling oil jets as shown and apply engine oil to them.

CAUTION

Use the new O-rings to prevent oil pressure leak.

NOTE:

Be sure the oil holes (A) on each piston cooling oil jet faces the top when installing them.

• Install each piston cooling oil jet with the bolt.

NOTE:


Apply a small quantity of THREAD LOCK to the bolts and tighten them to the specified torque.


←1342 99000-32050: THREAD LOCK "1342"


Piston cooling oil jet bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)


• Install the oil jet (for transmission).

• Install the oil jet ② (for cam chain tension adjuster).

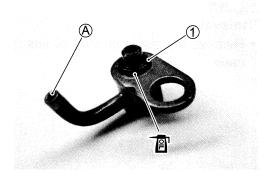

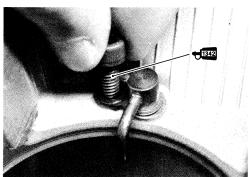

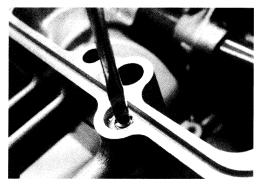

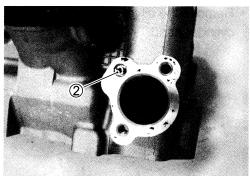

PLUGS

- Install each plug.
- **●** ① Water jacket plug: 9.5 N·m (0.95 kgf-m, 6.9 lb-ft)
 - ② Oil gallery plug (upper crankcase):

18 N·m (1.8 kgf-m, 13.0 lb-ft)

③ Oil gallery plug (lower crankcase):


35 N·m (3.5 kgf-m, 25.3 lb-ft)


4 Oil gallery plug (cylinder head):

10 N·m (1.0 kgf-m, 7.0 lb-ft)

NOTE:

Apply engine coolant to the O-ring.

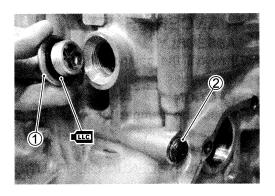

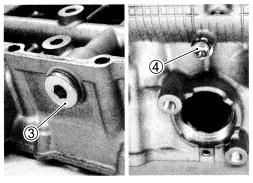

BALANCER SHAFT

DISASSEMBLY

• Draw out the balancer gear and damper from the balancer shaft.

INSPECTION

 Inspect the damper for wear and damage, replace it if any defects are found.

REASSEMBLY

Apply MOLYBDENUM OIL SOLUTION to each part.


MOLYBDENUM OIL SOLUTION

 Set the dampers and install the balancer shaft to balancer gear.

NOTE:

- * Fit the stopper of the balancer shaft between the dampers.
- * Align the line (A) on the balancer shaft with the punch (B) on the balancer gear.



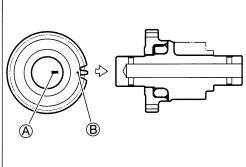

BALANCER SHAFT JOURNAL BEARING INSPECTION

 Inspect each bearing of upper and lower crankcases for any damage.

SELECTION

 Place the plastigauge axially along the balancer shaft journal as shown.



CAUTION

Never rotate the balancer shaft when a piece of plastigauge is installed.

• Mate the middle crankcase with the upper crankcase, and tighten the crankcase bolts (M9 and M8) to the specified torque.





Initial: 18 N·m (1.8 kgf-m, 13.0 lb-ft)

Final:50°

Crankcase bolt (M8):

Initial: 15 N·m (1.5 kgf-m, 10.8 lb-ft) Final: 26 N·m (2.6 kgf-m, 19.0 lb-ft)

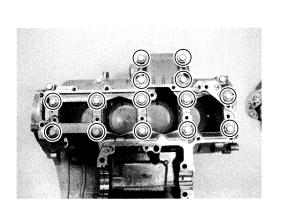

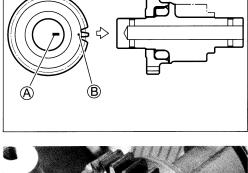

DATA Balancer shaft journal oil clearance:

Standard: 0.020 - 0.044 mm (0.00079 - 0.00173 in) Service Limit: 0.080 mm (0.031 in)

- If the oil clearance exceeds the service limit, select the specified bearings from the bearing selection table.
- Check the corresponding crankcase journal I.D. code number
 A, "A" or "B" which is stamped on the rear of upper crankcase.
- Check the corresponding balancer shaft journal O.D. code number B, "A" or "B" which is stamped on the balancer shaft.

DATA Bearing selection table

		Balancer shaft journal O.D. ®	
	Code	Α	В
Crankcase	Α	Green	Black
I.D. 🙈	В	Black	Brown

DATA Crankcase I.D. specification

Code	I.D. specification
^	26.000 – 26.008 mm
^	(1.0236 – 1.0239 in)
В	26.008 – 26.016 mm
D	(1.0239 – 1.0243 in)

Balancer shaft journal O.D. specification

Code	O.D. specification
^	22.992 – 23.000 mm
^	(0.9052 – 0.9055 in)
В	22.984 – 22.992 mm
В	(0.9049 – 0.9052 in)


09900-20205: Micrometer (0 – 25 mm)


Bearing thickness specification


Color (Part No.)	Thickness
Green	1.486 – 1.490 mm
(12229-40F50-0A0)	(0.0585 – 0.0587 in)
Black	1.490 – 1.494 mm
(12229-40F50-0B0)	(0.0587 – 0.0588 in)
Brown	1.494 – 1.498 mm
(12229-40F50-0C0)	(0.0588 – 0.0590 in)

NOTE:


The balancer shaft journal bearings on upper and middle crankcases are the same.

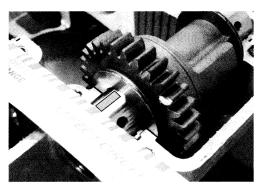

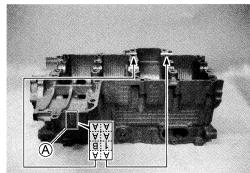

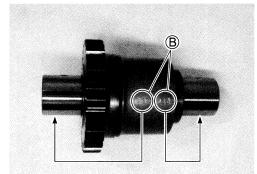



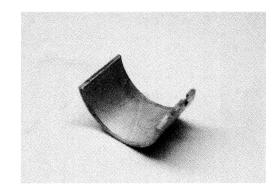


INSTALLATION

• When fitting the balancer shaft journal bearings to the upper and middle crankcases, be sure to fix the stopper part (A) first and press the other end.

CAUTION

Do not touch the bearing surfaces with your hands. Grasp by the edge of the bearing shell.

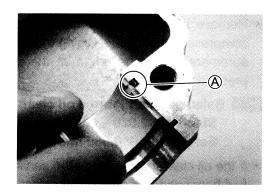

CRANKSHAFT AND CONROD

CRANKSHAFT RUNOUT

- Support the crankshaft with "V" blocks as shown, with the two end journals resting on the blocks.
- Set up the dial gauge, as shown.
- Rotate the crankshaft slowly to read the runout.
- Replace the crankshaft if the runout is greater than the limit.


DATA Crankshaft runout:

Service Limit: 0.05 mm (0.002 in)

09900-20607: Dial gauge (1/100 mm, 10 mm)

09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)

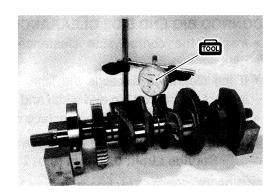

CONROD SMALL END I.D.


 Using a small bore gauge, measure the inside diameter of the conrod small end.

DAVA Conrod small end I.D.:

Service Limit: 16.040 mm (0.6315 in)

09900-20602: Dial gauge (1/1000 mm, 1 mm) 09900-22401: Small bore gauge (10 – 18 mm)

• If the inside diameter of the conrod small end exceeds the limit, replace the conrod.

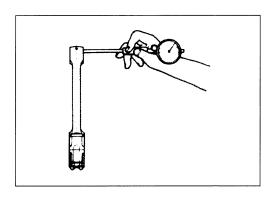

CONROD BIG END SIDE CLEARANCE

- Inspect the conrod side clearance by using a thickness gauge.
- If the clearance exceeds the limit, remove the conrod and inspect the conrod big end width and the crank pin width.
- If the width exceed the limit, replace conrod or crankshaft.

DATA Conrod big end side clearance:

Service Limit: 0.30 mm (0.012 in)

09900-20803: Thickness gauge

DATA Conrod big end width:


Standard: 19.95 - 20.00 mm (0.7854 - 0.7874 in)


09900-20205: Micrometer (0 – 25 mm)

Crank pin width:

Standard: 20.10 - 20.15 mm (0.7913 - 0.7933 in)


09900-20605: Dial calipers (1/100 mm, 10 – 34 mm)

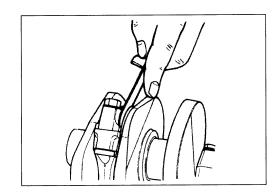

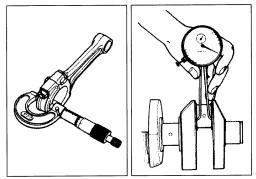

CONROD-BIG END BEARING INSPECTION

 Inspect the bearing surfaces for any sign of fusion, pitting, burn, or flaws. If any, replace them with a specified set of bearings.

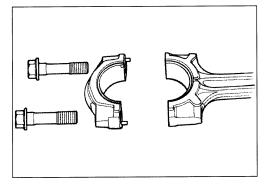

CONROD-BIG END BEARING SELECTION


 Place the plastigauge axially along the crank pin, avoiding the oil hole, as shown.


09900-22301: Plastigauge

• Tighten the conrod cap bolts to the specified torque, in two stages. (3-75)

CAUTION

- * Apply engine oil to the bearing cap bolt.
- * Never rotate the crankshaft or conrod when a piece of plastigauge is installed.

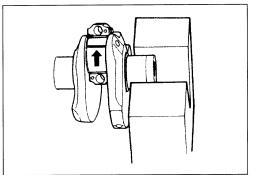

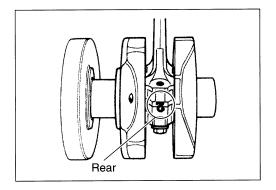



 Remove the bearing caps and measure the width of the compressed plastigauge using the envelope scale. This measurement should be taken at the widest part of the compressed plastigauge.

DATA Conrod big end oil clearance:

Standard: 0.032 - 0.056 mm (0.0013 - 0.0022 in) Service Limit: 0.080 mm (0.0031 in)

- If the oil clearance exceeds the service limit, select the specified bearings from the bearing selection table.
- Check the corresponding conrod I.D. code number ("1" or "2")

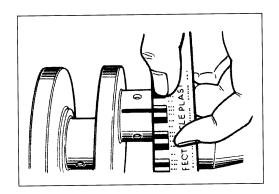

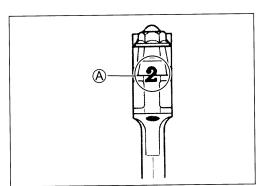


• Check the corresponding crank pin O.D. code number ("1", "2" or "3") (B).

DATA Bearing selection table

		Crank pin O.D. ®		
	Code	1	2	3
Conrod	1	Green	Black	Brown
I.D (A	2	Black	Brown	Yellow




Code	I.D. specification	
1	38.000 – 38.008 mm	
	(1.4961 – 1.4964 in)	
2	38.008 – 38.016 mm	
	(1.4964 – 1.4967 in)	

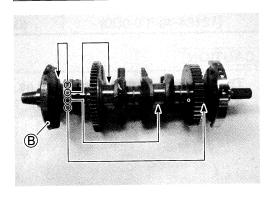

Crank pin O.D.


Code	O.D. specification
4	34.992 – 35.000 mm
1	(1.3776 – 1.3780 in)
2	34.984 – 34.992 mm
2	(1.3773 – 1.3776 in)
3	34.976 – 34.984 mm
3	(1.3770 – 1.3773 in)

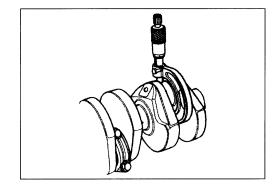

09900-20202: Micrometer (25 – 50 mm)

PATA Bearing thickness

Color (Part No.)	Thickness
Green	1.480 – 1.484 mm
(12164-40F00-0A0)	(0.0583 – 0.0584 in)
Black	1.484 – 1.488 mm
(12164-40F00-0B0)	(0.0584 – 0.0586 in)
Brown	1.488 – 1.492 mm
(12164-40F00-0C0)	(0.0586 – 0.0587 in)
Yellow	1.492 – 1.496 mm
(12164-40F00-0D0)	(0.0587 – 0.0589 in)

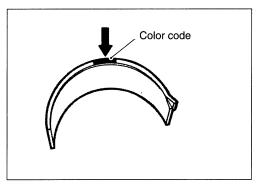


CAUTION

The bearings must be replaced as a set.

CRANKSHAFT JOURNAL BEARING

INSPECTION

 Inspect each bearing of upper and lower crankcases for any damage.

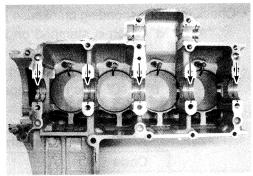

SELECTION

• Place the plastigauge axially along the crankshaft journal, avoiding the oil hole, as shown.



CAUTION


Never rotate the crankshaft when a piece of plastigauge is installed.

• Mate the lower crankcase with the upper crankcase, and tighten the crankcase bolts (M9) in the following two steps in the indicated order.

Crankcase bolt (9 mm)

Initial: 18 N·m (1.8 kgf-m, 13.0 lb-ft)

Final:50°

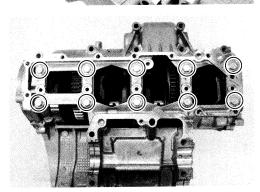



 Remove the lower crankcase and measure the width of the compressed plastigauge using the envelope scale. This measurement should be taken at the widest part of the compressed plastigauge.

DATA Crankshaft journal oil clearance:

Standard: 0.016 - 0.040 mm (0.0006 - 0.0016 in) Service Limit: 0.080 mm (0.031 in)

• If the oil clearance exceeds the service limit, select the specified bearings from the bearing selection table.

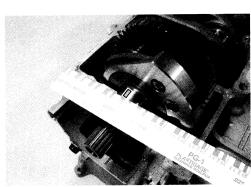

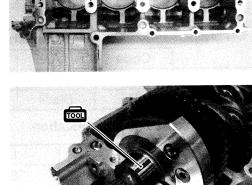


- Check the corresponding crankcase journal I.D. code number A, "A" or "B" which is stamped on the rear of upper crankcase.
- Check the corresponding crankshaft journal O.D. code number ®, "A", "B" or "C" which is stamped on the crankshaft.


DATA Bearing selection table

		Crankshaft journal O.D. ®		
	Code	Α	В	O
Crankcase	Α	Green	Black	Brown
I.D. 🖲	В	Black	Brown	Yellow

PATA Crankcase I.D. specification

Code	I.D. specification	
^	38.000 – 38.008 mm	
	(1.4961 – 1.4964 in)	
D	38.008 – 38.016 mm	
B	(1.4964 – 1.4967 in)	

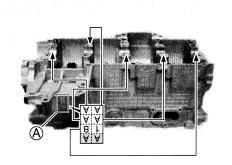

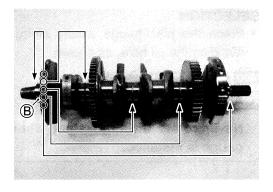


Code	O.D. specification
۸	34.992 – 35.000 mm
A	(1.3776 – 1.3780 in)
В	34.984 – 34.992 mm
	(1.3773 – 1.3776 in)
С	34.976 – 34.984 mm
	(1.3770 – 1.3773 in)



DATA Bearing thickness specification

Color (Part No.)	Thickness
Green	1.488 – 1.492 mm
(12229-40F00-0A0)	(0.0586 – 0.0587 in)
Black	1.492 – 1.496 mm
(12229-40F00-0B0)	(0.0587 – 0.0589 in)
Brown	1.496 – 1.500 mm
(12229-40F00-0C0)	(0.0589 – 0.0591 in)
Yellow	1.500 – 1.504 mm
(12229-40F00-0D0)	(0.0591 – 0.0592 in)



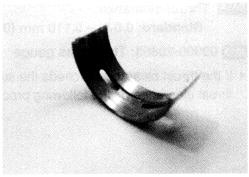

NOTE:


Upper and middle crankshaft journal bearings are the same.

INSTALLATION

• When fitting the crankshaft journal bearings to the upper and lower crankcases, be sure to fix the stopper part (A) first and press the other end.

CAUTION

Do not touch the bearing surfaces with your hands. Grasp by the edge of the bearing shell.

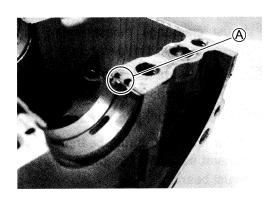

CRANKSHAFT THRUST BEARING

 With the crankshaft, right-side thrust bearing and left-side thrust bearing inserted in the upper crankcase, measure the thrust clearance on the left side by using the thickness gauge.

R: Right-side thrust bearing

①: Left-side thrust bearing

NOTE:


Pull the crankshaft to the right-side, so that there is no clearance on the right-side thrust bearing.


DATA Thrust clearance:


Standard: 0.070 - 0.110 mm (0.0028 - 0.0043 in)

09900-20803: Thickness gauge

 If the thrust clearance exceeds the standard range, adjust the thrust clearance by the following procedures.

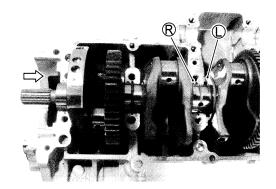

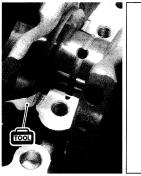

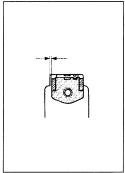

CRANKSHAFT THRUST CLEARANCE ADJUSTMENT


- Remove the right-side thrust bearing and measure its thickness with a micrometer.
- If the thickness of the right-side thrust bearing is below standard, replace it with a new one and once again perform the thrust clearance measurement listed above, checking to make sure it is within standard.

Right-side thrust bearing thickness:


Standard: 2.420 - 2.440 mm (0.0953 - 0.0961 in)



- If the right-side thrust bearing is within the standard range, reinsert the right-side thrust bearing and remove the left-side thrust bearing.
- As shown in the illustration, measure the clearance by using a thickness gauge before inserting of the left-side thrust bearing.
- Select a left-side thrust bearing from the selection table. (3-71)

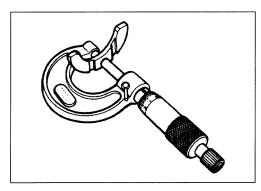



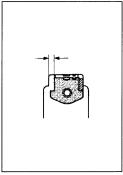


DATA Thrust bearing selection table

Clearance before inserting left-side thrust bearing	Color (Part No.)	Thrust bearing thickness	Thrust clearance
2.570 – 2.590 mm	Brown	2.480 – 2.500 mm	0.070 – 0.110 mm
(0.1012 – 0.1020 in)	(12228-48B00-0B0)	(0.0976 – 0.0984 in)	(0.0028 – 0.0043 in)
2.550 – 2.570 mm	Red	2.460 – 2.480 mm	0.070 – 0.110 mm
(0.1004 – 0.1012 in)	(12228-48B00-0C0)	(0.0969 – 0.0976 in)	(0.0028 – 0.0043 in)
2.530 – 2.550 mm	Yellow	2.440 – 2.460 mm	0.070 – 0.110 mm
(0.0996 – 0.1004 in)	(12228-48B00-0D0)	(0.0961 – 0.0969 in)	(0.0028 – 0.0043 in)
2.510 – 2.530 mm	Green	2.420 – 2.440 mm	0.070 – 0.110 mm
(0.0988 – 0.0996 in)	(12228-48B00-0E0)	(0.0953 – 0.0961 in)	(0.0028 – 0.0043 in)
2.490 – 2.510 mm	Blue	2.400 – 2.420 mm	0.070 – 0.110 mm
(0.0980 – 0.0988 in)	(12228-48B00-0F0)	(0.0945 – 0.0953 in)	(0.0028 – 0.0043 in)
2.470 – 2.490 mm	Orange	2.380 – 2.400 mm	0.070 – 0.110 mm
(0.0972 – 0.0980 in)	(12228-48B00-0G0)	(0.0937 – 0.0945 in)	(0.0028 – 0.0043 in)
2.440 – 2.470 mm	Black	2.360 – 2.380 mm	0.060 - 0.110 mm
(0.0961 – 0.0972 in)	(12228-48B00-0H0)	(0.0929 - 0.0937 in)	(0.0024 – 0.0043 in)

 After selecting a left-side thrust bearing, insert it and again perform the thrust clearance measurement to make sure it falls within the standard range.

NOTE:

Right-side thrust bearing has the same specification as the GREEN (12228-48B00-0E0) of left-side thrust bearing.

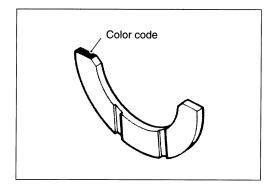

ENGINE REASSEMBLY

- Reassemble the engine in the reverse order of disassembly.
- The following steps require special attention or precautionary measures should be taken.

NOTE:

Apply engine oil to each running and sliding part before reassembling.

- Be sure to install the following items to the crankcase.
- * Crankshaft journal bearing (3-67)
- * Gearshift fork (3-56)
- * Gearshift fork shaft (3-56)
- * Gearshift shaft bearing (3-54)
- * Gearshift cam bearing (3-54)
- * Gearshift cam (3-55)
- * Bearing retainer (3-56)
- * Oil jets (3-57)

PISTON RING


- Install the piston rings in the order of oil ring, 2nd ring and 1st ring.
- The first member to go into the oil ring groove is a spacer ①. After placing the spacer, fit the two side rails ②.


NOTE:

Side designations, top and bottom, are not applied to the spacer and side rails: you can position each either way.

CAUTION

When installing the spacer, be careful not to allow its two ends to overlap in the groove.

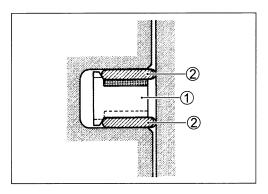


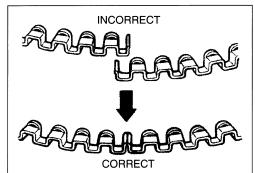


Install the 2nd ring ③ and the 1st ring ④.

NOTE:


1st ring and 2nd ring differ in shape.

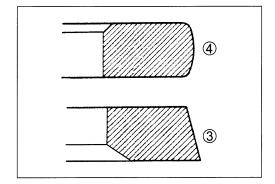

• 1st ring and 2nd ring have letters "R" and "RN" marked on the side. Be sure to bring the marked side to the top when fitting them to the piston.

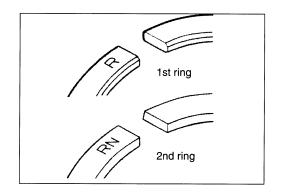

 Position the gaps of the three ring as shown. Before inserting each piston into the cylinder, check that the gaps are so located.

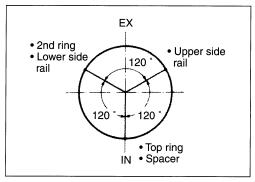

PISTON AND CONROD

 Rub a small quantity of MOLYBDENUM OIL SOLUTION onto each piston pin.

MOLYBDENUM OIL SOLUTION

• Assemble the piston and conrod.

NOTE:

When installing the pistons, the indent (A) on the piston head must be brought to the other side of ID code (B) on the conrod big end.

• Install the piston pin circlips 1.

CAUTION

Use new piston pin circlips to prevent circlip failure which will occur with a bend one.


NOTE:


End gap of the circlip should not be aligned with the cutaway in the piston pin bore.


Apply engine oil to the sliding surface of the pistons and cylinder walls.

NOTE:

Be sure to install the pistons in the cylinders from which they were removed in disassembly, refering to the cylinder numbers, "1" through "4", scribed on the piston.

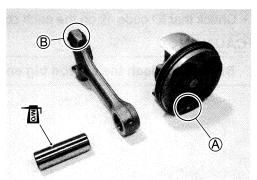

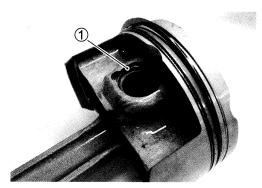

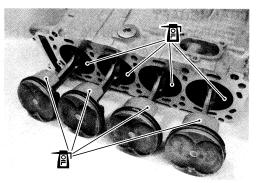



NOTE:

When installing the pistons, the indent $ilde{f A}$ of each piston head must be brought to the exhaust side.

CAUTION

Be careful not to damage the cylinder wall and piston jet by the conrod.

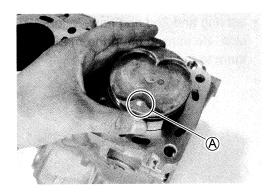


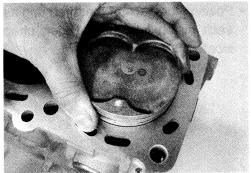

• Check that ID code (B) on the each conrod faces intake side.


CAUTION

Be sure to clean the conrod big end.

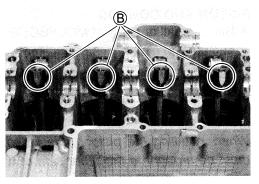


Apply MOLYBDENUM OIL SOLUTION to the crank pin bearings surface.

MOLYBDENUM OIL SOLUTION

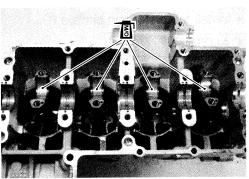


CRANKSHAFT

 Position the No.2 and No.3 conrod big ends on the same side, and the No.1 and No.4 conrod big ends on the opposite side of No.2 and No.3.

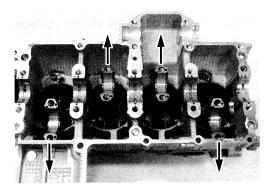

• Set the crankshaft to the conrods and upper crankcase.

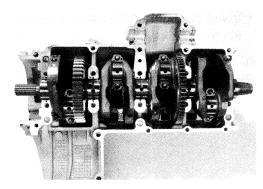

 Apply MOLYBDENUM OIL SOLUTION to the crank pin and bearing surface.

MOLYBDENUM OIL SOLUTION

CAUTION


Be sure to clean the conrod big end.


- When fitting the conrod cap, make sure that I.D. code ® on each conrod faces intake valve side.
- Apply engine oil to the bearing cap bolts.
- Tighten the bearing cap bolt by using a 12 mm, 12 point socket wrench in the following two steps.
- Conrod bearing cap bolt:


Initial: 21 N·m (2.1 kgf-m, 15.5 lb-ft)

Final: 90 ° (1/4 turn)

- Apply engine oil to the conrod big end side surfaces.
- Check the conrod movement for smooth turning.

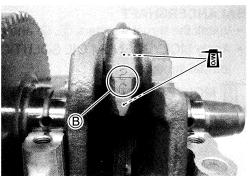


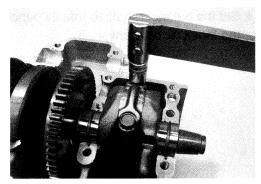

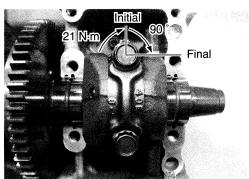

 Apply MOLYBDENUM OIL SOLUTION to each crankshaft journal bearing lightly.




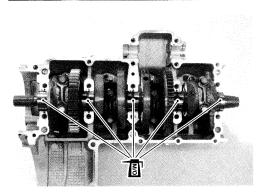

• Insert the right and left-thrust bearings with oil groove ® facing the crank web.

NOTE:


Right-thrust bearing has green painting.

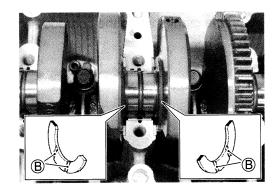


BALANCERSHAFT

- \bullet Install the thrust washers 1, 2 and oil seal 3.
- Apply MOLYBDENUM OIL SOLUTION to each balancershaft journal lightly.



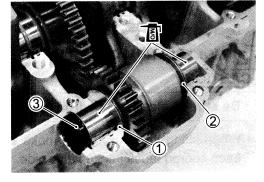


• Set the balancershaft so that its punch mark A is aligned with the index B on crankshaft.

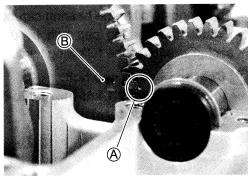

CRANKCASE

- Clean the mating surfaces of the crankcases.
- Install the dowel pins ① and O-ring ② to the upper crankcase.

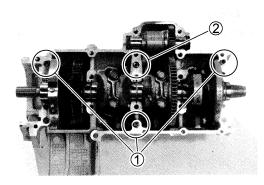

 Apply SUZUKI BOND to the mating surface of the middle crankcase.


■1207B 99104-31140: SUZUKI BOND "1207B" (USA)

99000-31110: SUZUKI BOND "1215" (Others)

NOTE:

Use of SUZUKI BOND is as follows:

- * Make surfaces free from moisture, oil, dust and other foreign materials.
- * Spread on surfaces thinly to form an even layer, and assemble the crankcases within few minutes.
- * Take extreme care not to apply any BOND to the oil hole, oil groove and bearing.
- * Apply to distorted surfaces as it forms a comparatively thick film.

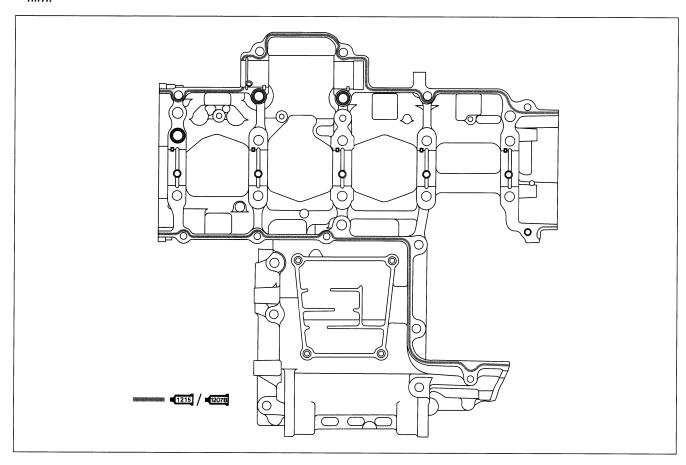


• Tighten the crankcase bolt (9 mm) in ascending order of numbers assigned to these bolts. Tighten each bolt a little at a time to equalize the pressure in the following two steps.

Crankcase bolt: (M9)

initial: 18 N·m (1.8 kgf-m, 13.0 lb-ft)


Final:50°

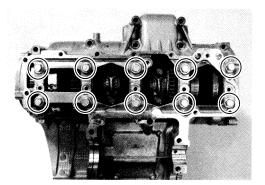

• Tighten the other crankcase bolts a little at a time to equalize the pressure.

Crankcase bolt: (M8) initial: 15 N·m (1.5 kgf-m, 10.8 lb-ft)

Final: 26 N·m (2.6 kgf-m, 19.0 lb-ft)

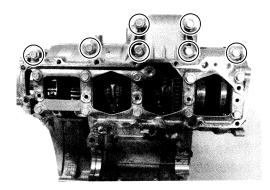


Crankcase bolt: (M6) initial: 6 N·m (0.6 kgf-m, 4.5 lb-ft)

Final: 11 N·m (1.1 kgf-m, 8.0 lb-ft)


NOTE:

Fit the new gasket to the crankcase bolt (A).

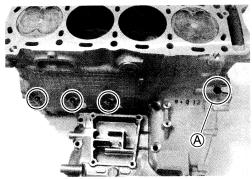


NOTE:

After the crankcase bolts have been tightened, check if the crankshaft rotates smoothly.

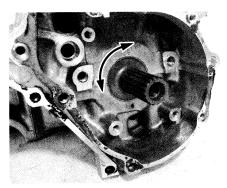

TRANSMISSION


• Install the bearing pins ① and the C-ring ② on the upper crankcase.

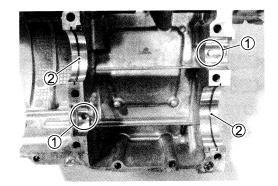

• Install the countershaft assembly on the upper crankcase.

NOTE:


Align the C-ring with the groove on the bearing and the bearing pin with the indent on the bearing.

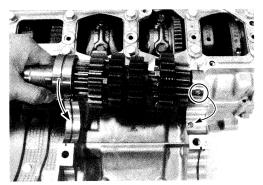


• Install the driveshaft assembly on the upper crankcase.

NOTE:


Align the bearing ring with the groove on the crankcase and the bearing pin with the indent on the bearing.

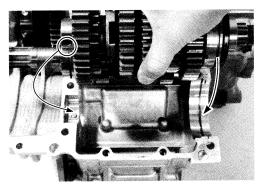

- Install the oil seal 3.
- Turn the bearings to install the bearing dowel pins (A) in the respective positions.

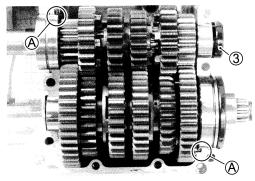

- Install the O-rings.
- Install the dowel pins 4.

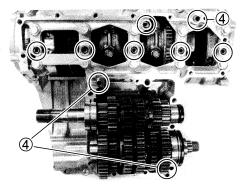


- Apply SUZUKI BOND to the mating surface of the lower crankcase.
- ■1207B 99104-31140: SUZUKI BOND "1207B" (USA)
- ■1215 99000-31110: SUZUKI BOND "1215" (Others)

NOTE:

Use of SUZUKI BOND is as follows:


- * Make surfaces free from moisture, oil, dust and other foreign materials.
- * Spread on surfaces thinly to form an even layer, and assemble the crankcases within few minutes.
- * Take extreme care not to apply any BOND to the oil hole, oil groove and bearing.
- * Apply to distorted surfaces as it forms a comparatively thick film.

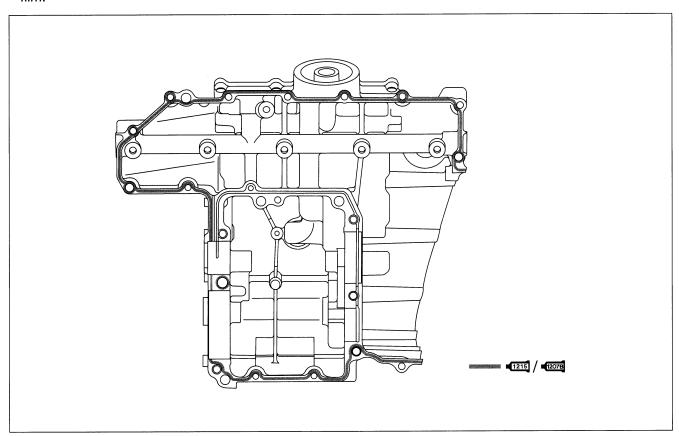

• Match the middle and lower crankcases.

NOTE:

Align the gearshift forks with their grooves.

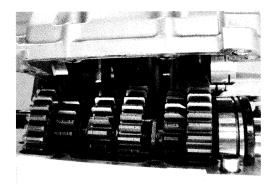

Crankcase bolt: (M6) initial: 6 N·m (0.6 kgf-m, 4.5 lb-ft)


Final: 11 N·m (1.1 kgf-m, 8.0 lb-ft)


(M8) initial: 15 N·m (1.5 kgf-m, 10.8 lb-ft)

Final: 26 N.m (2.6 kgf-m, 19.0 lb-ft)


NOTE:

- * Fit the new copper washer to the crankcase bolts (A).
- * Fit the new gasket washer to the crankcase bolts ®.

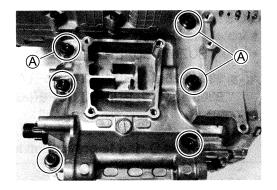

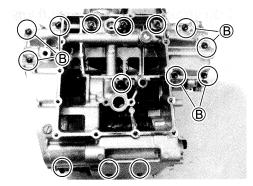

• Check that the driveshaft and countershaft rotate smoothly.

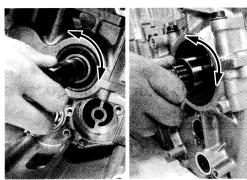

OIL STRAINER

- Install the O-ring.
- Apply SUZUKI SUPER GREASE to the O-ring.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

CAUTION

Use the new O-ring to prevent oil leakage.

• Install the oil strainer as shown.

Oil strainer bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)





OIL PRESSURE REGULATOR

 Apply SUZUKI SUPER GREASE to the O-ring and press in the oil pressure regulator to the crankcase.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

CAUTION

Use the new O-ring to prevent oil leakage.

OIL PAN

 Apply SUZUKI BOND to the mating surface of the lower crankcase.


■1207B 99104-31140: SUZUKI BOND "1207B" (USA)


■1215 99000-31110: SUZUKI BOND "1215" (Others)

NOTE:

Use of SUZUKI BOND is as follows:

- * Make surfaces free from moisture, oil, dust and other foreign materials.
- * Apply to distorted surfaces as it forms a comparatively thick film.

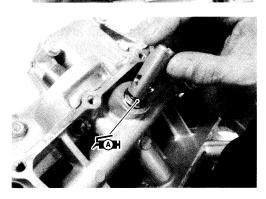

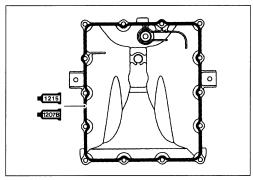


• Install the oil pan.

NOTE:

Fit the gasket washer to the oil pan bolt (A).

• Tighten the oil pan bolts diagonally to the specified torque.

Oil pan bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

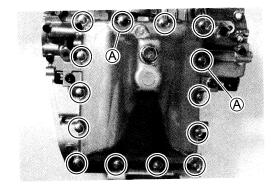

OIL PRESSURE SWITCH

 Apply SUZUKI BOND to the thread part of the oil pressure switch ① and tighten it to the specified torque.

■1207B 99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)

Oil pressure switch: 14 N·m (1.4 kgf-m, 10.0 lb-ft)


NOTE:


Be careful not to apply SUZUKI BOND to the hole of the thread end.

OIL FILTER

• Install the oil filter using the special tool. (2-14)


09915-40610: Oil filter wrench

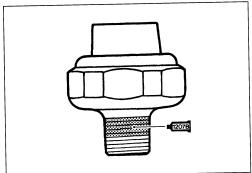

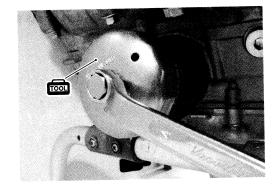



BREATHER COVER

 • Install the new gasket ①.




■ Breather cover bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

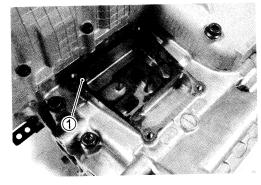

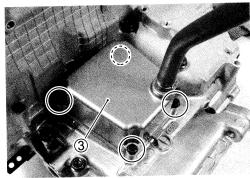


GEAR POSITION SWITCH

• Install the gear position switch contacts ① and the springs ②.

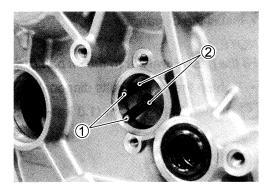


• Apply the SUZUKI SUPER GREASE to the O-ring.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

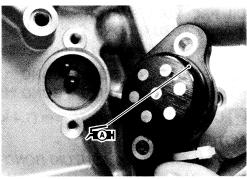

• Install the gear position switch ③ as shown.

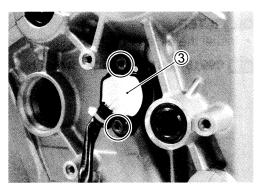

WATER PUMP

• Apply SUZUKI SUPER GREASE to the O-ring.

CAUTION

Use the new O-ring to prevent oil leakage.

99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)

• Tighten the water pump mounting bolts to the specified torque.

Water pump mounting bolt: 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)

Pass the gear position switch lead wire under the water pump lib A.

• Apply engine coolant to the O-ring.





Water inlet cover bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)


GENERATOR ROTOR


 Degrease the tapered portion of the generator rotor and also the crankshaft. Use nonflammable cleaning solvent to wipe off oily or greasy matter and make these surfaces completely dry.



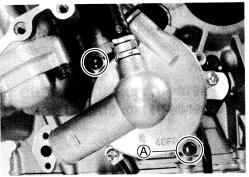

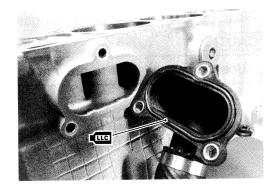

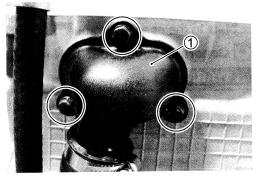


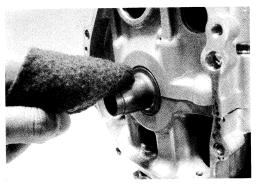

- Install the generator rotor onto the crankshaft.
- Install the rotor bolt with the washer.
- Hold the generator rotor with the special tool and tighten its bolt to the specified torque.

09930-44520: Rotor holder


Generator rotor bolt: 120 N⋅m (12.0 kgf-m, 88.5 lb-ft)

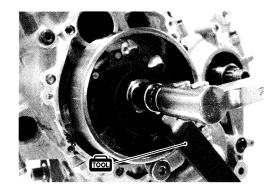

GENERATOR COVER

 Apply SUZUKI BOND lightly to the mating surfaces at the parting line between the upper and lower crankcases as shown.


■1207B 99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)

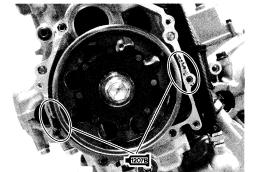

Install the dowel pins ① and new gasket ②.

CAUTION

Use the new gaskets to prevent oil leakage.

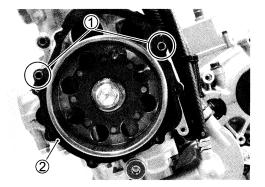

- Install the generator cover and tighten the generator cover bolts to the specified torque.
- Generator cover bolt: 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)


▲ WARNING


Be careful not to pinch the finger between the generator cover and the crankcase.

NOTE:

Fit the gasket washer to the bolts A.


• Install the CKP sensor ③.

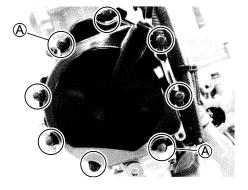

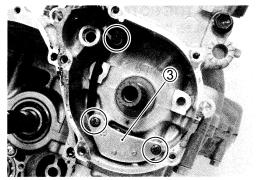


Apply SUZUKI BOND light to the groove of the signal generator lead wire gromet.

99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)

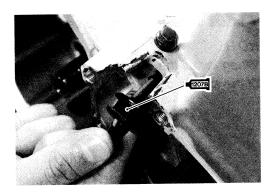

CAM CHAIN DRIVE SPROCKET

Install the cam chain drive sprocket onto the crankshaft.

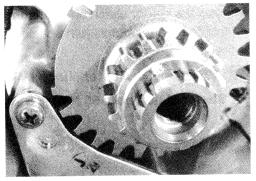



CAM CHAIN TENSIONER AND CAM CHAIN GUIDE

- Install the cam chain.
- Apply a small quantity of THREAD LOCK to the cam chain tensioner bolt and cam chain guide bolt.
- Install the cam chain tensioner ①, washer ② and cam chain guide ③.

99000-32050: THREAD LOCK "1342"


Cam chain tensioner bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft) Cam chain guide bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

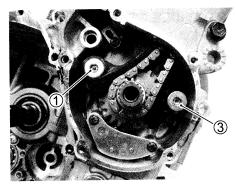

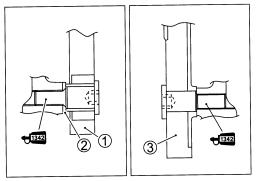

STARTER CLUTCH


• Install the washer ①.

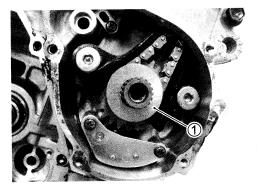

Install the starter clutch assembly onto the crankshaft.

NOTE:


When install the starter clutch assembly, fit the concave part (A) of the starter clutch onto the convex part (B) of the crankshaft.

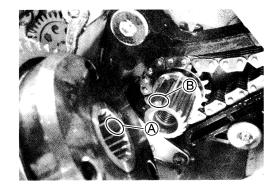

- Install the starter clutch bolt with the washer.
- Hold the starter clutch with special tool and tighten its bolt to the specified torque.


09920-34830: Starter clutch holder

Starter clutch bolt: 55 N·m (5.5 kgf-m, 40.0 lb-ft)

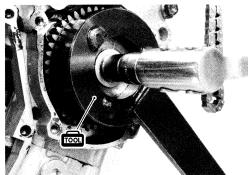


STARTER IDLE GEAR

• Install the starter idle gear No.2 ①, its shaft ② and the concaved washer ③.

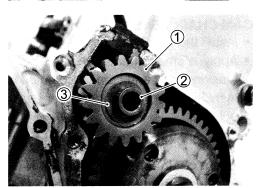


- 99104-31140: SUZUKI BOND "1207B" (USA)
 99000-31140: SUZUKI BOND "1207B" (Others)

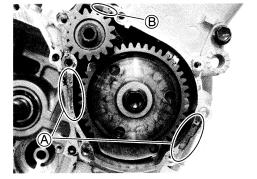

• Install the new gasket 4 and the dowel pins 5.

CAUTION

Use a new gasket to prevent oil leakage.

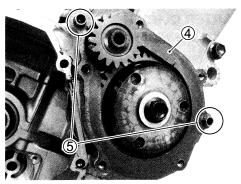

• Install the starter clutch cover and tighten its bolt as shown.

NOTE:


- * Fit the wire clamp to the starter clutch cover bolt (A) as shown.
- * Fit the new gasket washer to the starter clutch cover bolt ® as shown.


CAUTION

Use the new gasket washer to prevent oil leakage.

Starter idle gear cover bolt: 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)

• Install the starter idle gear No.1 shaft ⑥, starter idle gear No.1 ⑦, washer ⑧, thrust washer ⑨, bearing ⑩ and concaved washer ⑪.

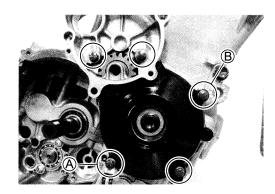


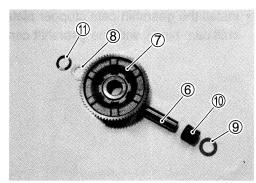

Install the dowel pins ② and the new gasket ③.

CAUTION

Use a new gasket to prevent oil leakage.

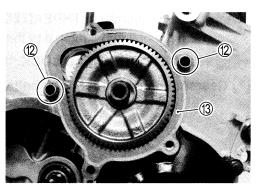


 Install the starter idle gear cover and tighten its bolts to the specified torque.

Starter idle gear cover bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

NOTE:

Fit the gasket washer to the bolt ©.

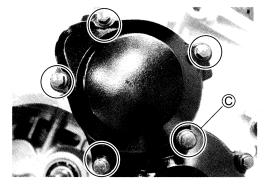

GEARSHIFT SYSTEM


• Install the gearshift cam stopper ①, its bolt ②, washer ③ and return spring ④.

NOTE:

Apply a small quantity of THREAD LOCK to the gearshift cam stopper bolt 2 and tighten it to the specified torque.

★1342 99000-32050: THREAD LOCK "1342"


Gearshift cam stopper bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

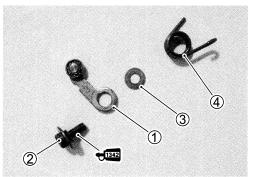


NOTE:

Hook the return spring end to the stopper ⑤.

- Check the gearshift cam stopper moves smoothly.
- Rocate the gearshift cam in the neutral position.

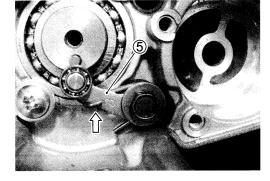

• Install the gearshift cam stopper plate after aligning the gearshift cam pin A with the gearshift cam stopper plate hole B.

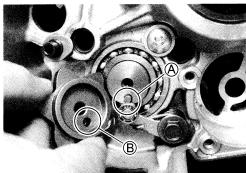


• Apply a small quantity of THREAD LOCK to the gearshift cam stopper plate bolt and tighten it to the specified torque.

←1342 99000-32050: THREAD LOCK "1342"

Gearshift cam stopper plate bolt: 13 N·m


(1.3 kgf-m, 9.5 lb-ft)

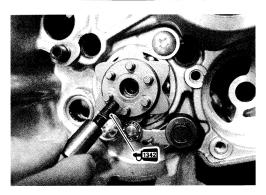



• Install the gearshift shaft/gearshift arm 6 with the washers as shown.

NOTE:

 Pinch the gearshift arm stopper 7 with return spring ends ©.



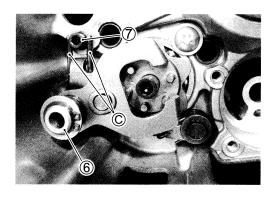

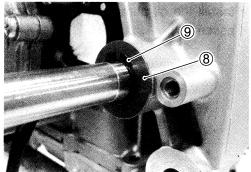

OIL PUMP

• Install the O-ring to the oil pump and apply grease to it.

CAUTION

Use the new O-ring to prevent oil leakage.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

NOTE:

Set the oil pump shaft end to the water pump shaft.

• Install the oil pump with the three bolts and then tighten them to the specified torque.


Oil pump mounting bolts: 10 N·m (1.0 kgf-m, 7.0 lb-ft)


• Install the washer ① and the pin ②.


NOTE:

Be careful not to drop the washer ① and the pin ② into the crankcase.

- Install the oil pump driven gear 3.
- Install the snap ring 4.

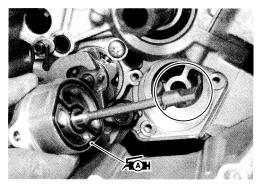

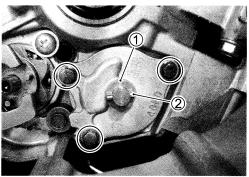

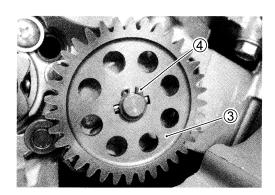


CLUTCH


• Install the thrust washer onto the countershaft.

NOTE:

The chamfer side (A) of the thrust washer faces inner side.

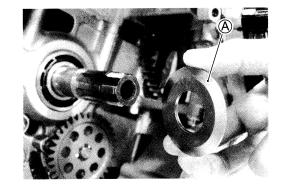


• Install the oil pump drive gear ① to the primary driven gear assembly.

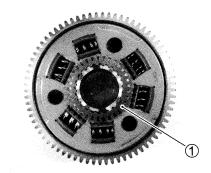

NOTE:

Be careful not to contact the primary driven gear with the crankweb when installing the clutch housing.

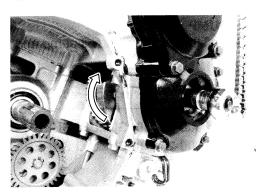


• Install the primary driven gear assembly.

NOTE:

Be sure to engage the oil pump drive gear with driven gear and primary drive gear with driven gear.

- Install the bearing ② and spacer ③ and apply engine oil to them.


• Install the thrust washer 4.

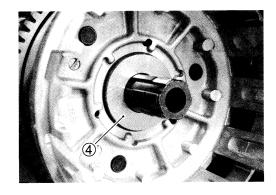


- \bullet Install the clutch sleeve hub $\ensuremath{\mathfrak{G}}$ onto the countershaft.
- Install the washer ⑥ and spring washer ⑦.


NOTE:


The convex side of the spring washer ${\mathfrak T}$ faces outside.

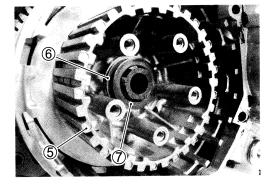

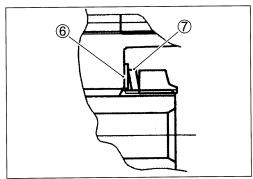


- Install the clutch sleeve hub nut.
- Hold the clutch sleeve hub with the special tool.
- 09920-53740: Clutch sleeve hub holder
- Tighten the clutch sleeve hub nut to the specified torque.
- Clutch sleeve hub nut: 150 N·m (15.0 kgf-m, 108 lb-ft)
- Lock the clutch sleeve hub nut with a center punch.

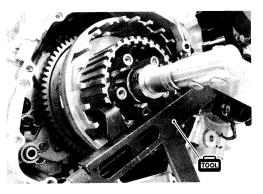

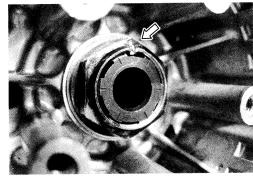



• Install the spring washer seat ® and spring washer 9 onto the clutch sleeve hub correctly.

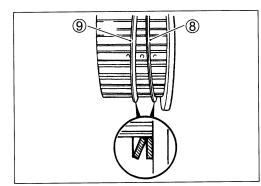

NOTE:

Insert the outermost No.1 drive plate claws A to the other slits B of clutch housing as shown.

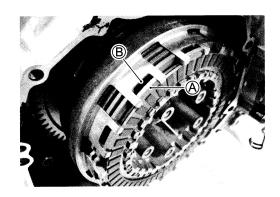

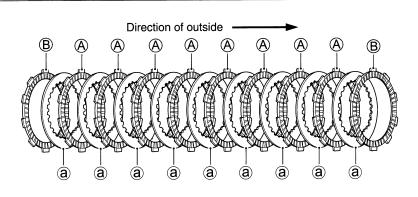

DRIVE PLATE:

- A No.1 Drive Plate ... 8 pcs [Green paint]
- ® No.2 Drive plate ... 2 pcs [Brown paint]

DRIVE PLATE:


- (a) No.1 Driven plate (Thickness): 2.3 mm (0.091 in) ... 8-9 pcs
- b No.2 Driven plate (Thickness): 2.0 mm (0.079 in) ... 0-1 pc
- © No.1 Driven plate (Thickness): 2.6 mm (0.102 in) ... 0-1 pc

Total 9 pcs

NOTE:

It is not necessary to use the No. 2 driven plate **(b)** and the No. 3 driven plate **(c)** when replacing the driven plates with the new ones. Because, they are factory setting parts.


• Install the clutch push rod 10 into the countershaft.

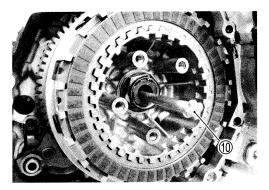

• Install the clutch push piece ①, the bearing ② and the thrust washer ③ to the countershaft.

NOTE:

Thrust washer (3) is located between the pressure plate and the bearing (2).

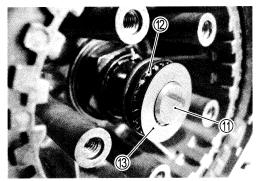

- Install the clutch pressure plate.
- Install the clutch springs.



CAUTION

Be careful not to damage the clutch housing or clutch plates.



• Tighten the clutch spring set bolts to the specified torque.

Clutch spring set bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

NOTE:

Tighten the clutch spring set bolts diagonally.

CLUTCH COVER

· Apply SUZUKI BOND lightly to the mating surfaces at the parting line between the upper, middle and lower crankcases as shown.

■1207B 99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)

Install the gasket ① and the dowel pins ②.

CAUTION


Use the new gasket to prevent oil leakage.


• Install the clutch cover and tighten its bolts to the specified





NOTE:


- * Fit the clamp to the bolt (A) as shown.
- * Fit the gaskets to the bolts ® as shown.

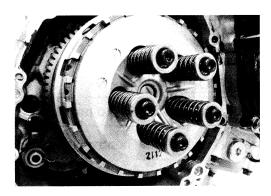

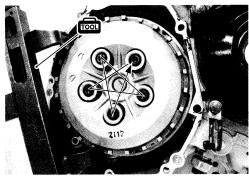

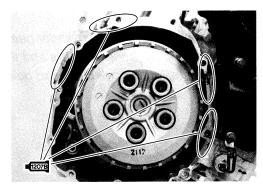

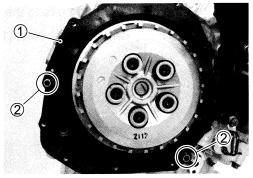

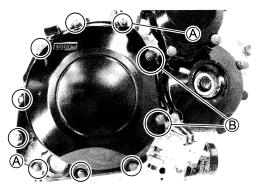

CYLINDER HEAD

• Fit the dowel pins ① and the new cylinder head gasket ② to the cylinder.

CAUTION

Use the new gasket to prevent gas leakage.

• Place the cylinder head on the cylinder.

NOTE:

When installing the cylinder head, keep the cam chain taut.

 Tighten the cylinder head bolts (M10) to the specified two-step torque with a torque wrench sequentially and diagonally.

Cylinder head bolt (M10): Initial: 25 N·m

(2.5 kgf-m, 18.0 lb-ft)


Final: 51 N·m


(5.1 kgf-m, 37.6 lb-ft)


NOTE:


- * Install the washers to the cylinder head bolts (M10) as shown.
- * Apply engine oil to the washers and thread portion of the bolts before installing the cylinder head bolts.

- Tighten the cylinder head bolts to the specified torque.
- Cylinder head bolt (M6): 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)

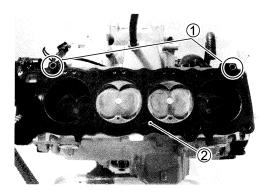

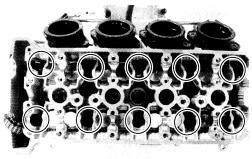

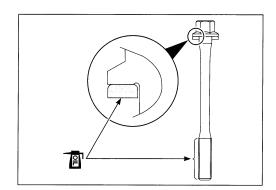


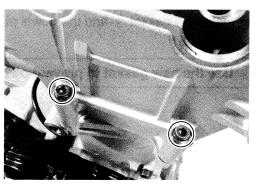

 \bullet Fit the gasket $\ensuremath{\mathfrak{D}}$ and tighten the ECT sensor gauge.

 (■) Water temp. gauge: 18 N·m (1.8 kgf-m, 13.0 lb-ft)







Thermostat cover bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)


NOTE:

Fit the clamp to the bolt (A).

• Install the water hose ⑤. (10-19)

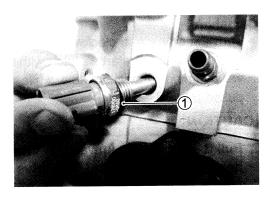

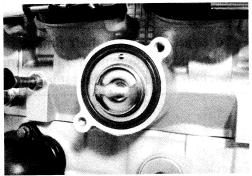

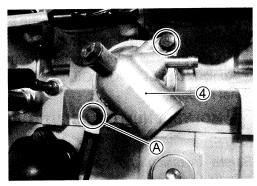



Camshaft

CAUTION

Pull the cam chain upward, or the chain will be caught between crankcase and cam drive sprocket.

CAUTION

To adjust the camshaft timing correctly, be sure to align the line (A) with the index mark (B) and hold this position when installing the camshafts.





- Before replacing the camshafts on cylinder head, apply molybdenum oil solution to their journals and cam faces.
- Apply MOLYBDENUM OIL SOLUTION to the camshaft journal holders.


MOLYBDENUM OIL SOLUTION

NOTE:

Before installing the camshaft, check that the tappets are installed correctly.

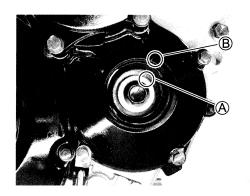

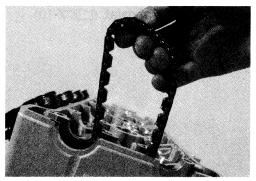


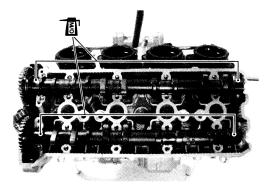



- Pull the cam chain lightly.
- The exhaust camshaft sprocket has an arrow marked "1" (A). Turn the exhaust camshaft so that the arrow is aligned with the gasket surface of the cylinder head.
- Engage the cam chain with the exhaust camshaft sprocket.
- Bind the cam chain and the sprocket with a proper wire clamp
 to prevent the cam chain disengagement while installing the camshaft journal holders.
- The other arrow marked "2" ® should now be pointing straight up. Starting from the roller pin that is directly above the arrow marked "2" ®, count out 14 roller pins (from the exhaust camshaft side going towards the intake camshaft side).
- Engage the 14 roller pin © on the cam chain with the arrow marked "3" on the intake sprocket.
- Bind the cam chain and the sprocket with a proper wire clamp
 to prevent the cam chain disengagement while installing the camshaft journal holders.

NOTE:

The cam chain should now be on all three sprockets. Be careful not to move the crankshaft until the camshaft journal holders and cam chain tension adjuster are secured.

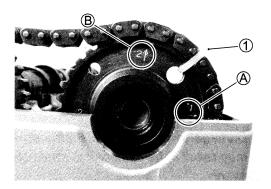

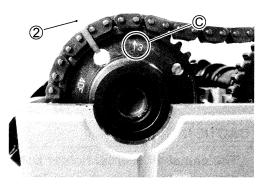

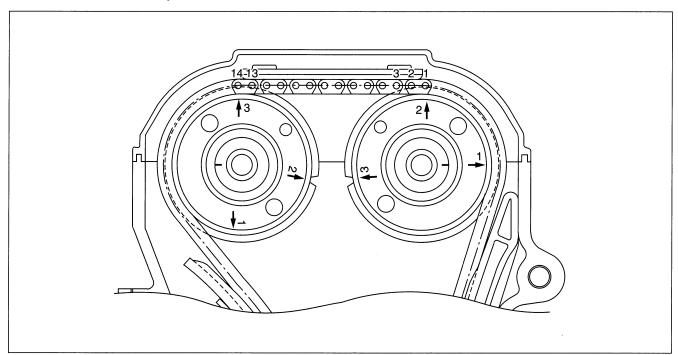

- Install the dowel pins 1.
- Install the camshaft journal holders, intake and exhaust, and cam chain guide.
- Fasten the camshaft journal holders evenly by tightening the camshaft journal holder bolts sequentially and diagonally.

NOTE:


- * Damage to head or camshaft journal holder thrust surfaces may result if the camshaft journal holders are not drawn down evenly.
- * Each camshaft journal holder is identified with a cast-on letter (A).
- Tighten the camshaft journal holder bolts in ascending order of numbers to the specified torque.
- Camshaft journal holder bolt: 10 N·m


(1.0 kgf-m, 7.0 lb-ft)


CAUTION

The camshaft journal holder bolts are made of a special material and much superior in strength, compared with other types of high strength bolts.

Take special care not to use other types of bolts.

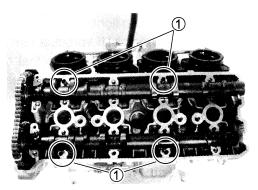


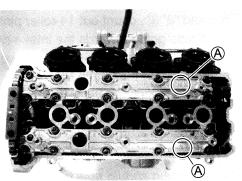

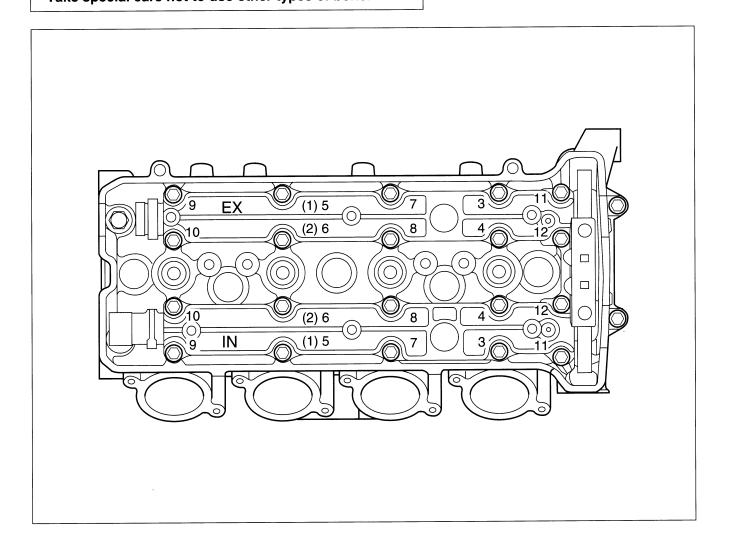

Cam chain tension adjuster

- Retract the push rod by pushing the stopper ①.
- Install the ball ② to the cam chain tension adjuster.

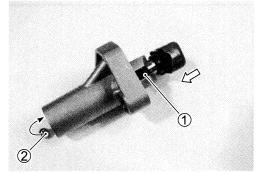

· Install the new gasket.

CAUTION

Use the new gasket to prevent oil leakage.

- Install the cam chain tension adjuster ③ and tighten the mounting bolt.
- Cam chain tension adjuster mounting bolt: 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)
- Install the spring 4.
- Install the gasket ⑤ and cam chain tension adjuster cap bolt **6**).

NOTE:


Click sound is heard when the cam chain tension adjuster cap bolt is installed.


- Tighten the cam chain tension adjuster cap bolt to the specified torque.
- Cam chain tension adjuster cap bolt: 23 N⋅m (2.3 kgf-m, 16.5 lb-ft)


CAUTION


After installing the cam chain tension adjuster, check to be sure that the adjuster works properly by checking the slack of cam chain.


- Cut the wire clamps.
- · After installing the cam chain tension adjuster, rotate the crankshaft (some turns), and recheck the positions of the camshafts. (3-102)

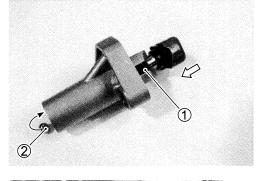

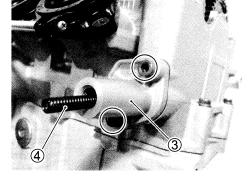

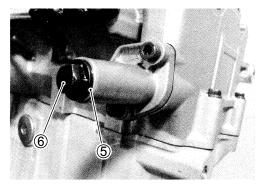


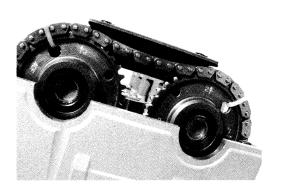

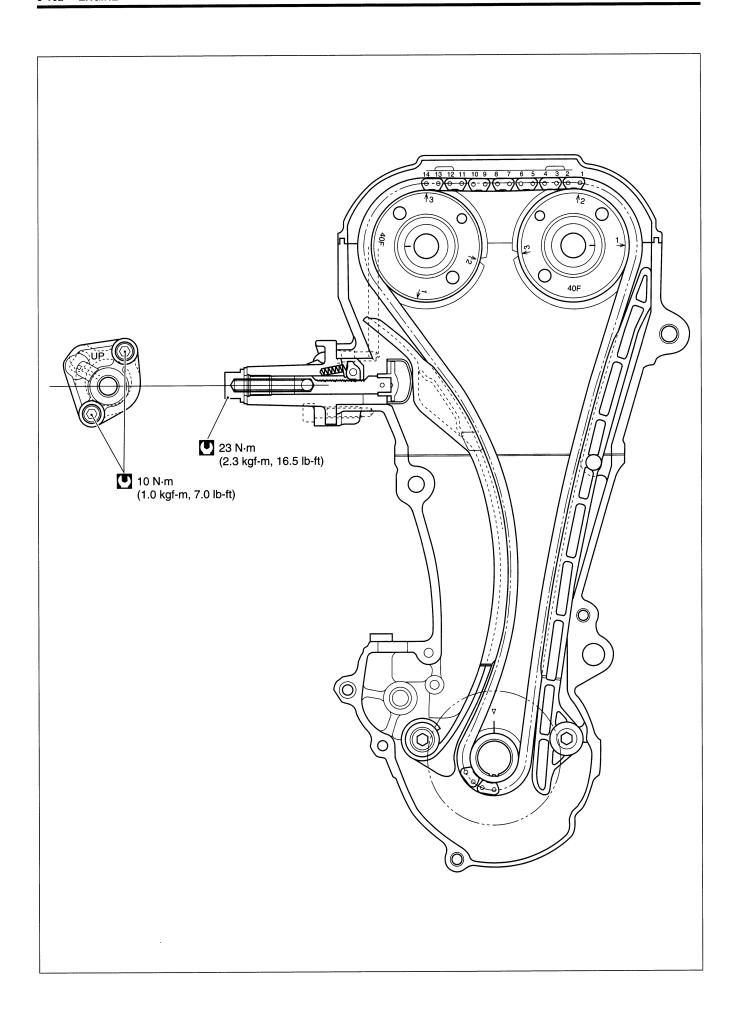

• Tighten the valve timing inspection plug 7 to the specified torque.

Valve timing inspection plug: 11 N⋅m (1.1 kgf-m, 8.0 lb-ft)

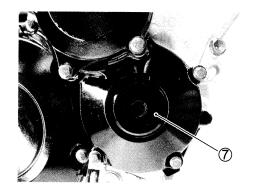


CYLINDER HEAD COVER

Pour engine oil in each oil pocket in the cylinder head.

NOTE:

Be sure to check the valve clearance. (2-8)

- Install the dowel pins.
- · Install the O-rings.

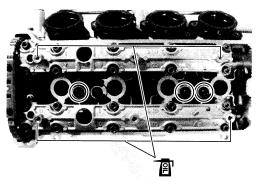

- Install the new gaskets to the cylinder head cover.
- · Apply SUZUKI BOND to the cam end caps of the gaskets as shown.

■1207B 99104-31140: SUZUKI BOND "1207B" (USA) 99000-31140: SUZUKI BOND "1207B" (Others)

 
CAUTION

Use the new gaskets to prevent oil leakage.

- Place the cylinder head cover on the cylinder head.
- Fit the new gaskets to each head cover bolt.

CAUTION

Use the new gaskets to prevent oil leakage.






- Tighten the head cover bolts to the specified torque.
- Head cover bolt: 14 N⋅m (1.4 kgf-m, 10.0 lb-ft)



PAIR CONTROL VALVE


• Install the PAIR control valve 1.

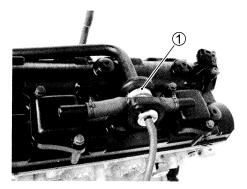


STARTER MOTOR

• Apply SUZUKI SUPER GREASE to the O-ring.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

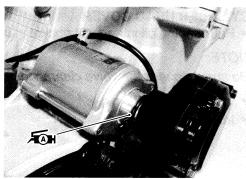

- Install the starter motor ①.
- Starter motor mounting bolt: 10 N·m (1.0 kgf-m, 7 lb-ft)

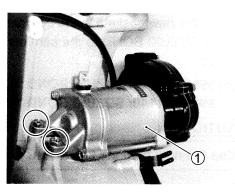

• Install the spark plugs. (2-6)

FI SYSTEM DIAGNOSIS

CONTENTS	_
PRECAUTIONS IN SERVICING4- 2	
ELETRICAL PARTS4- 2	
FUSE4- 3	
ECM/VARIOUS SENSORS4- 3	
ELECTRICAL CIRCUIT INSPECTION PROCEDURE4- 5	
USING TESTERS4- 8	
FI SYSTEM TECHNICAL FEATURES4- 9	
INJECTION TIME (INJECTION VOLUME)4- 9	
COMPENSATION OF INJECTION TIME (VOLUME)4-10	
INJECTION STOP CONTROL4-10	
INJECTION TIMING4-11	
FI SYSTEM PARTS LOCATION4-12	
FI SYSTEM WIRING DIAGRAM4-14	
SELF-DIAGNOSIS FUNCTION4-15	
USER MODE4-15	
DEALER MODE4-16	
TPS ADJUSTMENT4-18	
FAIL-SAFE FUNCTION4-19	
FI SYSTEM TROUBLESHOOTING4-21	
CUSTOMER COMPLAINT ANALYSIS4-21	
SELF-DIAGNOSTIC PROCEDURES4-23	
SELF-DIAGNOSIS RESET PROCEDURE4-23	
MALFUNCTION CODE AND DEFECTIVE CONDITION4-24	
"C11" CMP SENSOR CIRCUIT MALFUNCTION4-26	
"C12" CKP SENSOR CIRCUIT MALFUNCTION4-28	
"C13" IAP SENSOR CIRCUIT MALFUNCTION4-30	
"C14" TP SENSOR CIRCUIT MALFUNCTION4-33	
"C15" ECT SENSOR CIRCUIT MALFUNCTION4-36	
"C21" IAT SENSOR CIRCUIT MALFUNCTION4-38	
"C22" AP SENSOR CIRCUIT MALFUNCTION440	
"C23" TO SENSOR CIRCUIT MALFUNCTION4-43	
"C24", "C25", "C26" or "C27" IGINTION SYSTEM	
MALFUNCTION4-44	
"C28" STV ACTUATOR CIRCUIT MALFUNCTION4-45	
"C29" STP SENSOR CIRCUIT MALFUNCTION4-47	
"C31" GEAR POSITION (GP) SWITCH CIRCUIT	
MALFUNCTION4-50	
"C32", "C33", "C34" or "C35" FUEL INJECTOR CIRCUIT	
MΔI FUNCTION4-51	

"C41" FP RELAY CIRCUIT MALFUNCTION	4-53
"C42" IG SWITCH CIRCUIT MALFUNCTION	4-53
"C46" EXCV ACTUATOR CIRCUIT MALFUNCTION	4-54
SENSORS	4-60
CMP SENSOR INSPECTION	4-60
CMP SENSOR REMOVAL AND INSTALLATION	4-60
CKP SENSOR INSPECTION	4-60
CKP SENSOR REMOVAL AND INSTALLATION	4-60
IAP SENSOR INSPECTION	4-60
IAP SENSOR REMOVAL AND INSTALLATION	4-60
TP SENSOR INSPECTION	4-60
TP SENSOR REMOVAL AND INSTALLATION	4-60
TPS ADJUSTMENT	4-60
ECT SENSOR INSPECTION	4-61
ECT SENSOR REMOVAL AND INSTALLATION	4-61
IAT SENSOR INSPECTION	4-61
IAT SENSOR REMOVAL AND INSTALLATION	4-61
AP SENSOR INSPECTION	4-61
AP SENSOR REMOVAL AND INSTALLATION	4-61
TO SENSOR INSPECTION	4-61
TO SENSOR REMOVAL AND INSTALLATION	4-61
STP SENSOR INSPECTION	4-62
STP SENSOR REMOVAL AND INSTALLATION	4-62
STP SENSOR ADJUSTMENT	4-62


PRECAUTIONS IN SERVICING

When handling the component parts or servicing the FI system, observe the following points for the safety of the system.


ELETRICAL PARTS

CONNECTOR/COUPLER


- When connecting a connector, be sure to push it in until a click is felt.
- With a lock type coupler, be sure to release the lock when disconnecting, and push it in fully till the works when connecting it.
- When disconnecting the coupler, be sure to hold the coupler body and do not pull the lead wires.
- Inspect each terminal on the connector/coupler for looseness or bending.
- Inspect each terminal for corrosion and contamination.
 The terminals must be clean and free of any foreign material which could impede proper terminal contact.

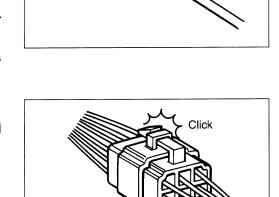

 Inspect each lead wire circuit for poor connection by shaking it by hand lightly. If any abnormal condition is found, repair or replace.

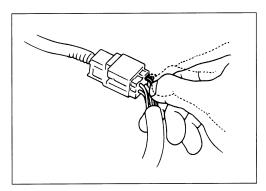

 When taking measurements at electrical connectors using a tester probe, be sure to insert the probe from the wire harness side (backside) of the connector/coupler.

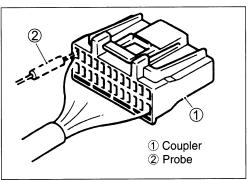

 When connecting meter probe from the terminal side of the coupler (connection from harness side not being possible), use extra care not to force and cause the male terminal to bend or the female terminal to open.

Connect the probe as shown to avoid opening of female terminal.


Never push in the probe where male terminal is supposed to fit.

 Check the male connector for bend and female connector for excessive opening. Also check the coupler for locking (looseness), corrosion, dust, etc.

2 3 1 Coupler 2 Probe 3 Where male terminal fits


FUSE

- When a fuse blows, always investigate the cause correct it and then replace the fuse.
- Do not use a fuse of a different capacity.
- Do not use wire or any other substitute for the fuse.

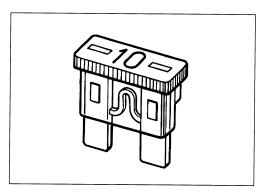


ECM/VARIOUS SENSORS


 Since each component is a high-precision part, great care should be taken not to apply any sharp impacts during removal and installation.

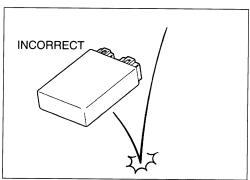


Be careful not to touch the electrical terminals of the ECM.
 The static electricity from your body may damage this part.

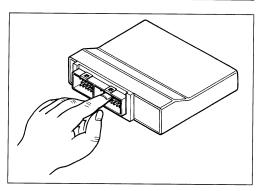

 When disconnecting and connecting the ECM, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

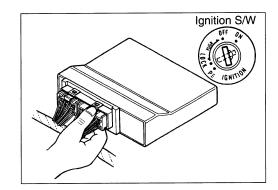


 Battery connection in reverse polarity is strictly prohibited.
 Such a wrong connection will damage the components of the FI system instantly when reverse power is applied.

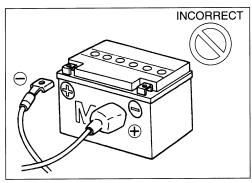


 Removing any battery terminal of a running engine is strictly prohibited.

The moment such removal is made, damaging counter electromotive force will be applied to the ECM which may result in serious damage.

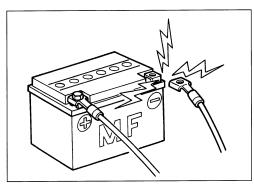

 Before measuring voltage at each terminal, check to make sure that battery voltage is 11 V or higher. Terminal voltage check at low battery voltage will lead to erroneous diagnosis.

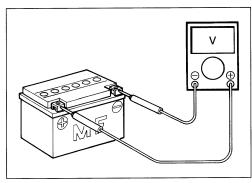

- Never connect any tester (voltmeter, ohmmeter, or whatever) to the ECM when its coupler is disconnected.
 Otherwise, damage to ECM may result.
- Never connect an ohmmeter to the ECM with its coupler connected. If attempted, damage to ECM or sensors may result.
- Be sure to use a specified voltmeter/ohmmeter. Otherwise, accurate measurements may not be obtained and personal injury may result.


ELECTRICAL CIRCUIT INSPECTION PROCEDURE

While there are various methods for electrical circuit inspection, described here is a general method to check for open and short circuit using an ohmmeter and a voltmeter.

OPEN CIRCUIT CHECK

Possible causes for the open circuits are as follows. As the cause can exist in the connector/coupler or terminal, they need to be checked carefully.

- Loose connection of connector/coupler.
- Poor contact of terminal (due to dirt, corrosion or rust, poor contact tension, entry of foreign object etc.)
- Wire harness being open.
- Poor terminal-to-wire connection
- Disconnect the negative cable from the battery.
- Check each connector/coupler at both ends of the circuit being checked for loose connection. Also check for condition of the coupler lock if equipped.

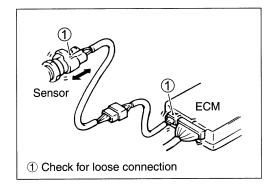


 Using a test male terminal, check the female terminals of the circuit being checked for contact tension.


Check each terminal visually for poor contact (possibly caused by dirt, corrosion, rust, entry of foreign object, etc.). At the same time, check to make sure that each terminal is fully inserted in the coupler and locked.

If contact tension is not enough, rectify the contact to increase tension or replace.

The terminals must be clean and free of any foreign material which could impede proper terminal contact.

 Using continuity inspect or voltage check procedure as described below, inspect the wire harness terminals for open circuit and poor connection. Locate abnormality, if any.

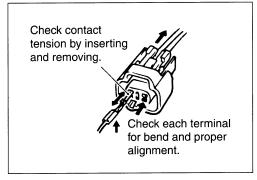


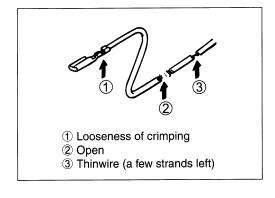


Continuity check


• Measure resistance across coupler (B) (between (A) and (C) in the figure).

 If no continuity is indicated (infinity or over limit), the circuit is open between terminals (A) and (C).



If no continuity is indicated, the circuit is open between couplers $\widehat{\mathbb{B}}$ and $\widehat{\mathbb{B}}$. If continuity is indicated, there is an open circuit between couplers $\widehat{\mathbb{B}}$ ' and $\widehat{\mathbb{C}}$ or an abnormality in coupler $\widehat{\mathbb{B}}$ ' or coupler $\widehat{\mathbb{C}}$.

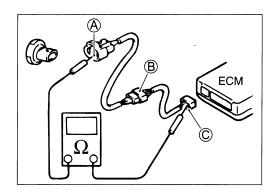

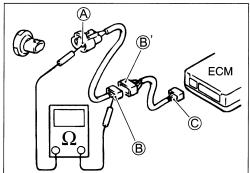

VOLTAGE CHECK

If voltage is supplied to the circuit being checked, voltage check can be used as circuit check.

 With all connectors/couplers connected and voltage applied to the circuit being checked, measure voltage between each terminal and body ground.

If measurements were taken as shown in the figure at the right and results are as listed below, it means that the circuit is open between terminals A and B.

Voltage Between:

© and body ground: Approx. 5 V B and body ground: Approx. 5 V

(A) and body ground:

0 V

Also, if measured values are as listed below, a resistance (abnormality) exists which causes the voltage drop in the circuit between terminals A and B.


Voltage Between:

© and body ground: Approx. 5 V

B and body ground: Approx. 5 V———2 V voltage drop

A and body ground:

3 V----

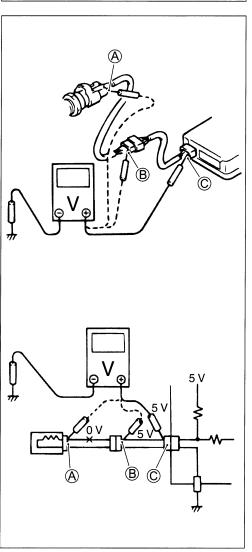


SHORT CIRCUIT CHECK (WIRE HARNESS TO GROUND)

- Disconnect the negative cable from the battery.
- Disconnect the connectors/couplers at both ends of the circuit to be checked.

NOTE:


If the circuit to be checked branches to other parts as shown, disconnect all connectors/couplers of those parts. Otherwise, diagnosis will be misled.

Measure resistance between terminal at one end of circuit (A) terminal in figure) and body ground. If continuity is indicated, there is a short circuit to ground between terminals A and C.

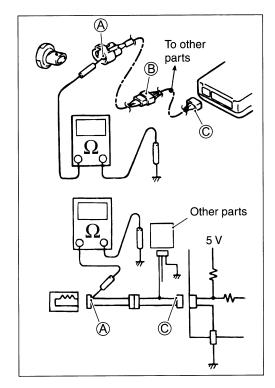

Disconnect the connector/coupler included in circuit (coupler
 B) and measure resistance between terminal A and body ground.

If continuity is indicated, the circuit is shorted to the ground between terminals (A) and (B).

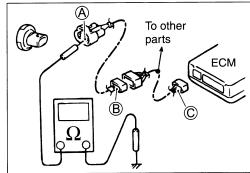

USING TESTERS

- Use the Suzuki multi-circuit tester set (09990-25008).
- Use well-charged batteries in the tester.
- Be sure to set the tester to the correct testing range.

USING THE TESTER


- Incorrectly connecting the ⊕ and ⊕ probes may cause the inside of the tester to burnout.
- If the voltage and current are not known, make measurements using the highest range.
- When measuring the resistance with the multi-circuit tester, ∞ will be shown as 10.00 M Ω and "1" flashes in the display.
- Check that no voltage is applied before making the measurement. If voltage is applied the tester may be damaged.
- After using the tester, turn the power off.



NOTE:

- * When connecting the multi-circuit tester, use the needle pointed probe to the back side of the lead wire coupler and connect the probes of tester to them.
- * Use the needle pointed probe to prevent the rubber of the water proof coupler from damage.


09900-25009: Needle pointed probe set

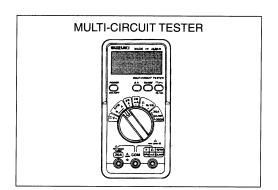

FI SYSTEM TECHNICAL FEATURES INJECTION TIME (INJECTION VOLUME)

The factors to determine the injection time include the basic fuel injection time, which is calculated on the basis of intake air pressure, engine speed and throttle opening angle, and various compensations.

These compensations are determined according to the signals from various sensors that detect the engine and driving conditions.

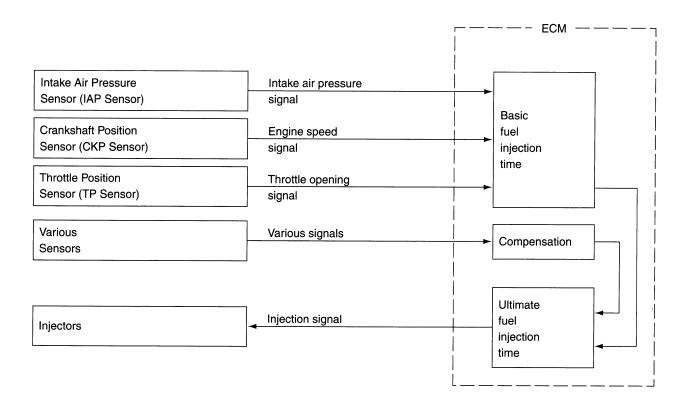

The following different signals are output from the respective sensors for compensation of the fuel injection time (volume).

SIGNAL	DESCRIPTION
ATMOSPHERIC PRESSURE SENSOR	When atmospheric pressure is low, the sensor sends the
SIGNAL	signal to the ECM and reduce the injection time (volume).
ENGINE COOLANT TEMPERATURE SEN-	When engine coolant temperature is low, injection time (vol-
SOR SIGNAL	ume) is increased.
INTAKE AIR TEMPERATURE SENSOR	When intake air temperature is low, injection time (volume)
SIGNAL	is increased.
BATTERY VOLTAGE SIGNAL	ECM operates on the battery voltage and at the same time,
	it monitors the voltage signal for compensation of the fuel
	injection time (volume). A longer injection time is needed to
	adjust injection volume in the case of low voltage.
ENGINE RPM SIGNAL	At high speed, the injection time (volume) is increased. This
	is the compensation of the SRAD.
STARTING SIGNAL	When starting engine, additional fuel is injected during
	cranking engine.
ACCELERATION SIGNAL/	During acceleration, the fuel injection time (volume) is
DECELERATION SIGNAL	increased in accordance with the throttle opening speed and
	engine rpm. During deceleration, the fuel injection time (vol-
	ume) is decreased.


INJECTION STOP CONTROL


SIGNAL	DESCRIPTION
TIP OVER SENSOR SIGNAL (FUEL SHUT-OFF)	When the motorcycle tips over, the tip over sensor sends a signal to the ECM. Then, this signal cuts OFF current supplied to the fuel pump, fuel injector and ignition coil.
OVER-REV. LIMITER SIGNAL	The fuel injectors stop operation when engine rpm reaches rev. limit rpm.

INJECTION TIMING

The system employs a sequential, four-cylinder independent injection type, using the crankshaft position sensor (signal generator) to determine the piston position (injection timing and ignition timing) and the camshaft position sensor to identify the cylinder during operation, and these information are sent to the ECM. This makes it possible to inject the optimum volume of fuel in the best timing for the engine operating conditions.


When the crankshaft begins to turn at the time of starting, the ECM sends the signals to the four injectors, #1, #2, #3 and #4 to have them inject fuel simultaneously. From the second turn onward, the sequential four-cylinder independent injection occurs as explained above.

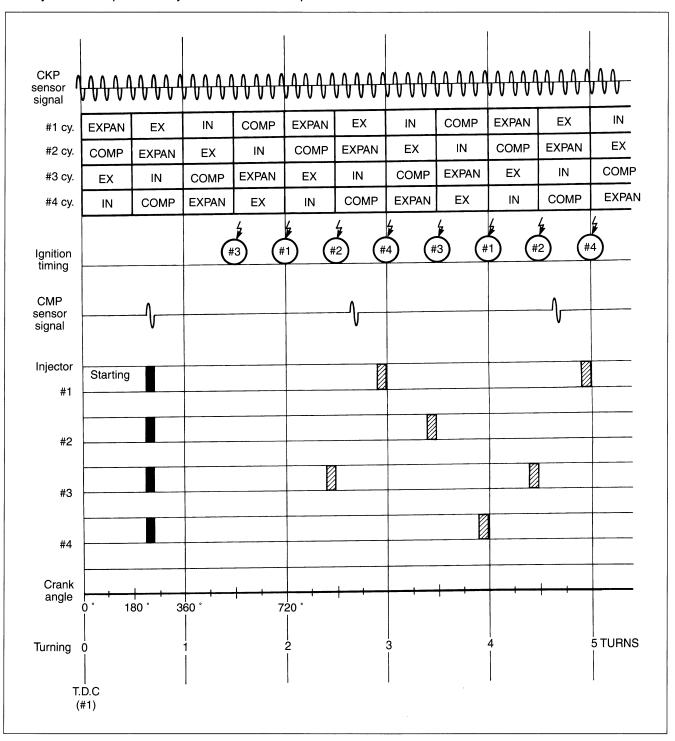

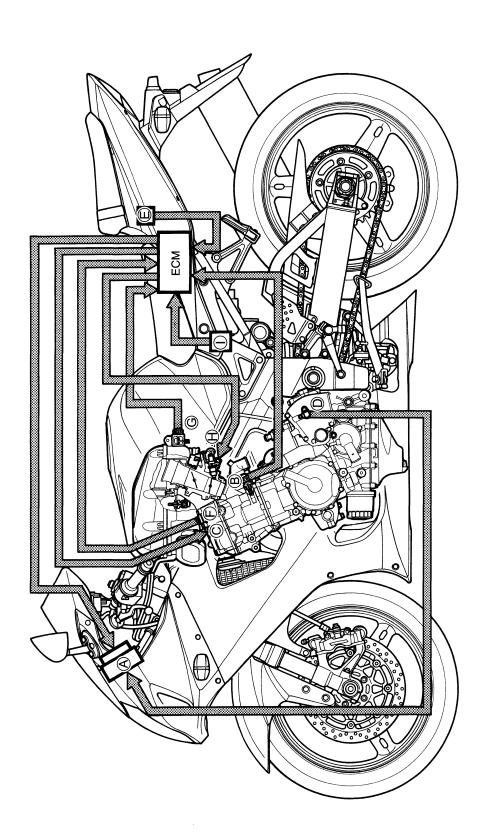

⊕ Camshaft position sensor (CMPS)
 ⊚ Intake air pressur sensor (IAPS)
 ⊕ Fuel injector (FI)
 ⊕ Tip over sensor (TOS)

(A) Speedometer
(B) Engine coolant temperature sensor (ECTS)
(C) Ignition coil (IG COIL)
(D) Speed sensor
(E) Atmospheric pressure sensor (APS)

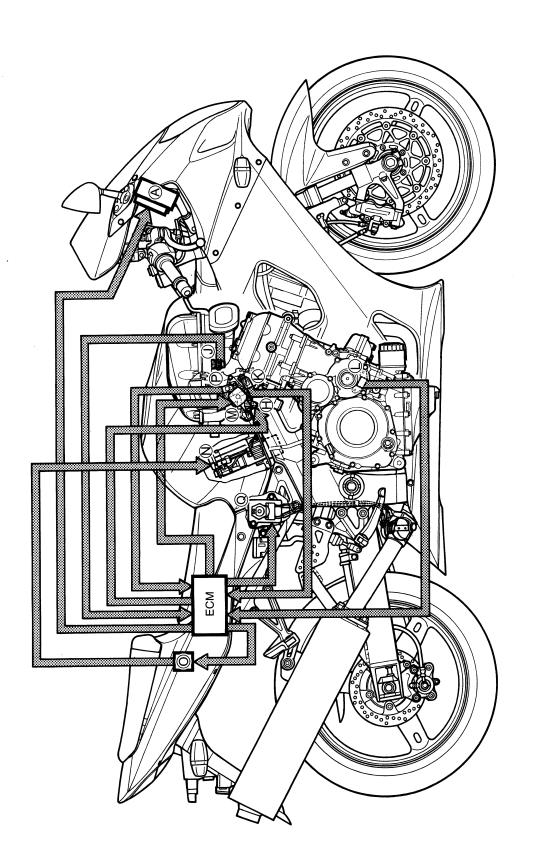

Intake air temperature sensor (IATS)
 Throttle position sensor (TPS)
 Crankshaft position sensor (CKPS)
 Secondary throttle valve actuator (STVA)


⁽N Fuel pump (FP)

© Fuel pump relay (FP RELAY)

(P) Secondary throttle position sensor (STPS)

(Q) Exhaust control valve actuator (EXCVA)

FI SYSTEM WIRING DIAGRAM

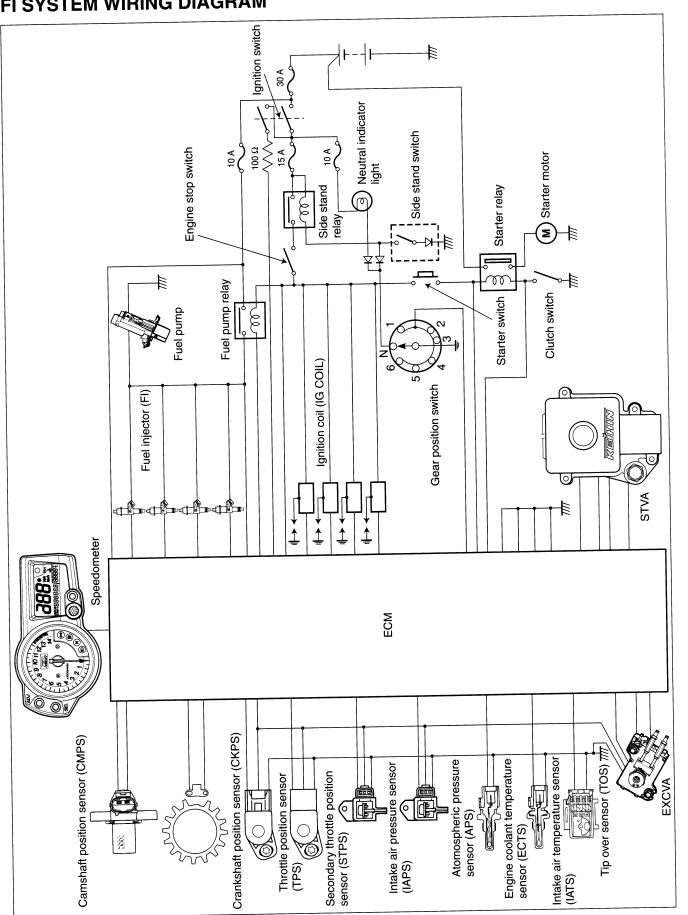

SELF-DIAGNOSIS FUNCTION

The self-diagnosis function is incorporated in the ECM. The function has two modes, "User mode" and "Dealer mode". The user can only be notified by the LCD (DISPLAY) panel and LED (FI light). To check the function of the individual FI system devices, the dealer mode is prepared. In this check, the special tool is necessary to read the code of the malfunction items.

USER MODE

MALFUNCTION	LCD (DISPLAY) INDICATION	FI LIGHT INDICATION	INDICATION MODE
"NO"	Coolant temperature		_
"YES" Engine can start	Coolant temperature and "FI" letters *1	FI light turns ON.	Each 2 sec. Coolant temperature or "FI" is indicated.
Engine can not start	"FI" letter *2	FI light turns ON and blinks.	"FI" is indicated continuously.

*1

When one of the signals is not received by ECM, the fail-safe circuit works and injection is not stopped. In this case, "FI" and coolant temperature are indicated in the LCD panel and motorcycle can run.

*2

The injection signal is stopped, when the camshaft position sensor signal, crankshaft position sensor signal, tip over sensor signal, #1, #2, #3 and #4 ignition signals, #1, #2, #3 and #4 injector signals, fuel pump relay signal or ignition switch signal is not sent to ECM. In this case, "FI" is indicated in the LCD panel. Motorcycle does not run.

"CHEC": The LCD panel indicates "CHEC" when no communication signal from the ECM is received for 5 seconds.

For Example

: The ignition switch is turned ON, and the engine stop switch is turned OFF. In this case, the speed-ometer does not receive any signal from ECM, and the panel indicates "CHEC".

If CHEC is indicated, the LCD does not indicate the trouble code. It is necessary to check the wiring harness between ECM and speedometer couplers.

The possible cause of this indication is as follows;

Engine stop switch is in OFF position. Side-stand/ignition inter-lock system is not working. Ignition fuse is burnt.

NOTE:

Until starting the engine, the FI light turns ON.


The FI light is also turned ON when engine temperature is high or oil pressure is low.


DEALER MODE

The defective function is memorized in the computer. Use the special tool's coupler to connect to the dealer mode coupler. The memorized malfunction code is displayed on LCD (DISPLAY) panel. Malfunction means that the ECM does not receive signal from the devices. These affected devices are indicated in the code form.

09930-82720: Mode select switch



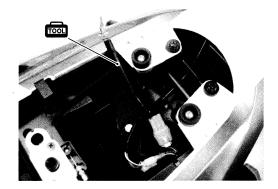

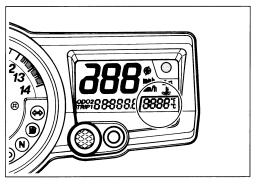

CAUTION

Before checking the malfunction code, do not disconnect the ECM lead wire couplers. If the couplers from the ECM are disconnected, the malfunction code memory is erased and the malfunction code can not be checked.

MALFUNCTION	LCD (DISPLAY) INDICATION	FI LIGHT INDICATION	INDICATION MODE
"NO"	C00	•	_
"YES"	C**code is indicated from small numeral to large one.		For each 2 sec., code is indicated.

CODE	MALFUNCTION PART	REMARKS
C00	None	No defective part
C11	Camshaft position sensor (CMPS)	
C12	Crankshaft position sensor (CKPS)	Pick-up coil signal, signal generator
C13	Intake air pressure sensor (IAPS)	
C14	Throttle position sensor (TPS)	*1
C15	Engine coolant temperature sensor (ECTS)	
C21	Intake air temperature sensor (IATS)	
C22	Atmospheric pressure sensor (APS)	
C23	Tip over sensor (TOS)	
C24	Ignition signal #1 (IG coil #1)	For #1 cylinder
C25	Ignition signal #2 (IG coil #2)	For #2 cylinder
C26	Ignition signal #3 (IG coil #3)	For #3 cylinder
C27	Ignition signal #4 (IG coil #4)	For #4 cylinder
C28	Secondary throttle valve actuator (STVA)	*2
C29	Secondary throttle position sensor (STPS)	
C31	Gear position signal (GP switch)	
C32	Injector signal #1 (FI #1)	For #1 cylinder
C33	Injector signal #2 (FI #2)	For #2 cylinder
C34	Injector signal #3 (FI #3)	For #3 cylinder
C35	Injector signal #4 (FI #4)	For #4 cylinder
C41	Fuel pump control system (FP control system)	Fuel pump, Fuel pump relay
C42	Ignition switch signal (IG switch signal)	Anti-theft
C46	Exhaust control valve actuator (EXCVA)	

In the LCD (DISPLAY) panel, the malfunction code is indicated from small code to large code.

*1

To get the proper signal from the throttle position sensor, the sensor basic position is indicated in the LCD (DISPLAY) panel. The malfunction code is indicated in three digits. In front of the three digits, a line appears in any of the position, upper, middle or lower line. If the indication is upper or lower line when engine rpm is 1 150 rpm, slightly turn the throttle position sensor and bring the line to middle.

In the normal condition, the throttle valve stop screw pushes throttle valves slightly, and indication point is middle line.

*2

When the secondary throttle valve actuator and secondary throttle position sensor signals are not sent to ECM. In this case, C29 is indicated.


TPS ADJUSTMENT


- 1.Adjust the engine rpm to 1 150 rpm. (2-15)
- 2. Connect the special tool (Mode select switch) to the dealer mode coupler at the wiring harness.
- 3.If the throttle position sensor adjustment is necessary, loosen the screws and turn the throttle position sensor and bring the line to middle.
- 4. Then, tighten the screws to fix the throttle position sensor.


09930-11950: Torx wrench

09930-82720: Mode select switch

The LCD indicates 0.4 sec./time, and two times show the correct position, where it is fixed.

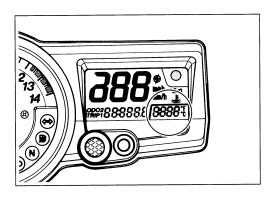

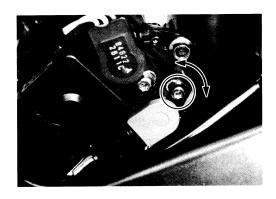

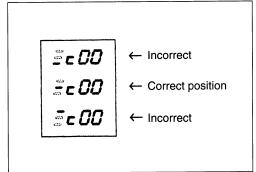

FAIL-SAFE FUNCTION

FI system is provided with fail-safe function to allow the engine to start and the motorcycle to run in a minimum performance necessary even under malfunction condition.

ITEM	FAIL-SAFE MODE	STARTING	RUNNING
	TAIL-SAI E MODE	ABILITY	ABILITY
Camshaft position sensor	When camshaft position signal has	"NO"	"YES"
	failed during running, the ECM	Motorcycle can run, but once engine	
	determines cylinder as # before	stops, engine can	not start.
	occurrence of such a failure.		
Crankshaft position sensor	The motorcycle stops.	"NO"	"NO"
Intake air pressure sensor	Intake air pressure is fixed to 760 mmHg.	"YES"	"YES"
Throttle position sensor	The throttle opening is fixed to full		
	open position.	"YES"	"YES"
	Ignition timing is also fixed.		
Engine coolant temperature	Engine coolant temperature value is	"YES"	"YES"
sensor	fixed to 80 °C (176 °F).	123	123
Intake air temperature	Intake air temperature value is fixed	"YES"	"YES"
sensor	to 40 °C (104 °F).		0
Atmospheric pressure	Atmospheric pressure is fixed to 760	"YES"	"YES"
sensor Ignition signal	mmHg. #1 Ignition-off	"YES"	"YES"
			linders can run.
	#2 Ignition-off	"YES"	"YES"
			linders can run.
	#3 Ignition-off	"YES"	"YES"
			linders can run.
	#4 Ignition-off	"YES"	"YES"
	#1 Fuel-cut	#1, #2 & #3 cyl "YES"	"YES"
Injection signal	#1 Fuel-Gut		1
	#2 Fuel-cut	"YES"	inders can run. "YES"
	#2 i del-cut		linders can run.
	#3 Fuel-cut	"YES"	"YES"
		#1, #2 & #4 cyl	L
	#4 Fuel-cut	"YES"	"YES"
	#4 uel-cut		
		#1, #∠ α #3 Cyl	inders can run.

The engine can start and can run even if the above signal is not received from each sensor. But, the engine running condition is not complete, providing only emergency help (by fail-safe circuit). In this case, it is necessary to bring the motorcycle to the workshop for complete repair.

When two ignition signals or two injector signals are not received by ECM, the fail-safe circuit can not work and ignition or injection is stopped.

FI SYSTEM TROUBLESHOOTING **CUSTOMER COMPLAINT ANALYSIS**

Record details of the problem (failure, complaint) and how it occurred as described by the customer. For this purpose, use of such an inspection form will facilitate collecting information to the point required for proper analysis and diagnosis.

EXAMPLE: CUSTOMER PROBLEM INSPECTION FORM

User name:	Model:	VIN:		
Date of issue:	Date Reg.	Date of problem:	Mileage:	
Malfunction indicator	☐ Always ON ☐ Some	etimes ON Always OFF	☐ Good condition	
lamp condition (LED)				
Malfunction display/code	User mode: ☐ No display	☐ Malfunction display ()	
(LCD)	Dealer mode: ☐ No code	☐ Malfunction code ()	
	PROBLEM	SYMPTOMS		
□ Difficult Starting		☐ Poor Driveability		
☐ No cranking		☐ Hesitation on accelerate	ion	
☐ No initial combustion		□ Back fire/□ After fire		
☐ No combustion		□ Lack of power		
☐ Poor starting at		☐ Surging		
(□ cold □ warm □ always)		☐ Abnormal knocking		
☐ Other		□ Engine rpm jumps briefly		
		☐ Other		
☐ Poor Idling	□ Poor Idling □ Engine Stall when			
☐ Poor fast Idle		☐ Immediately after start		
☐ Abnormal idling speed		☐ Throttle valve is opened		
(□ High □ Low) (r/min)		☐ Throttle valve is closed		
☐ Unstable		□ Load is applied		
☐ Hunting (r/min. to	r/min)	☐ Other		
□ Other				
☐ OTHERS:	□ OTHERS:			


MOTORCYCLE/ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS				
	Environmental condition			
Weather	☐ Fair ☐ Cloudy ☐ Rain ☐ Snow ☐ Always ☐ Other			
Temperature	☐ Hot ☐ Warm ☐ Cool ☐ Cold (°F/ °C) ☐ Always			
Frequency	☐ Always ☐ Sometimes (times/ day, month) ☐ Only once			
	☐ Under certain condition			
Road	☐ Urban ☐ Suburb ☐ Highway ☐ Mountainous (☐ Uphill ☐ Downhill)			
	☐ Tarmacadam ☐ Gravel ☐ Other			
	Motorcycle condition			
Engine condition	☐ Cold ☐ Warming up phase ☐ Warmed up ☐ Always ☐ Other at starting			
	☐ Immediately after start ☐ Racing without load ☐ Engine speed (r/min)			
Motorcycle con-	During driving: ☐ Constant speed ☐ Accelerating ☐ Decelerating			
dition	☐ Right hand corner ☐ Left hand corner ☐ At stop			
	☐ Motorcycle speed when problem occurs (km/h, Mile/h)			
	☐ Other			


NOTE:


^{*} The above form is a standard sample. It should be modified according to conditions characteristic of each market.

SELF-DIAGNOSTIC PROCEDURES

 - Don't disconnect couplers from ECM, battery cable from battery, ECM ground wire harness from engine or main fuse before confirming malfunction code (self-diagnostic trouble code) stored in memory. Such disconnection will erase memorized information in ECM memory.
- Malfunction code stored in ECM memory can be checked by the special tool.
- Before checking malfunction code, read SELF-DIAGNOSIS FUNCTION "USER MODE and DEALER MODE" (274-15, 16) carefully to have good understanding as to what functions are available and how to use it.
- Be sure to read "PRECAUTIONS for Electrical Circuit Service" (4-2) before inspection and observe what is written there.
- Remove the rear seat (seat tail cover).
- Connect the special tool to the dealer mode coupler (A) at the wiring harness, and start the engine or crank the engine for more than 4 seconds.
- Turn the special tool's switch ON and check the malfunction code to determine the malfunction part.




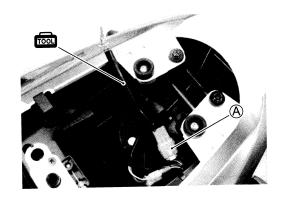

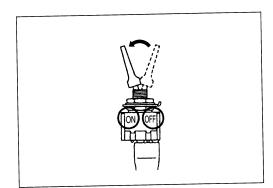

SELF-DIAGNOSIS RESET PROCEDURE

- After repairing the trouble, turn OFF the ignition switch and turn ON again.
- If the malfunction code indicates (C00), the malfunction is cleared.
- Disconnect the special tool from the dealer mode coupler.

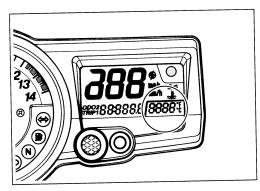

MALFUNCTION CODE AND DEFECTIVE CONDITION

MALFUNCTION	DETECTED ITEM	DETECTED FAILURE CONDITION
CODE	DETECTED ITEM	CHECK FOR
C00	NO FAULT	
C11	Camshaft position	The signal does not reach ECM for 4 sec. and more, after
	sensor	receiving the starter signal.
		The camshaft position sensor wiring and mechanical parts.
		(Camshaft position sensor, intake cam pin, wiring/coupler con-
		nection)
	Crankshaft position	The signal does not reach ECM for 4 sec. and more, after
C12	sensor	receiving the starter signal.
0.2		The crankshaft position sensor wiring and mechanical parts.
		(Crankshaft position sensor, lead wire/coupler connection)
	Intake air pressure	The sensor should produce following voltage.
C13	sensor	0.5 V ≤ sensor voltage < 4.85 V
		Without the above range, C13 is indicated.
		Intake air pressure sensor, lead wire/coupler connection.
	Throttle position sen-	The sensor should produce following voltage.
C14	sor	0.2 V ≤ sensor voltage < 4.8 V
		Without the above range, C14 is indicated.
		Throttle position sensor, lead wire/coupler connection.
	Engine coolant tem-	The sensor voltage should be the following.
	perature sensor	0.15 V ≤ sensor voltage < 4.85 V
C15		Without the above range, C15 is indicated.
		Engine coolant temperature sensor, lead wire/coupler connec-
		tion.
	Intake air temperature	The sensor voltage should be the following.
C21	sensor	0.15 V ≤ sensor voltage < 4.85 V
		Without the above range, C21 is indicated.
		Intake air temperature sensor, lead wire/coupler connection.
	Atmospheric pressure	The sensor voltage should be the following.
C22	sensor	0.5 V ≤ sensor voltage < 4.85 V
		Without the above range, C22 is indicated.
		Atm. pressure sensor, wiring/coupler connection.
	Tip over sensor	The sensor voltage should be the following for 2 sec. and more,
C23		after ignition switch turns ON.
		0.2 V ≤ sensor voltage ≤ 4.8 V
		Without the above value, C23 is indicated.
	Lange Street Control	Tip over sensor, lead wire/coupler connection.
C24/C25 C26/C27	Ignition signal	Crankshaft position sensor (pick-up coil) signal is produced, but
		signal from ignition coil is interrupted continuous by 8 times or
		more. In this case, the code C24, C25, C26 or C27 is indicated.
		Ignition coil, wiring/coupler connection, power supply from the
		battery.

MALFUNCTION CODE	DETECTED ITEM	DETECTED FAILURE CONDITION CHECK FOR
	Secondary throttle	When no actuator control signal is supplied from the ECM or
	valve actuator	communication signal does not reach ECM or operation voltage
C28		does not reach STVA motor, C28 is indicated. STVA can not
		operate.
		STVA lead wire/coupler.
	Secondary throttle	The sensor should produce following voltage.
	position sensor	0.15 V ≤ sensor voltage < 4.85 V
C29		Without the above value, C29 is indicated.
		Secondary throttle position sensor, lead wire/coupler connec-
		tion.
	Gear position signal	Gear position signal voltage should be higher than the following
		for 3 seconds and more.
C31		(Gear position sensor voltage > 0.6 V)
		Without the above value, C31 is indicated.
		Gear position sensor, wiring/coupler connection. Gearshift cam
		etc.
	Fuel injector	Crankshaft position sensor (pickup coil) signal is produced, but
C32/C33		fuel injector signal is interrupted continuous by 4 times or more.
C34/C35		In this case, the code C24, C25, C26 or C27 is indicated.
		Injector, wiring/coupler connection, power supply to the injector.
	Fuel pump relay	No voltage is applied to the fuel pump, although fuel pump relay
		is turned ON, or voltage is applied to fuel pump although fuel
C41		pump relay is turned OFF.
		Fuel pump relay, connecting lead wire, power source to fuel
		pump relay, fuel injectors.
C42	Ignition switch	Ignition switch signal is not input in ECM.
		Ignition switch, lead wire/coupler.
C46	Exhaust control valve	EXCVA position sensor produces following voltage.
	actuator	0.1 V ≤ sensor voltage < 4.9 V
		Without the above value, C46 is indicated. EXCVA motor can
		not move.
		EXCVA, EXCVA adjustment, lead wire/coupler.


"C11" CMP SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
The signal does not reach ECM for 4 sec. and more,	Metal particles or foreign material being
after receiving the starter signal.	attached on the CMP sensor and rotor tip.
	CMP sensor circuit open or short.
	CMP sensor malfunction.
	ECM malfunction.

INSPECTION

Step1

 - 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Remove the air cleaner box. (5-15)
- 3) Turn the ignition switch OFF.
- 4) Check the CMP sensor coupler for loose or poor contacts. If OK, then measure the CMP sensor resistance.



DATA CMP sensor resistance: $0.9 - 1.7 \text{ k}\Omega$

(Terminal - Terminal)

If OK, then check the continuity between each terminal and ground.

DATA CMP sensor continuity: $\infty \Omega$ (Infinity)


(Terminal – Ground)


09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

Is the resistance OK?


YES	Go to step 2.
NO	Replace the CMP sensor with a new one.

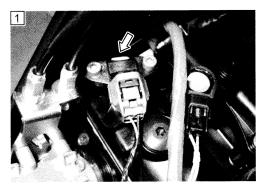

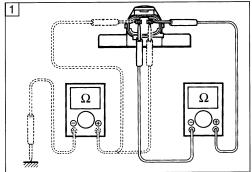

- 1) Disconnect the CMP sensor coupler.
- 2) Crank the engine a few seconds with the starter motor, and measure the CMP sensor peak voltage at the sensor.

 CMP sensor peak voltage: 0.5 V and more (+ B/Y - Br -)





If OK, then measure the CMP sensor peak voltage at the ECM terminals. $(\mathfrak{F} - \mathfrak{P})$

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (==)

YES	 B/Y or Br wire open or shorted to ground, or poor ③ or ④ connection. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for open circuit and poor connection. Replace the ECM with a new one, and inspect it
	again.
	Loose or poor contacts on the CMP sensor cou-
NO	pler or ECM coupler.
	Replace the CMP sensor with a new one.

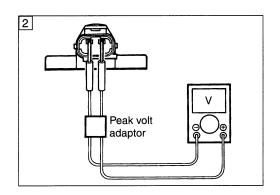

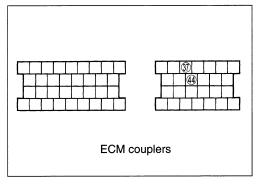


"C12" CKP SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
The signal does not reach ECM for 4 sec. and more,	Metal particles or foreign materiel being attached
after receiving the starter signal.	on the CKP sensor and rotor tip.
	CKP sensor circuit open or short.
	CKP sensor malfunction.
	ECM malfunction.

INSPECTION

Step1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the CKP sensor coupler ① for loose or poor contacts. If OK, then measure the CKP sensor resistance.

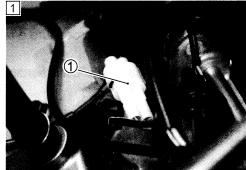

4) Disconnect the CKP sensor coupler ① and measure the resistance.

DATA CKP sensor resistance: $70 - 220 \Omega$

(Black - Green)

5) If OK, then check the continuity between each terminal and ground.

CKP sensor continuity: $\infty \Omega$ (Infinity)

(Black - Ground) (Green - Ground)


09900-25008: Multi circuit tester set

 \square Tester knob indication: Resistance (Ω)

Are the resistance and continuity OK?

YES	Go to step 2.
NO	Replace the CKP sensor with a new one.




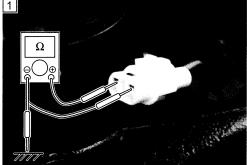

- 1) Disconnect the CKP sensor coupler.
- 2) Crank the engine a few seconds with the starter motor, and measure the CKP sensor peak voltage at the coupler.

CKP sensor peak voltage: 0.5 V and more

 
(+) Black - - Green)




09900-25008: Multi circuit tester set

Tester knob indication: voltage (==)

YES	 Black or Green wire open or shorted to ground, or poor ³⁶ or ⁴³ connection. If wire and connection are OK, intermittent trouble or foulty FCM
	ble or faulty ECM.Recheck each terminal and wire harness for open circuit and poor connection.
NO	 Loose or poor contacts on the CKP sensor coupler or ECM coupler. Replace the CKP sensor with a new one.

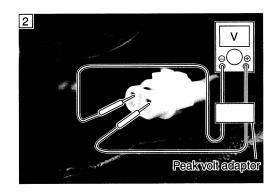

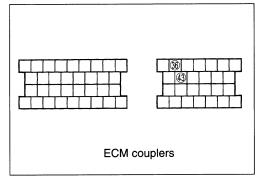


"C13" IAP SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
IAP sensor voltage low or high. 0.5 V ≤ Sensor voltage < 4.85 V (without the above range.) NOTE: Note that atmospheric pressure varies depending on weather conditions as well as altitude. Take that into consideration when inspecting voltage.	IAP sensor malfunction. COM molfunction.

INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the IAP sensor coupler for loose or poor contacts. If OK, then measure the IAP sensor input voltage.

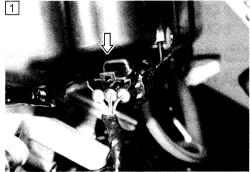

- 4) Disconnect the IAP sensor coupler.
- 5) Turn the ignition switch ON.
- 6) Measure the voltage at the Red wire and ground. If OK, then measure the voltage at the Red wire and B/Br wire.

IAP sensor input voltage: 4.5 – 5.5 V


(⊕ Red – ⊝ Ground)


(⊕ Red – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (===)

YES	Go to Step 2.
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the Red wire or B/Br wire.

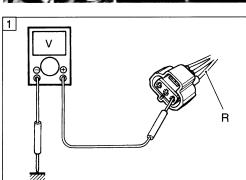

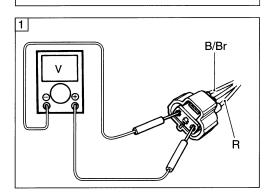

- 1) Connect the IAP sensor coupler.
- 2) Insert the needle pointed probes to the lead wire coupler. Start the engine at idle speed.
- 3) Measure the IAP sensor output voltage at the wire side coupler (between G/B and B/Br wires).

IAP sensor output voltage: Approx. 2.6 V at idle speed (⊕ G/B – ⊕ B/Br)

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (==)

YES	Go to Step 3.
	Check the vacuum hose for crack or damage.
NO	 Open or short circuit in the G/B wire.
	 Replace the IAP sensor with a new one.

Step 3

- 1) Remove the IAP sensor.
- 2) Connect the vacuum pump gauge to the vacuum port of the IAP sensor.


Arrange 3 new 1.5 V batteries in series (check that total voltage is 4.5-5.0 V) and connect \bigcirc terminal to the ground terminal and \oplus terminal to the Vcc terminal.


Check the voltage between Vout and ground. Also, check if voltage reduces when vacuum is applied up to 400 mmHg by using vacuum pump gauge. (32)


09917-47010: Vacuum pump gauge 09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

YES	Red, G/B or B/Br wire open or shorted to
	ground, or poor 48, 59 or 58 connection.
	• If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	 Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	If check result is not satisfactory, replace IAP sen-
	sor with a new one.

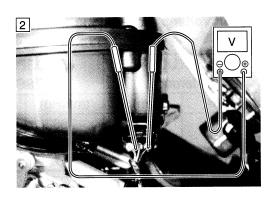

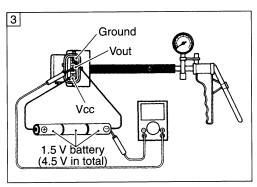

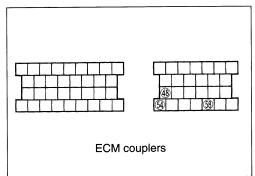

Output voltage (Vcc voltage 4.5 – 5.0 V, ambient temp. 20 – 30 °C, 68 – 86 °F)

ALTITUDE		ATMOSPHERIC		OUTPUT
(Reference)		PRESSURE		VOLTAGE
(ft)	(m)	(mmHg)	kPa	(V)
0 2 000	0 610	760 707	100 94	3.1 – 3.6
2 000	611	707	94	
				2.8 – 3.4
5 000	1 524	634	85	
5 001	1 524	634	85 	2.6 – 3.1
8 000	2 438	567	76	
8 001	2 439	567	76	2.4 – 2.9
10 000	3 048	526	70	

"C14" TP SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Output voltage low or high	TP sensor maladjusted.
Difference between actual throttle opening and	TP sensor circuit open or short.
opening calculated by ECM in larger than specified	TP sensor malfunction.
value.	ECM malfunction.
0.2 V ≤ Sensor voltage < 4.8V	
(without the above range.)	

INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (15-5)
- 2) Turn the ignition switch OFF.
- 3) Check the TP sensor coupler for loose or poor contacts. If OK, then measure the TP sensor input voltage.
- 4) Disconnect the TP sensor coupler ①.



- 6) Measure the voltage at the Red wire and ground.
- 7) If OK, then measure the voltage at the Red wire and B/Br wire.

TP sensor input voltage: 4.5 – 5.5 V

(**⊕** Red – **⊝** Ground)


(⊕ Red – ⊕ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

YES	Go to Step 2.
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the Red wire or B/Br wire.




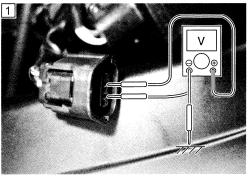

- 1) Turn the ignition switch OFF.
- 2) Disconnect the TP sensor coupler.
- 3) Check the continuity between terminal (A) and ground.

TP sensor continuity: $\infty \Omega$ (Infinity)

 (Terminal A – Ground)



5) Turn the throttle grip and measure the resistance.

DATA TP sensor resistance


Throttle valve is closed : Approx. 1.1 k Ω Throttle valve is opened: Approx. 4.3 k Ω


09900-25008: Multi circuit tester set

 \square Tester knob indication: Resistance (Ω)

Are the resistance and continuity OK?

YES	Go to Step 3.
NO	Reset the TP sensor position correctly.
	 Replace the TP sensor with a new one.

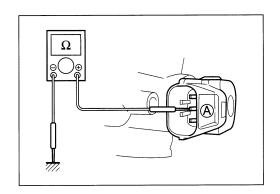

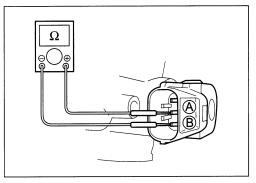

- 1) Connect the TP sensor coupler.
- 2) Insert the needle pointed probes to the injector/TP sensor lead wire $\,$

coupler.

3) Turn the ignition switch ON. Measure the TP sensor output voltage at the coupler (between ⊕ P/B and ⊕ B/Br) by turning the throttle grip.


DATA TP sensor output voltage


Throttle valve is closed: Approx. 1.1 V Throttle valve is opened: Approx. 4.3 V

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (---)

	Red, P/B or B/Br wire open or shorted to
YES	ground, or poor 49, 49 or 54 connection.
	If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	If check result is not satisfactory, replace TP sen-
	sor with a new one.

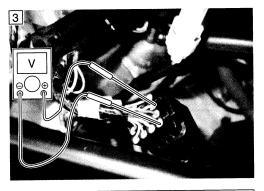

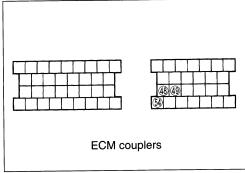

"C15" ECT SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Output voltage low or high	ECT sensor circuit open or short.
0.15 ≤ Sensor voltage < 4.85 V	ECT sensor malfunction.
(without the above range.)	ECM malfunction.

INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the ECT sensor coupler for loose or poor contacts. If OK, then measure the ECT sensor voltage at the wire side coupler.
- 4) Disconnect the coupler and turn the ignition switch ON.
- 5) Measure the voltage between B/BI wire terminal and ground.
- 6) If OK, then measure the voltage between B/BI wire terminal and B/Br wire terminal.

DATA ETC sensor voltage: 4.5 – 5.5 V

(**⊕** B/BI – **⊝** Ground)


(⊕ B/BI – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (==)

YES	Go to Step 2
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the B/BI wire or B/Br wire.



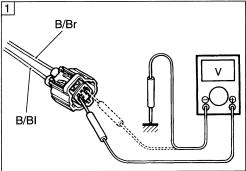

- 1) Turn the ignition switch OFF.
- 2) Measure the ECT sensor resistance.

DATA ECT sensor resistance:

Approx. $2.3 - 2.6 \text{ k}\Omega$ at 20 °C (68 °F)

(Terminal – Terminal)


09900-25008: Multi circuit tester set


Tester knob indication: Resistance (Ω)

Refer to page 7-8 for details. Is the resistance OK?

YES	B/Bl or B/Br wire open or shorted to ground, or
	poor 🗓 or 🔀 connection.
	If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	Replace the ECT sensor with a new one.

Engine Coolant Temp	Resistance
20 °C (68 °F)	Approx. 2.45 kΩ
50 °C (122 °F)	Approx. 0.811 kΩ
80 °C (176 °F)	Approx. 0.318 kΩ
110 °C (230 °F)	Approx. 0.142 kΩ

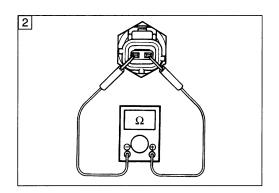

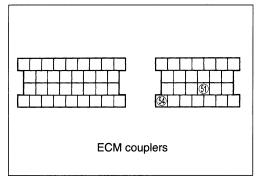

"C21" IAT SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Output voltage low or high	IAT sensor circuit open or short.
0.15 ≤ Sensor voltage < 4.85 V	IAT sensor malfunction.
(without the above range.)	ECM malfunction.

INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- Check the IAT sensor coupler for loose or poor contacts.
 If OK, then measure the IAT sensor voltage at the wire side coupler.
- 4) Disconnect the coupler and turn the ignition switch ON.
- 5) Measure the voltage between Dg wire terminal and ground.
- 6) If OK, then measure the voltage between Dg wire terminal and B/Br wire terminal.

DATA IAT sensor voltage: 4.5 – 5.5 V


(**⊕** Dg – **⊝** Ground)


(⊕ Dg – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

YES	Go to Step 2.
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the B/BI wire or B/Br wire.

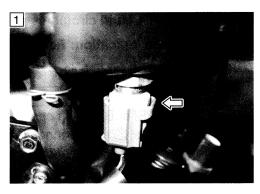

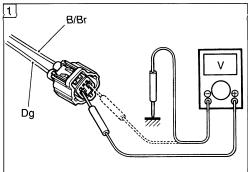

- 1) Turn the ignition switch OFF.
- 2) Measure the IAT sensor resistance.

DATA IAT sensor resistance:

Approx. 2.2 – 2.7 k Ω at 20 °C (68 °F)

(Terminal – Terminal)


09900-25008: Multi circuit tester set


 \square Tester knob indication: Resistance (Ω)

Is the resistance OK?

YES	Dg or B/Br wire open or shorted to ground, or
	poor ® or % connection.
	• If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	Replace the IAT sensor with a new one.

Intake Air Temp	Resistance
20 °C (68 °F)	Approx. 2.45 kΩ
50 °C (122 °F)	Approx. 0.808 kΩ
80 °C (176 °F)	Approx. 0.322 kΩ
110 °C (230 °F)	Approx. 0.148 kΩ

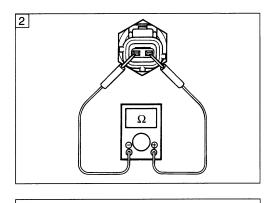

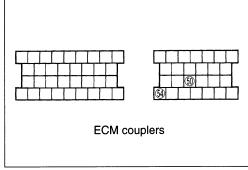

NOTE:


IAT sensor resistance measurement method is the same way as that of the ECT sensor. Refer to page 7-8 for details.

DETECTED CONDITION	POSSIBLE CAUSE
AP sensor voltage low or high.	Clogged air passage with dust.
0.5 V ≤ Sensor voltage < 4.85 V	 Red wire circuit open or shorted to ground.
(without the above range.)	 B/Br or G/Y wire circuit shorted to ground.
NOTE:	 AP sensor malfunction.
Note that atmospheric pressure varies depending on	ECM malfunction.
weather conditions as well as altitude.	
Take that into consideration when inspecting volt-	
age.	

INSPECTION

Step 1

- 1) Remove the front seat. (8-6)
- 2) Turn the ignition switch OFF.
- 3) Check the AP sensor coupler for loose or poor contacts. If OK, then measure the AP sensor input voltage.

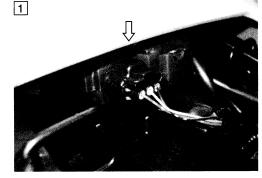

- 4) Disconnect the AP sensor coupler ①.
- 5) Turn the ignition switch ON.
- 6) Measure the voltage at the Red wire and ground. If OK, then measure the voltage at the Red wire and B/Br wire.

AP sensor input voltage: 4.5 – 5.5 V


(\oplus Red – \ominus Ground)


(⊕ Red – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

YES	Go to Step 2.
NO	Loose or poor contacts on the ECM coupler.Open or short circuit in the Red wire or B/Br
	wire.

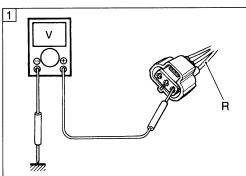

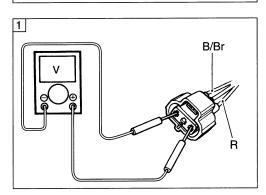

- 1) Connect the AP sensor coupler.
- 2) Insert the needle pointed probes to the lead wire coupler. Turn the ignition switch ON.
- 3) Measure the AP sensor output voltage at the wire side coupler (between G/Y and B/Br wires).

AP sensor output voltage: Approx. 2.6 V at

760 mmHg (100 kPa)

(⊕ G/Y – ⊝ B/Br)

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set



YES	Go to Step 3.
	Check the vacuum hose for crack or damage.
NO	 Open or short circuit in the G/Y wire.
	Replace the AP sensor with a new one.

Step 3

- 1) Remove the AP sensor.
- 2) Connect the vacuum pump gauge to the vacuum port of the AP sensor.


Arrange 3 new 1.5 V batteries in series (check that total voltage is 4.5-5.0 V) and connect \bigcirc terminal to the ground terminal and \oplus terminal to the Vcc terminal.


Check the voltage between Vout and ground. Also, check if voltage reduces when vacuum is applied up to 400 mmHg by using vacuum pump gauge. (+42)


09917-47010: Vacuum pump gauge 09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

	 Red, G/Y or B/Br wire open or shorted to
YES	ground, or poor 48, 52 or 54 connection.
	• If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	If check result is not satisfactory, replace AP sen-
	sor with a new one.

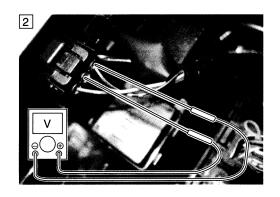

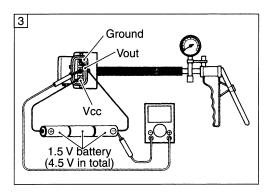

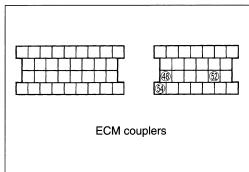

Output voltage (Vcc voltage 4.5 – 5.0 V, ambient temp. 20 – 30 °C, 68 – 86 °F)

ALTI	TUDE	ATMOS	PHERIC	OUTPUT
(Refe	rence)	PRES	SURE	VOLTAGE
(ft)	(m)	(mmHg)	kPa	(V)
0 2 000	0 610	760 707	100 94	3.1 – 3.6
2 001	611 1 524	707 634	94 85	2.8 – 3.4
5 001 8 000	1 524 2 438	634 567	85 76	2.6 – 3.1
8 001 10 000	2 439 3 048	567 526	76 70	2.4 – 2.9

"C23" TO SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Output voltage low or high	TO sensor circuit open or short.
0.2 ≦ Sensor voltage < 4.8 V	TO sensor malfunction.
(without the above range.)	ECM malfunction.

INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the TO sensor coupler for loose or poor contacts. If OK, then measure the TO sensor resistance.
- 4) Disconnect the TO sensor coupler.
- 5) Measure the resistance between Red wire and B/Br wire terminals.


DATA TO sensor resistance: 19.1 – 19.7 k Ω (Red – B/Br)


09900-25008: Multi circuit tester set

 \square Tester knob indication: Resistance (Ω)

Is the resistance OK?

YES	Go to Step 2.
NO	Replace the TO sensor with a new one.

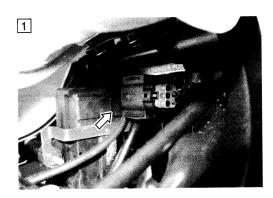

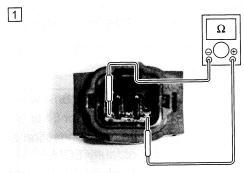

- 1) Connect the TO sensor coupler.
- 2) Insert the needle pointed probes to the lead wire coupler.
- 3) Turn the ignition switch ON.
- 4) Measure the voltage at the wire side coupler between Black and B/Br wires.

DATA TO sensor voltage: 0.4 – 1.4 V

(⊕ Black – ⊝ B/Br)

Also, measure the voltage when leaning of the motorcycle.

5) Dismount the TO sensor from its bracket and measure the voltage when it is leaned more than 65 °, left and right, from the horizontal level.

DATA TO sensor voltage: 3.7 – 4.4 V


(⊕ Black – ⊝ B/Br)


09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set


Tester knob indication: Voltage (===)

Is the voltage OK?

YES	Red, Black or B/Br wire open or shorted to
	ground, or poor onumber of the ground, or poor onumber of the ground, or poor onumber of the ground, or onumber of the groun
	• If wire and connection are OK, intermittent trou-
	ble or faulty ECM.
	 Recheck each terminal and wire harness for
	open circuit and poor connection.
NO	Loose or poor contacts on the ECM coupler.
	Open or short circuit.
	Replace the TO sensor with a new one.

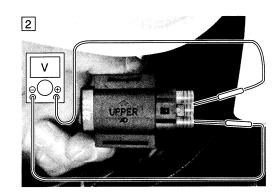

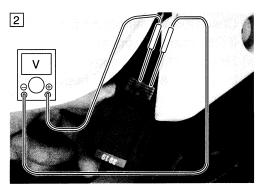

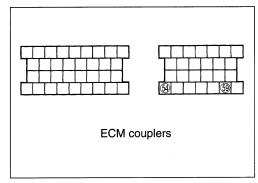

"C24", "C25", "C26" or "C27" IGNITION SYSTEM MALFUNCTION

*Refer to the IGNITION SYSTEM for details. (9-18)


"C28" STV ACTUATOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
The operation voltage does not reach the STVA.	STVA malfunction.
ECM does not receive communication signal from	STVA circuit open or short.
the STVA.	STVA motor malfunction.


INSPECTION

Step 1

- 1) Lift and support the fuel tank with its prop stay. (\$\sumset 5-5\$)
- 2) Remove the air cleaner element.
- 3) Turn the ignition switch OFF.
- 4) Check the STVA lead wire coupler for loose or poor contacts.

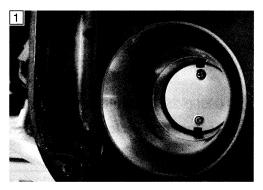

5) Turn the ignition switch ON to check the STVA operation. (STV operating order: Full open \rightarrow 95 % open)

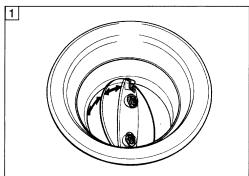

Is the operation OK?

YES	Go to Step 2.
NO	 Loose or poor contacts on the STVA coupler. Open or short circuit in the (Pink or Black) and (W/Bl or Green) wires.

- 1) Turn the ignition switch OFF.
- 2) Disconnect the STVA lead wire coupler.
- 3) Check the continuity between each wire and ground.

DATA STVA continuity: $\infty \Omega$ (Infinity)

If OK, then measure the STVA resistance. (between Pink and Black wires) and (between W/BI and Green wires)

DATA STVA resistance: Approx. 6.5 Ω

(⊕ Pink – ⊖ Black)


(**⊕** W/BI – **⊝** Green)


09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

Is the resistance OK?

YES	 Loose or poor contacts on the STVA coupler. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for open circuit and poor connection. Replace the ECM with new one, and inspect it again.
NO	Replace the STVA with a new one.

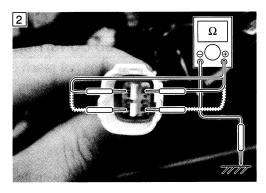

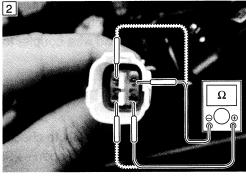


"C29" STP SENSOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Signal voltage low or high.	STP sensor maladjusted.
Difference between actual throttle opening and	STP sensor circuit open or short.
opening calculated by ECM in larger than specified	STP sensor malfunction.
value.	ECM malfunction.
0.15 V ≤ Sensor voltage < 4.85 V	
(without the above range.)	

INSPECTION

Step 1

 - 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the STP sensor coupler for loose or poor contacts. If OK, then measure the STP sensor input voltage.



- 5) Turn the ignition switch ON.
- 6) Measure the voltage at the Red wire and ground. If OK, then measure the voltage at the Red wire and B/Br wire.


STP sensor input voltage: 4.5 – 5.5 V


(**⊕** Red – **⊝** Ground)


(⊕ Red – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

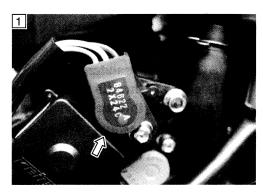

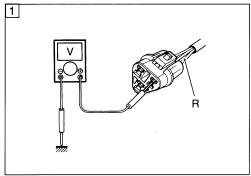

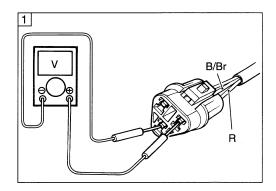

YES	Go to Step 2.
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the Red wire or B/Br wire.

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner element.
- 3) Disconnect the STP sensor coupler (White color).
- 4) Check the continuity between Yellow wire and ground.

STP sensor continuity: $\infty \Omega$ (Infinity) (Yellow wire – Ground)


- 5) If OK, then measure the STP sensor resistance at the coupler (between Yellow and Black wires).
- 6) Close and open the secondary throttle valve by finger, and measure the valve closing and opening resistance.

DATA STP sensor resistance


Secondary throttle valve is closed : Approx. 0.5 k Ω Secondary throttle valve is opened: Approx. 3.9 k Ω

09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

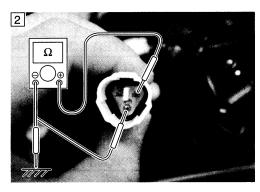



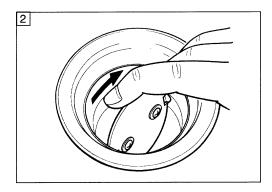

Is the resistance OK?

YES	Go to Step 3.	
NO	Reset the STP sensor position correctly.	
NO	 Replace the STP sensor with a new one. 	


- 1) Turn the ignition switch OFF.
- 2) Connect the STP sensor coupler.
- 3) Insert the needle pointed probes to the lead wire coupler.
- 4) Disconnect the STVA lead wire coupler.
- 5) Turn the ignition switch ON.
- 6) Measure the STP sensor output voltage at the coupler (between ⊕ Yellow and ⊝ Black wires) by turning the secondary throttle valve (close and open) with a finger.





Throttle valve is closed: Approx. 0.5 V Throttle valve is opened: Approx. 3.7 V

 
09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (---)

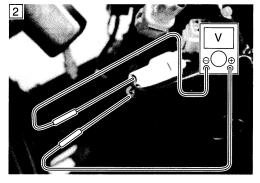


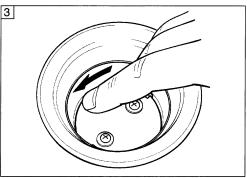

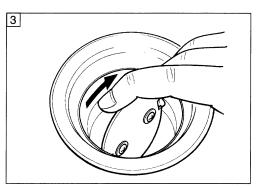



YES	 Blue, Yellow or Black wire open or shorted to ground, or poor ⑤ connection. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for open circuit and poor connection. Replace the ECM with a new one, and inspect it again.
NO	If check result is not satisfactory, replace STP
	sensor with a new one.

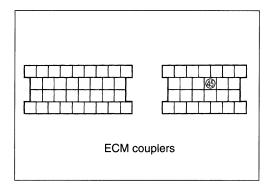


"C31" GEAR POSITION (GP) SWITCH CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
No Gear Position switch voltage	 Gear Position switch circuit open or short.
Switch voltage low.	 Gear Position switch malfunction.
Sensor voltage > 0.6 V	ECM malfunction.
(without the above range.)	

INSPECTION Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the GP switch coupler for loose or poor contacts. If OK, then measure the GP switch voltage.

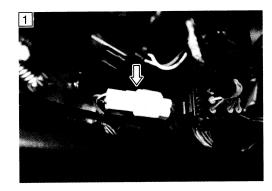


- 4) Support the motorcycle with a jack.
- 5) Turn the side-stand to up-right position.
- 6) Make sure the engine stop switch is in the "RUN" position.
- 7) Insert the needle pointed probes to the lead wire coupler.
- 8) Turn the ignition switch ON.
- 9) Measure the voltage at the wire side coupler between Pink wire and ground, when shifting the gearshift lever from 1st to Top.




09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (===)

YES	 Pink wire open or shorted to ground, or poor ⑤ connection. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for open circuit and poor connection. Replace the ECM with a new one, and inspect it again.
NO	Open or short circuit in the Pink wire.
	Replace the GP switch with a new one.

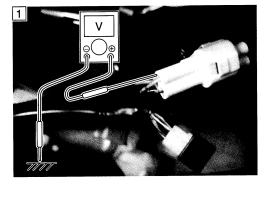

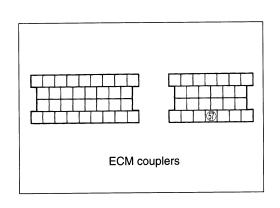


"C32", "C33", "C34" or "C35" FUEL INJECTOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
CKP signals produced but fuel injector signal is	Injector circuit open or short.
interrupted continuous by 4 times or more.	Injector malfunction.
	ECM malfunction.

INSPECTION


Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the injector coupler for loose or poor contacts. If OK, then measure the injector resistance.

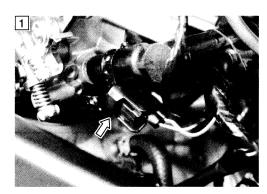

4) Disconnect the injector coupler and measure the resistance between terminals.

Injector resistance: $11 - 13 \Omega$ at 20 °C (68 °F) (Terminal – Terminal)

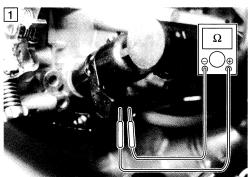

5) If OK, then check the continuity between each terminal and ground.

Injector continuity: $\infty \Omega$ (Infinity)


(Terminal – Ground)

09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

Is the resistance OK?

YES	Go to Step 2.
NO	Replace the Injector with a new one. (5-17)

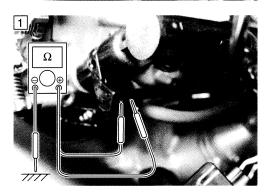

1) Turn the ignition switch ON.

2) Measure the injector voltage between Y/R wire and ground.

DATA Injector voltage: Battery voltage

(⊕ Y/R – ⊝ Ground)


NOTE:


Injector voltage can be detected only 3 seconds after ignition switch is turned ON.

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

YES	 Gr/W, Gr/B, Gr/Y, Gr/R or Y/R wire open or shorted to ground, or poor ④, ⑤, ⑥, ⑦ or ⑫ connection. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for open circuit and poor connection.
NO	Open circuit in the Y/R wire.

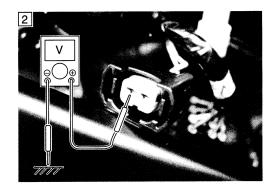

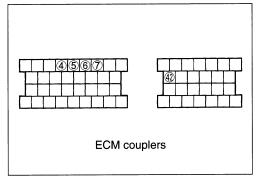

"C41" FP RELAY CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
No voltage is applied to fuel pump although fuel	Fuel pump relay circuit open or short.
pump relay is turned ON, or voltage is applied to fuel	Fuel pump relay malfunction.
pump although fuel pump relay is turned OFF.	ECM malfunction.


INSPECTION


Step 1

- 1) Remove the frame cover. (\$\sumsymbol{1}\$ 8-6)
- 2) Turn the ignition switch OFF.
- 3) Check the FP relay coupler for loose or poor contacts.
- 4) If OK, then check the insulation and continuity. Refer to page 5-9 for details.

Is the FP relay OK?

YES poor 9 or 17 If wire and country ble or faulty Recheck each	 Y/B or O/W wire open or shorted to ground, or poor ⑨ or ⑰ connection. If wire and connection are OK, intermittent trouble or faulty ECM. Recheck each terminal and wire harness for
	·
NO	Replace the FP relay with a new one.

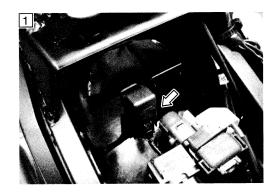

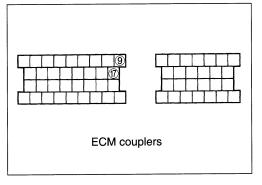

"C42" IG SWITCH CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
Ignition switch signal is not input in the ECM.	Ignition system circuit open or short.
	ECM malfunction.

INSPECTION


*Refer to the IGNITION SWITCH INSPECTION for details. (29-32)

"C46" EXCV ACTUATOR CIRCUIT MALFUNCTION

DETECTED CONDITION	POSSIBLE CAUSE
The operation signal does not reach the EXCV	EXCVA maladjusted.
actuator.	EXCVA circuit open or short.
EXCVA position sensor voltage low or high.	EXCVA motor malfunction.
0.1 ≤ Sensor voltage ≤ 4.9 V	EXCVA position sensor malfunction.
(without the above range.)	

INSPECTION Step 1

- 1) Lift and support the fuel tank with its prop stay. (5-5)
- 2) Turn the ignition switch OFF.
- 3) Check the EXCVA lead wire coupler for loose or poor contacts.
- 4) Turn the ignition switch ON.
- 5) Check the operation of the EXCVA.

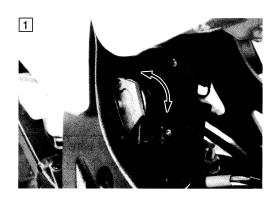

Is the operation OK?

YES	Go to Step 2.
NO	Go to Step 6.

- 1) Check the installation of EXCV cables. (6-14) If it is necessary, adjust the EXCV cables. (6-8)
- 2) Turn the ignition switch OFF.
- 3) Disconnect the EXCVA position sensor lead wire coupler.
- 4) Turn the ignition switch ON.
- 5) Measure the voltage between the Red wire terminal and ground.
- 6) If OK, then measure the voltage between the Red wire terminal and B/Br wire terminal.

PATA Position sensor input voltage: 4.5 – 5.5 V

(⊕ Red – ⊝ Ground)


(⊕ Red – ⊝ B/Br)

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)





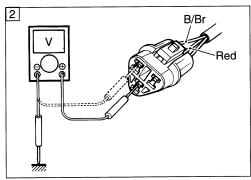


YES	Go to Step 3.
NO	 Loose or poor contacts on the ECM coupler. Open or short circuit in the Red wire or B/Br wire.

- 1) Turn the ignition switch OFF.
- 2) Check the continuity between Yellow wire and ground.

Position sensor continuity: $\infty \Omega$ (Infinity)

 3) If OK, then measure the position sensor resistance.



- 5) Set the EXCVA to adjustment position. (6-4)
- 6) Disconnect the position sensor coupler and measure the resistance. (between Yellow and White wires)


Position sensor resistance at adjustment position: Approx. 3.1 kΩ (⊕ Yellow – ⊕ White)

09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

Is the resistance OK?

YES	Go to Step 4.
NO	Replace the EXCVA with a new one.

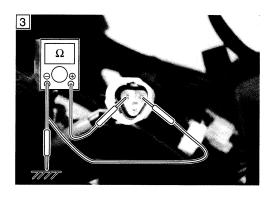



- 1) Turn the ignition switch OFF.
- 2) Connect the position sensor coupler.
- 3) Measure the position sensor output voltage at fully close position and fully open position.
- 4) Insert the needle pointed probes to the back side of the position sensor lead wire coupler. (⊕ Yellow ⊕ White)
- 5) Disconnect the EXCVA motor lead wire coupler ②.
- 6) To set the EXCV to fully close position, apply 12 volts to (A) and (B) terminals.

Positive wire – A (Pink wire) terminal Negative wire – B (Gray wire) terminal

- 7) Turn the ignition switch ON.
- 8) Measure the position sensor output voltage at fully close position.
- 9) Then, to set the EXCV to fully open position, apply 12 volts to ® and A terminals.

10) Measure the position sensor output voltage at fully open position.


PATA Position sensor output voltage


EXCV is fully close: 0.5 – 1.3 V EXCV is fully open: 3.7 – 4.5 V (⊕ Yellow – ⊕ White)


09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (---)

YES	Replace the ECM with a new one.
NO	Go to Step 5.

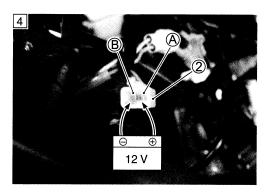

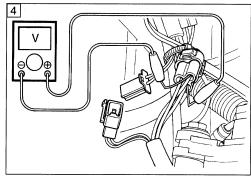

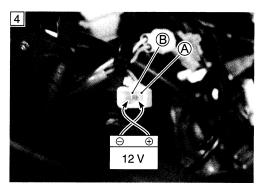

- 1) If the position sensor output voltage is 0.5 V and less at fully close position, adjust the output voltage to specified by turning out the No.1 cable adjuster ①.
- 2) Repeat the above procedure (Step 4) until the out put voltage becomes specified value. (If C46 code is indicated after adjusting the voltage, increase the voltage to 0.4 V.)

CAUTION


- * Adjusting the cable with the EXCV fully opened or fully closed can damage the EXCVA. Be sure to adjust the cable with the EXCV set in adjustment position. (5-6-4)
- * Do not turn the EXCVA pulley using the wrench.
- 3) If the position sensor output voltage is 4.5 V and more at fully open position, adjust the output voltage to specified by turning out the No.2 cable adjuster ②.

 Repeat the above procedure (Step 4) until the output voltage is within the specified value.

DATA Position sensor output voltage

EXCV is fully close: $0.5 \le \text{Output Voltage} \le 1.3$ EXCV is fully open : $3.7 \le \text{Output Voltage} \le 4.5$

YES	Replace the ECM with a new one
NO	Replace the EXCVA with a new one.

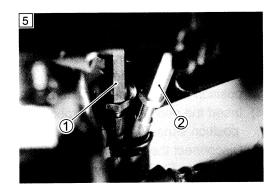


Step 6


- 1) Turn the ignition switch OFF.
- 2) Disconnect the motor lead wire coupler of the EXCVA.



3) Apply 12 volts to the terminal and check the operation of EXCVA.

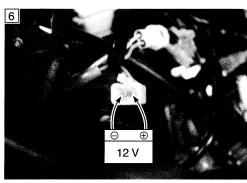

4) Then, swap the wires supplied 12 volts and check the operation of EXCVA.(Check the operation of EXCVA both way)

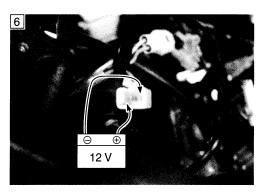

Is the operation OK?

YES	Loose or poor contacts on the EXCVA or ECM coupler.
NO	Replace the EXCVA with a new one.


SENSORS

CMP SENSOR INSPECTION

The camshaft position sensor is installed on the cylinder head cover. (4-26)

CMP SENSOR REMOVAL AND INSTALLATION

- Remove the CMP sensor. (3-28)
- Install the CMP sensor in the reverse order of removal.

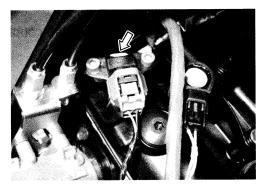


CKP SENSOR INSPECTION

The crankshaft position sensor is installed on the right side of middle crankcase cover. (4-28)

CKP SENSOR REMOVAL AND INSTALLATION

- Remove the generator cover. (3-23)
- Install the generator cover in the reverse order of removal.

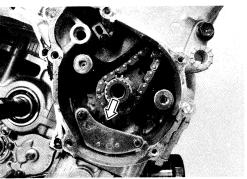


IAP SENSOR INSPECTION

The intake air pressure sensor is installed at the front side of the air cleaner case. (34-30)

IAP SENSOR REMOVAL AND INSTALLATION

- Lift and support the fuel tank with its prop stay. (\$\sumsymbol{1}^5-5\$)
- Remove the IAP sensor from the air cleaner box.
- Install the IAP sensor in the reverse order of removal.

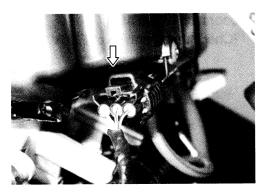

TP SENSOR INSPECTION


The throttle position sensor is installed at the right side of the No.4 throttle body. (4-33)

TP SENSOR REMOVAL AND INSTALLATION

- Remove the TP sensor. (5-17)
- Install the TP sensor in the reverse order of removal.

TPS ADJUSTMENT

• Adjust the TP sensor. (4-18)

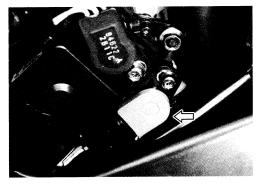

ECT SENSOR INSPECTION

The engine coolant temperature sensor is installed at the cylinder head. (4-36)

ECT SENSOR REMOVAL AND INSTALLATION

- Remove the ECT sensor. (\$\sumsymbol{17}7-8\$)
- Install the ECT sensor in the reverse order of removal. Pay attention to the following points:

■ ECT sensor: 18 N·m (1.8 kgf-m, 13 lb-ft)

IAT SENSOR INSPECTION

The intake air temperature sensor is installed on the right side of the air cleaner box. (34-38)

IAT SENSOR REMOVAL AND INSTALLATION

- Lift and support the fuel tank with its prop stay. (5-5)
- Remove the IAT sensor in the from the air cleaner box.
- Install the IAT sensor in the reverse order of removal. Pay attention to the following points:

■ IAT sensor: 18 N·m (1.8 kgf-m, 13 lb-ft)

AP SENSOR INSPECTION

The AP sensor is located under the front seat. (4-40)

AP SENSOR REMOVAL AND INSTALLATION

- Remove the AP sensor from the frame.
- Install the AP sensor in the reverse order of removal.


TO SENSOR INSPECTION TO SENSOR REMOVAL AND INSTALLATION


The tip over sensor is located under the fuel tank. (4-43)


- Lift and support the fuel tank with its prop stay. (5-5)
- Remove the TO sensor from the battery case.
- Install the TO sensor in the reverse order of removal.


NOTE:

When installing the TO sensor, the arrow mark (A) must be pointed upward.

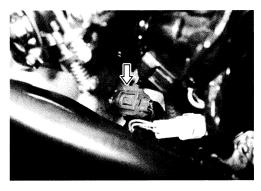

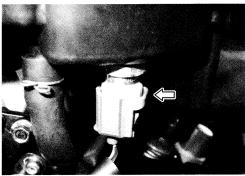

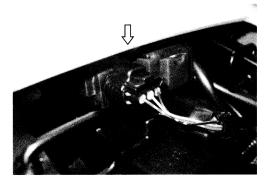

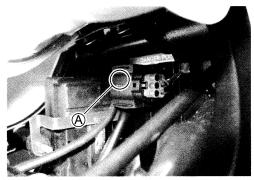


STP SENSOR INSPECTION STP SENSOR REMOVAL AND INSTALLATION

The secondary throttle position sensor is installed at the right side of the No.4 throttle body.

- Remove the STP sensor. (55-17)
- Install the STP sensor in the reverse order of removal.

STP SENSOR ADJUSTMENT

• Adjust the STP sensor. (5-22)

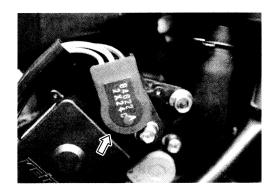

FUEL SYSTEM AND THROTTLE BODY

CONTENTS		
FUEL DELIVERY SYSTEM5- 2		
INTAKE AIR SYSTEM5- 3		
SECONDARY THROTTLE CONTROL SYSTEM5- 3		
OPERATION5- 4		
FUEL SYSTEM5- 5		
FUEL TANK LIFT-UP5- 5		
FUEL TANK REMOVAL5- 5		
FUEL TANK INSTALLATION5- 5		
FUEL PRESSURE INSPECTION5- 6		
FUEL PUMP INSPECTION5- 7		
FUEL PUMP RELAY INSPECTION5- 9		
FUEL PUMP AND FUEL FILTER REMOVAL5- 9		
FUEL MESH FILTER INSPECTION AND CLEANING5-11		
FUEL PUMP AND FUEL MESH FILTER INSTALLATION5-11		
THROTTLE BODY5-14		
CONSTRUCTION5-14		
AIR CLEANER BOX AND THROTTLE BODY REMOVAL5-15		
THROTTLE BODY DISASSEMBLY5-17		
THROTTLE BODY CLEANING5-18		
INSPECTION5-18		
THROTTLE BODY REASSEMBLY5-19		
THROTTLE BODY INSTALLATION5-21		
STP SENSOR ADJUSTMENT5-22		
FUEL INJECTOR INSPECTION5-23		
FUEL INJECTOR REMOVAL5-23		
FUEL INJECTOR INSTALLATION5-23		
FAST IDLE ADJUSTMENT5-24		
THROTTLE VALVE SYNCHRONIZATION5-25		
THROTTLE POSITION SENSOR (TPS) SETTING5-29		
THROTTLE CABLE ADJUSTMENT5-29		


▲ WARNING

Gasoline must be handled carefully in an area well ventilated and away from fire or sparks.

FUEL DELIVERY SYSTEM

The fuel delivery system consists of the fuel tank, fuel pump, fuel filters, fuel feed hose, fuel delivery pipe (including fuel injectors) and fuel pressure regulator. There is no fuel return hose. The fuel in the fuel tank is pumped up by the fuel pump and pressurized fuel flows into the injector installed in the fuel delivery pipe. Fuel pressure is regulated by the fuel pressure regulator. As the fuel pressure applied to the fuel injector (the fuel pressure in the fuel delivery pipe) is always kept at absolute fuel pressure of 3.0 kgf/cm² (300 kPa, 43 psi), the fuel is injected into the throttle body in conic dispersion when the injector opens according to the injection signal from the ECM.

The fuel relieved by the fuel pressure regulator flows back to the fuel tank.

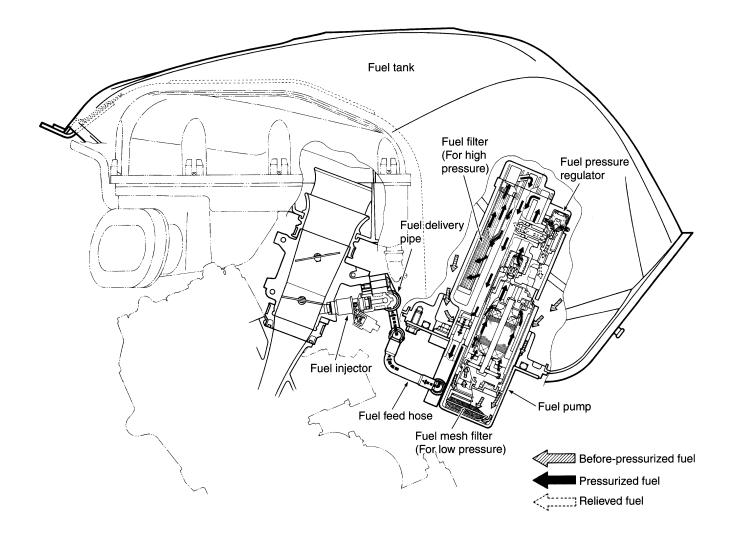

INTAKE AIR SYSTEM SECONDARY THROTTLE CONTROL SYSTEM

The secondary throttle control system (STCS) consists of the secondary throttle valve (STV), secondary throttle valve actuator (STVA) and secondary throttle position sensor (STPS).


STV is installed in each throttle body. STVA and STPS are installed on the right side of the throttle body assembly. The STV is turned by the STVA.

This system is designed to control the volume and the velocity of intake air so as to improve engine output power. The system produces smoother and linear throttle response.

This is performed by opening or closing the throttle body intake port according to the gear positions and engine rpm.

When the engine is running in a low speed range, the intake port is almost closed for controlled intake air volume. This improves the effect to intake air flow pulsation so that the engine can output higher power in this speed range.

As the engine speed grows faster, the intake port gradually opens for guiding the proper volume of air into the throttle body so that the engine can produce the maximum power in each speed range.

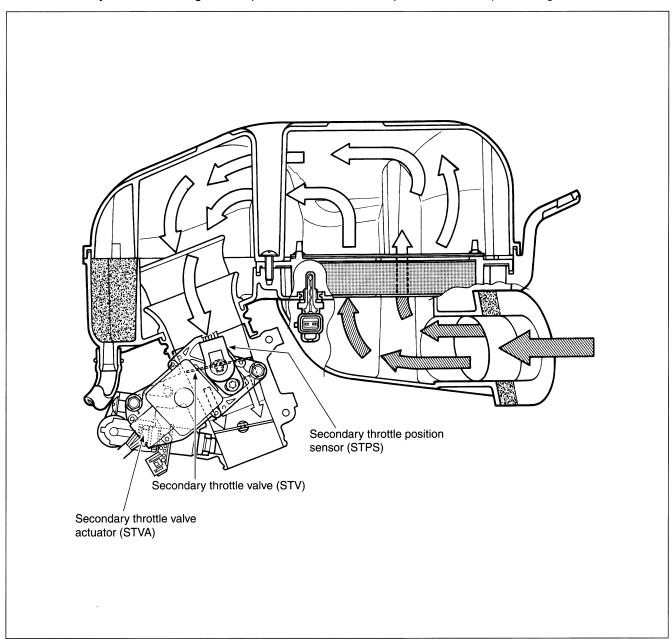


OPERATION

The secondary throttle control system (STCS) is operated by the signal supplied from the ECM. The open/close operation of the secondary throttle valve (STV) is performed by the secondary throttle valve actuator (STVA) which is controlled by the ECM.

The STPS detects the STVA movement by measuring the voltage and then the ECM determines the STV angle based on the operation map.


Whenever turning the ignition switch ON, the STVA automatically drives the STV and detects full open position voltages and sets to original position.

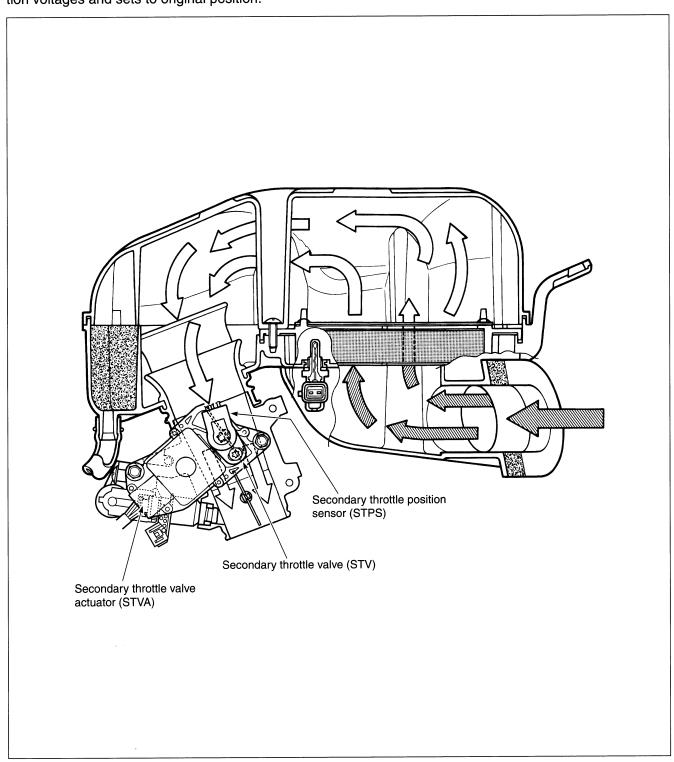


FUEL SYSTEM

FUEL TANK LIFT-UP

- Remove the front seat.
- Remove the frame cover. (8-6)
- Remove the fuel tank mounting bolts.

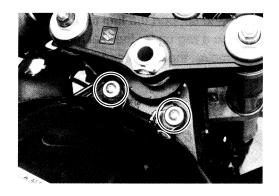

• Lift and support the fuel tank with the fuel tank prop stay ①.

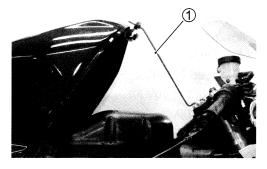

FUEL TANK REMOVAL

- Lift and support the fuel tank with the fuel tank prop stay.
- Disconnect the fuel pump coupler ①.
- Place a rag under the fuel feed hose and remove the fuel feed hose 2.


CAUTION

When removing the fuel tank, do not leave the fuel feed hose 2 on the fuel tank side.



Gasoline is highly flammable and explosive. Keep heat, spark and flame away.

- Remove the fuel tank bracket mounting bolts.
- · Remove the fuel tank.

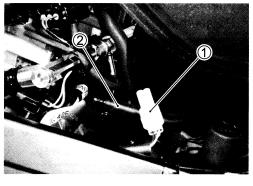



FUEL TANK INSTALLATION

• Installation is in the reverse order of removal.

FUEL PRESSURE INSPECTION

- Lift and support the fuel tank with its prop stay. (5-5)
- Place a rag under the fuel feed hose. (5-5)
- Remove the fuel feed hose and install the special tools between the fuel tank and fuel delivery pipe.

09940-40211: Fuel pressure gauge adaptor

09940-40220: Fuel pressure gauge hose attachment

09915-77331: Oil pressure gauge 09915-74521: Oil pressure gauge hose

Turn the ignition switch ON and check the fuel pressure.

Fuel pressure: Approx. 300 kPa (3.0 kgf/cm², 43 psi)

If the fuel pressure is lower than the specification, inspect the following items:


- * Fuel hose leakage
- * Clogged fuel filter
- * Pressure regulator
- * Fuel pump


If the fuel pressure is higher than the specification, inspect the following items:


- * Fuel pump check valve
- * Pressure regulator

▲ WARNING

- * Before removing the special tools, turn the ignition switch to OFF position and release the fuel pressure slowly.
- * Gasoline is highly flammable and explosive. Keep heat, sparks and flame away.

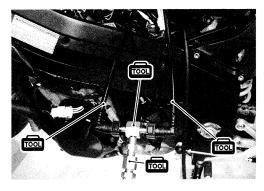

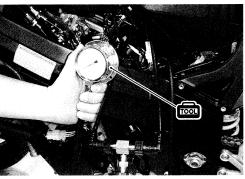

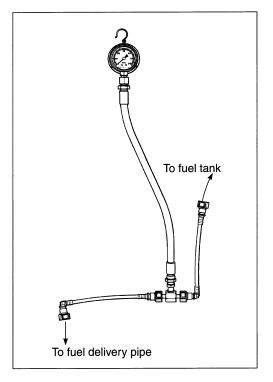

FUEL PUMP INSPECTION

Turn the ignition switch ON and check that the fuel pump operates for few seconds.

 
If the fuel pump motor does not make operating sound, replace the fuel pump assembly or inspect the fuel pump relay and tip over sensor.


FUEL DISCHARGE AMOUNT INSPECTION


▲ WARNING

Gasoline is highly flammable and explosive. Keep heat, spark and flame away.

- Lift and support the fuel tank with its prop stay. (5-5)
- Disconnect the fuel feed hose ① from the fuel pump.




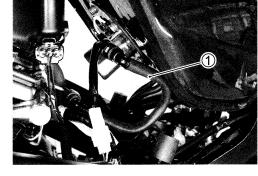


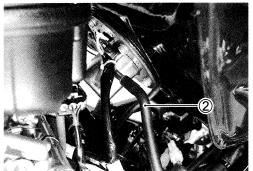



• Push the lock (A) to pull out the power source lead wire (Yellow with red tracer (40).

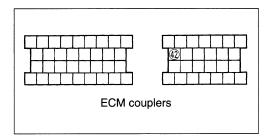

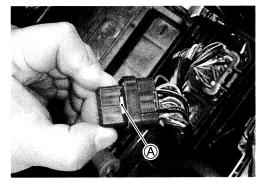

• Place the measuring cylinder and insert the fuel hose end into the measuring cylinder.



• Apply 12 volts to the fuel pump for 30 seconds and measure the amount of fuel discharged.


Battery + terminal ---— Power source lead wire ① (Yellow with red tracer)

If the pump does not discharge the amount specified, it means that the fuel pump is defective or that the fuel filter is clogged.

Fuel discharge amount: Approx. 1 200 ml/30 sec. (1.3/1.1 US/Imp oz)/30 sec.

NOTE:

The battery must be in fully charged condition.

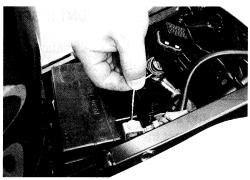



FUEL PUMP RELAY INSPECTION

Fuel pump relay is located in front of the battery.


- Remove the front and rear seats.
- Lift and support the fuel tank with its prop stay. (5-5)
- Remove the fuel pump relay.

First, check the insulation between 1 and 2 terminals with pocket tester. Then apply 12 volts to 3 and 4 terminals, + to 3 and - to 4, and check the continuity between 1 and 2. If there is no continuity, replace it with a new one.

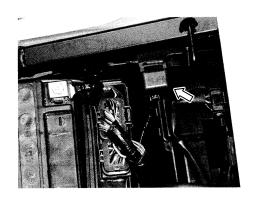

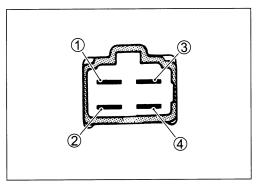

FUEL PUMP AND FUEL FILTER REMOVAL CONSTRUCTION

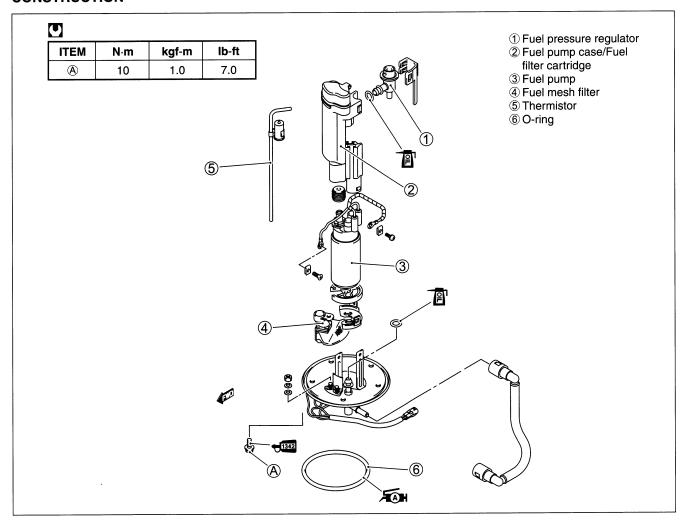


REMOVAL


- Remove the fuel tank. (5-5)
- Remove the fuel pump assembly by removing its mounting bolts diagonally.

▲ WARNING


Gasoline is highly flammable and explosive. Keep heat, spark and flame away.

• Remove the nuts.

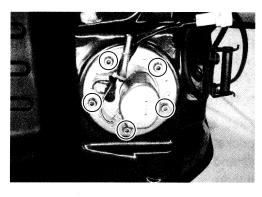


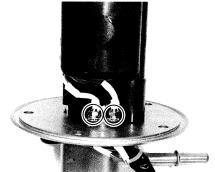


· Remove the screws.

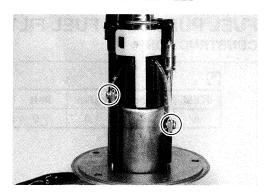


• Remove the fuel pump assy from the fuel pump plate.

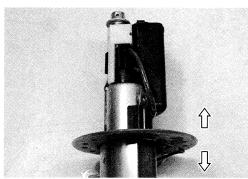


• Remove the fuel pump holder ①.

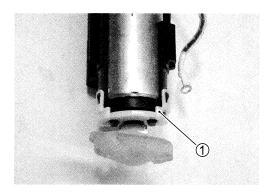

· Remove the fuel mesh filter.

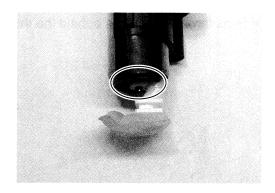

• Remove the fuel pressure regulator holder 1 and the fuel pressure regulator 2.

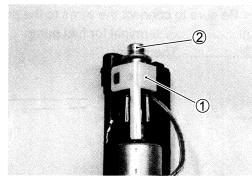

FUEL MESH FILTER INSPECTION AND CLEANING

If the fuel mesh filter is clogged with sediment or rust, fuel will not flow smoothly and loss in engine power may result. Blow the fuel mesh filter with compressed air.

NOTE:

If the fuel mesh filter is clogged with many sediment or rust, replace the fuel filter cartridge with a new one.


FUEL PUMP AND FUEL MESH FILTER INSTALLATION


Install the fuel pump and fuel mesh filter in the reverse order of removal, and pay attention to the following points:


- Install the new O-rings to the fuel pressure regulator and fuel pipe.
- · Apply thin coat of the engine oil to the O-rings.

CAUTION


Use the new O-rings to prevent fuel leakage.

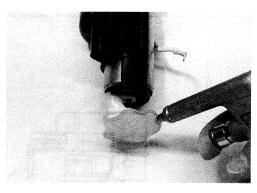

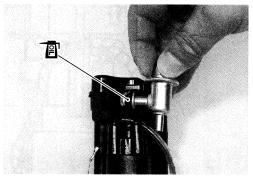


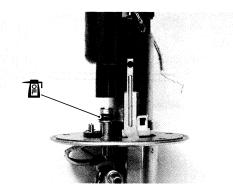


• Pass through the wires behind the thermistor ①.

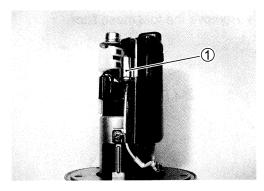

- Be sure to connect the wires to the proper terminals.
- A + terminal for fuel pump
- BThermistor

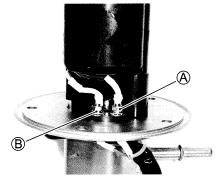

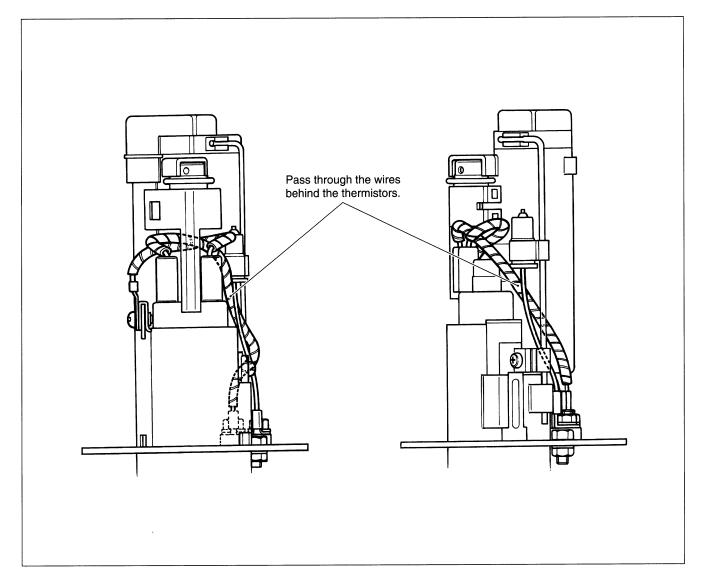

• Install the O-ring and apply SUZUKI SUPER GREASE to it.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

▲ WARNING


The O-ring must be replaced with a new one to prevent fuel leakage.


 When installing the fuel pump assembly, lightly tighten all the fuel pump assembly mounting bolts in the ascending order of numbers, and then tighten them to the specified torque in the above manner.


Fuel pump mounting bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

Apply a small quantity of the THREAD LOCK to the thread portion of the fuel pump mounting bolt.

+1342 99000-32050: THREAD LOCK "1342"

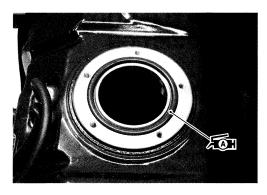

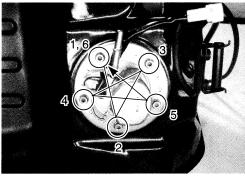


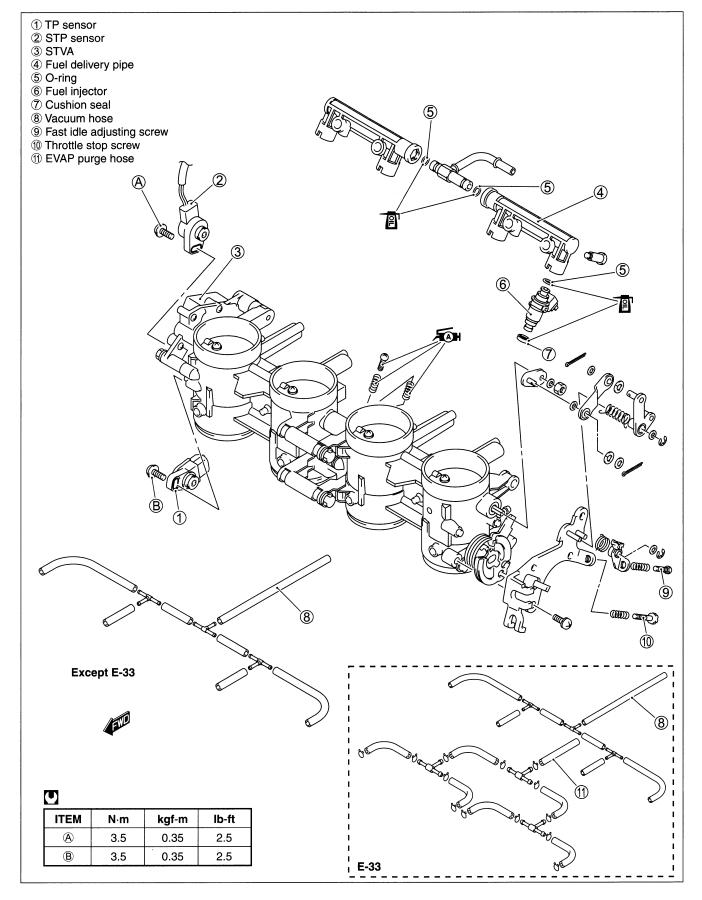


AIR CLEANER BOX AND THROTTLE BODY **REMOVAL**


AIR CLEANER BOX


- Lift and support the fuel tank with its prop stay. (5-5)
- Disconnect the IAT sensor coupler ① and PAIR hose ②.
- Disconnect the IAP sensor coupler ③ and vacuum hose ④.
- Disconnect the crankcase breather hose ⑤.

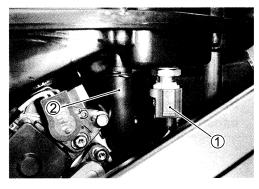

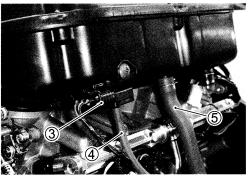

• Loosen the throttle body clamp screws.

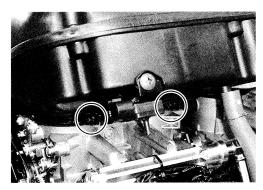

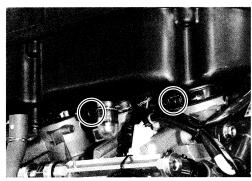

- Remove the air cleaner box mounting bolt.
- Remove the air cleaner box.




THROTTLE BODY


• Disconnect the throttle cables from their drum.

CAUTION


After disconnecting the throttle cables, do not snap the throttle valve from full open to full close. It may cause damage to the throttle valve and throttle body.

• Place a rag under the fuel feed hose and disconnect the fuel feed hose from the fuel tank.

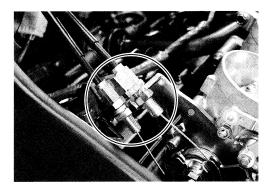


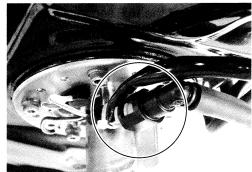


• Disconnect the vacuum hose ① from the PAIR valve.

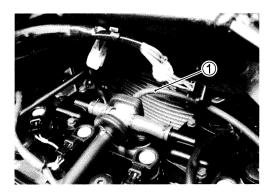

• Disconnect the fuel injector coupler ②.

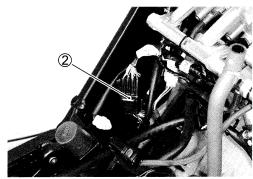


- Loosen the throttle body clamp screws at the intake pipe side.
- Remove the throttle body assembly.

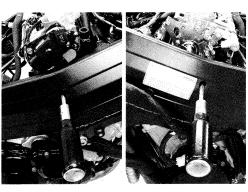


THROTTLE BODY DISASSEMBLY


• Disconnect the respective vacuum hoses from each throttle body. (Except E-33)

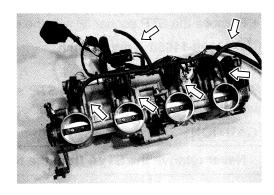


• Disconnect the respective vacuum hoses ① and EVAP purge hoses ② from each throttle body. (For E-33)

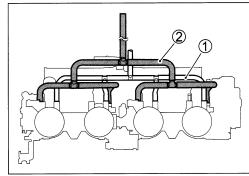

- Remove the lead wire clamps.
- Disconnect the TP sensor coupler ③, STP sensor coupler ④, STVA motor lead wire coupler ⑤ and fuel injector couplers ⑥.

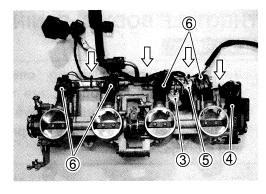

- \bullet Remove the fuel delivery pipe assembly $\ensuremath{ \mathcal{T}}$ by removing its mounting screws.
- Remove the fuel injectors.

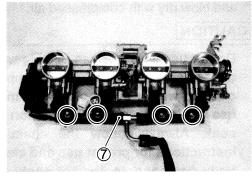


• Remove the TP sensor ® with the special tool.

100 09930-11950: Torx wrench

NOTE:

Prior to disassembly, mark the TP sensor's original position with a paint or scribe for accurate reinstallation.

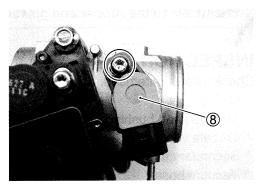

Remove the STP sensor 9 with the special tool.



NOTE:


Prior to disassembly, mark the STP sensor's original position with a paint or scribe for accurate reinstallation.


CAUTION

Never remove the STVA from the throttle body.

CAUTION

Never remove the secondary throttle valve and throttle valve.

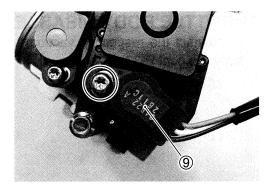

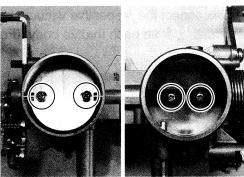

THROTTLE BODY CLEANING

▲ WARNING

Some carburetor cleaning chemicals, especially dip-type soaking solutions, are very corrosive and must be handled carefully. Always follow the chemical manufacturer's instructions on proper use, handling and storage.

 Clean all passageways with a spray-type carburetor cleaner and blow dry with compressed air.

CAUTION

Do not use wire to clean passageways. Wire can damage passageways. If the components cannot be cleaned with a spray cleaner it may be necessary to use a dip-type cleaning solution and allow them to soak. Always follow the chemical manufacturer's instructions for proper use and cleaning of the throttle body components. Do not apply carburetor cleaning chemicals to the rubber and plastic materials.

INSPECTION

Check following items for any damage or clogging.

- * O-ring
- * Throttle shaft bushing and seal
- * Throttle valve
- * Secondary throttle valve
- * Vacuum hose

THROTTLE BODY REASSEMBLY

 
Reassemble the throttle body in the reverse order of disassembly.

Pay attention to the following points:

• With the STV fully opened, install the STP sensor (1).

NOTE:

- * Align the secondary throttle shaft end (A) with the groove (B) of the STP sensor.
- * Apply SUZUKI SUPER GREASE to the secondary throttle shaft end (A) if necessary.



09930-11950: Torx wrench

STP sensor mounting screw: 3.5 N·m (0.35 kgf-m, 2.5 lb-ft)

NOTE:

If the STP sensor adjustment is necessary, refer to page 5-22 for STP sensor setting procedure.

• With the throttle valve fully opened, install the TP sensor 2.

09930-11950: Torx wrench

TP sensor mounting screw: 3.5 N·m (0.35 kgf-m, 2.5 lb-ft) NOTE:

- * Align the throttle shaft end © with the groove D of the TP sen-
- * Apply SUZUKI SUPER GREASE to the throttle shaft end © if necessary.


TP sensor setting procedure. (4-18)


√AH 99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)


- Install the O-rings 1 to each fuel injector.
- Apply thin coat of the engine oil to the new O-rings.
- · Install the fuel injectors by pushing them straight to each throttle body.

CAUTION

Replace the dust seal and O-ring with the new ones. Never turn the injector while pushing it.

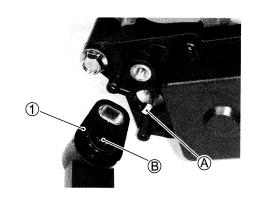

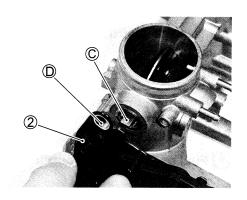


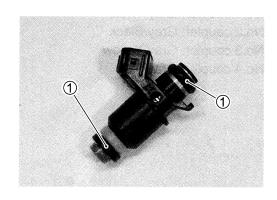

• Apply thin coat of the engine oil to the new O-rings ②.

CAUTION

Replace the O-ring with a new one.

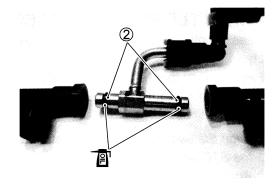

• Assemble the fuel delivery pipes.



• Install the fuel delivery pipe assembly to the throttle body assembly.

CAUTION

Never turn the fuel injectors while installing them.

• Tighten the fuel delivery pipe mounting screws.


Fuel delivery pipe mounting screw: 3.5 N·m


(0.35 kgf-m, 2.5 lb-ft)

• Connect the fuel injector couplers to each fuel injector.

WIRE COLOR

No.1 coupler: Gray/White No.2 coupler: Gray/Black No.3 coupler: Gray/Yellow No.4 coupler: Gray/Red

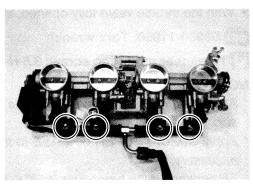

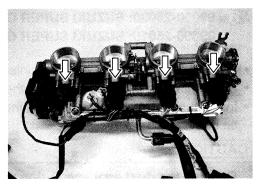



THROTTLE BODY INSTALLATION

Installation is in the reverse order of removal. Pay attention to the following points:

- Connect the throttle pulling cable ① and throttle returning cable 2 to the throttle cable drum.
- Adjust the throttle cable play with the cable adjusters 3 and

Refer to page 5-29 for details.

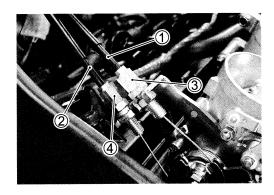

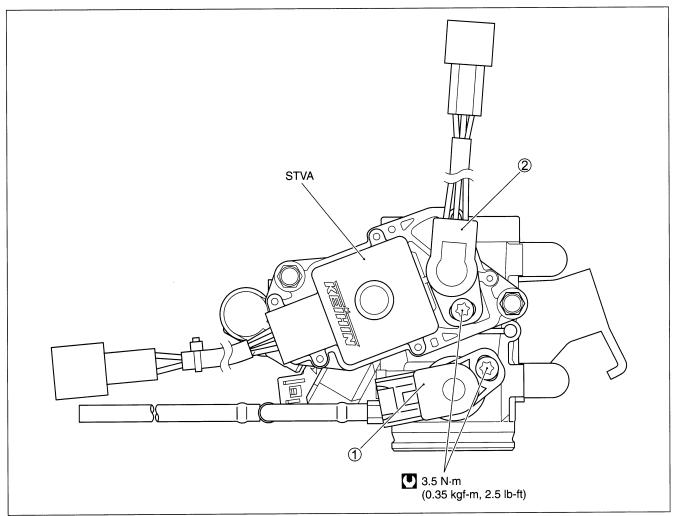

CAUTION

When installing the TPS ① and STPS ② as shown in the illustration.

STP SENSOR ADJUSTMENT

If the STP sensor adjustment is necessary, measure the sensor resistance and adjust the STP sensor position as follows:

- Disconnect the STVA coupler.
- Turn the ignition switch ON.
- Close the secondary throttle valve by finger, and measure the STP sensor output voltage.


DATA STP sensor output voltage


ST valve is fully closed: 0.48 - 0.52 V

(Yellow – Black)

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

 \square Tester knob indication: Resistance (Ω)

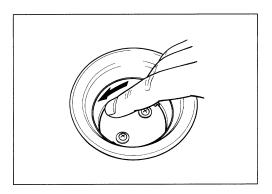

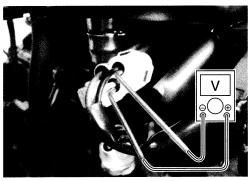

- Loosen the STP sensor mounting screws.
- Adjust the STP sensor until resistance comes to specification and tighten the STP sensor mounting screws.


09930-11950: Torx wrench

STP sensor mounting screw: 3.5 N·m

(0.35 kgf-m, 2.5 lb-ft)



THROTTLE BODY CLAMP POSITION

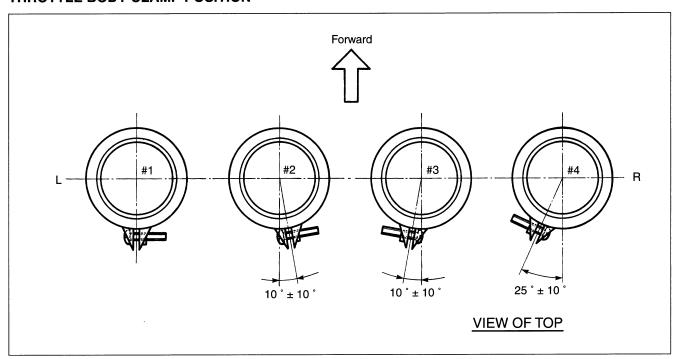

FUEL INJECTOR INSPECTION

The fuel injector can be checked without removing it from the throttle body.


Refer to page 4-51 for details.

FUEL INJECTOR REMOVAL

- Lift and support the fuel tank with its prop stay. (5-5)
- Remove the air cleaner box. (5-15)
- With battery negative cable disconnected, disconnect the injector couplers.
- Remove the fuel delivery pipe assembly. (5-17)
- Remove the fuel injectors No.1, No.2, No.3 and No.4. (5-17)

INSPECTION

Check fuel injector filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in the fuel lines and fuel tank.

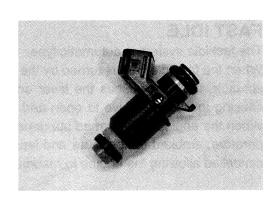

FUEL INJECTOR INSTALLATION

- Apply thin coat of the engine oil to new injector O-rings.
- Install the injector by pushing it straight to the throttle body. Never turn the injector while pushing it. (5-19)

FAST IDLE

The fast idle system is automatic type.


When the fast idle cam is turned by the secondary throttle valve actuator, the cam pushes the lever on the throttle valve shaft causing the throttle valve to open and raise the engine speed. When the engine has warmed up, depending on the water temperature, ambient temperature and lapsed time, the fast idle is cancelled allowing the engine to resume idle speed.

INSPECTION AND ADJUSTMENT

- Fast idle adjustment must be performed while the engine is cold.
- Lift and support the fuel tank with its prop stay.
- Start up the engine and check the fast idle speed.
- If the fast idle speed is out of specification, stop the engine and wait until the engine is cool enough.
- After cooling down engine, turn in or out the fast idle adjusting screw ①.
- Start the engine and check the fast idle speed.
- Repeat the above procedure untill the fast idle speed comes with in the specified rpm.
- Set the idle speed to 1 050 1 250 rpm by turning the throttle stop screw ②.

PAYA Fast idle rpm

Standard: 1 500 - 2 000 rpm/Cold engine Idle rpm: 1 050 - 1 250 rpm/Warmed engine

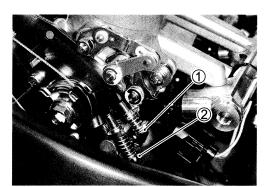


THROTTLE VALVE SYNCHRONIZATION

Check and adjust the throttle valve synchronization among four cylinders.


CALIBRATING EACH VACUUM GAUGE

- Lift and support the fuel tank. (5-5)
- Start up the engine and run it in idling condition for warming
- Stop the warmed-up engine.
- Disconnect the IAT sensor coupler ① and remove the IAT sensor from the air cleaner box.
- Connect the removed IAT sensor to its coupler and place it on the frame.

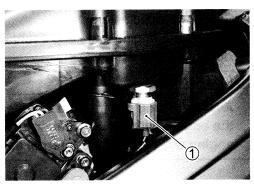





- Remove the IAP sensor coupler screw 2.
- Remove the air cleaner box. (5-15)

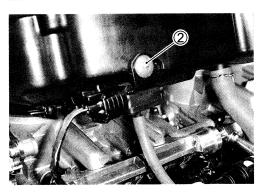

• Disconnect the PAIR vacuum hose 3 from the No.4 throttle body.

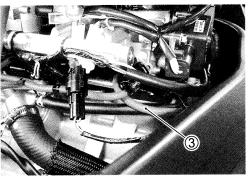

 • Connect one of the vacuum balancer gauge hose 4 to the nipple on the No.4 throttle body.





- Connect a tachometer.
- Start up the engine and keep it running at 1 150 rpm by turning throttle stop screw ⑤.

 
CAUTION

Avoid drawing dirt into the throttle body while running the engine without air cleaner box. Dirt drawn into the engine will damage the internal engine parts.

• Turn the air screw ⑥ of the gauge so that the vacuum acting on the tube of that hose will bring the steel ball ⑦ in the tube to the center line ⑧.

NOTE:


The vacuum gauge is positioned approx. 30 ° from the horizontal level.





- Turn air screw to bring the other steel ball 9 to the center line.
- Repeat the above process on the third and fourth hoses.

The balancer gauge is now ready for use in balancing the throttle valves.

Connect the PAIR vacuum hose to the No.4 throttle body.

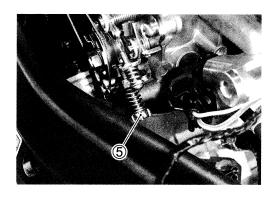

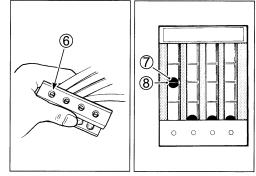

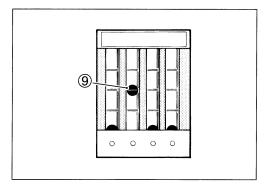



THROTTLE VALVE SYNCHRONIZATION Step 1

• Disconnect the IAP sensor coupler ①.

• To synchronize throttle valves, remove the vacuum hoses 2 from each vacuum nipple and connect the vacuum balancer gauge hoses to the vacuum nipples respectively.



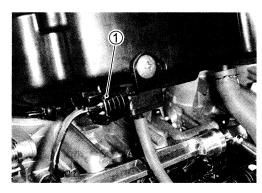

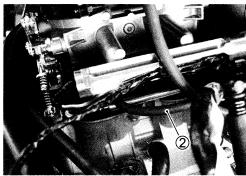

Step 2

- Connect a tachometer and start up the engine.
- Bring the engine rpm to 1 150 rpm by the throttle stop screw.
- Check the vacuum of the four cylinders and balance the four throttle valves.

The vacuum gauge is positioned approx. 30 ° from the horizontal level, and in this position the four balls should be within one ball dia. If the difference is larger than one ball, turn the balance adjusting screw on the throttle body and bring the ball to the same level.


A correctly adjusted throttle valve synchronization has the balls in the No. 1 through 4 at the same level.


CAUTION

Avoid drawing dirt into the throttle body while running the engine without air cleaner box. Dirt drawn into the engine will damage the internal engine parts.

NOTE:

- * During balancing the throttle valves, always set the engine rpm at 1 150 rpm, using throttle stop screw.
- * After balancing the four valves, set the idle rpm to 1 150 rpm by the throttle stop screw after installing the air cleaner box.
- * If the above procedures cannot still synchronize the valves, proceed to the next step.

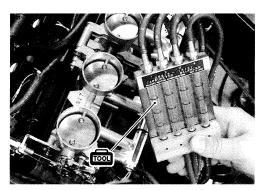

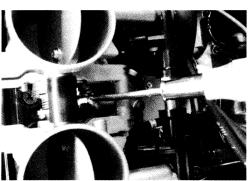

Step 3


- Turn in all the idle air screws to the complete close position.
- Check for difference of vacuum between No.1 and No.2.
- Equalize these two by gradually turning back the air screw on the higher vacuum side until the vacuum comes down to the lower. Similarly perform the same procedures between No. 3 and No. 4.
- Check for the synchronization adjustment. If the adjustment is not yet correct, remove each idle air screw and clean them with a spray-type carburetor cleaner and blow dry with a compressed air.
- Also, clean the idle air screw passageways.

NOTE:

- * Slowly turn the idle air screw in clockwise and count the number of turns until the screw is lightly seated.
- * Make a note of how many turns were made so the screw can be reset correctly after cleaning.

Step 4


• Repeat the procedures of Step 2 and Step 3.

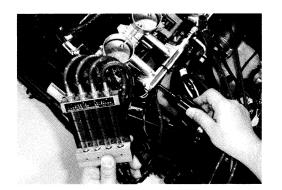


THROTTLE POSITION SENSOR (TPS) SETTING

After all adjustments are completed, check or adjust the TPS setting condition.

(Refer to page 4-18 for TPS setting procedure.)

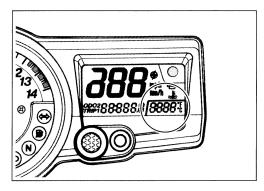

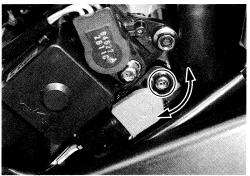


THROTTLE CABLE ADJUSTMENT


NOTE:

Minor adjustment can be made by the throttle grip side adjuster. (CF 2-17)

MAJOR ADJUSTMENT

- Loosen the lock-nuts 1 of the throttle returning cable 2.
- Turn the returning cable adjuster 3 to obtain proper cable play.
- Loosen the lock-nuts 4 of the throttle pulling cable 5.
- Turn the pulling cable adjuster 6 in or out until the throttle cable play A should be 2.0 – 4.0 mm (0.08 – 0.16 in) at the throttle grip.
- Tighten the lock-nuts 4 securely while holding the adjuster **6**).
- While holding the throttle grip at the fully closed position, slowly turn the returning cable adjuster 3 to obtain a cable slack (B) of 1.0 mm (0.04 in).
- Tighten the lock-nuts ① securely.

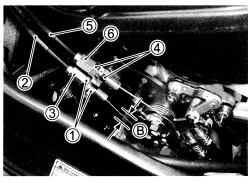

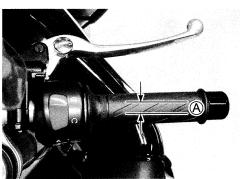


EXHAUST SYSTEM

EXHAUST SYSTEM	6- 2
EXHAUST CONTROL SYSTEM	
OPERATION	6- 3
EXCVA (EXHAUST CONTROL VALVE ACTUATOR) AND EXCV	
(EXHAUST CONTROL VALVE)	6- 4
EXCVA REMOVAL	6- 4
EXCVA INSTALLATION	6- 5
EXCVA INSPECTION	6- 6
EXCV CABLE REPLACEMENT	6- 6
EXCVA ADJUSTMENT	6- 9
EXCV REMOVAL	6-12
EXCV INSPECTION	6-12
EXCV INSTALLATION	6-13

EXHAUST SYSTEM EXHAUST CONTROL SYSTEM

The exhaust control system (EXCS) consists of the exhaust control valve (EXCV), exhaust control valve actuator (EXCVA) and exhaust control valve cables (EXCV cables).

EXCV is installed between the exhaust pipes and joint pipe. EXCVA is mounted on the right side of the seat rail. The EXCV is operated by the EXCVA via the cables. This system is designed to improve the engine torque at low engine rpm and to reduce the exhaust noise.

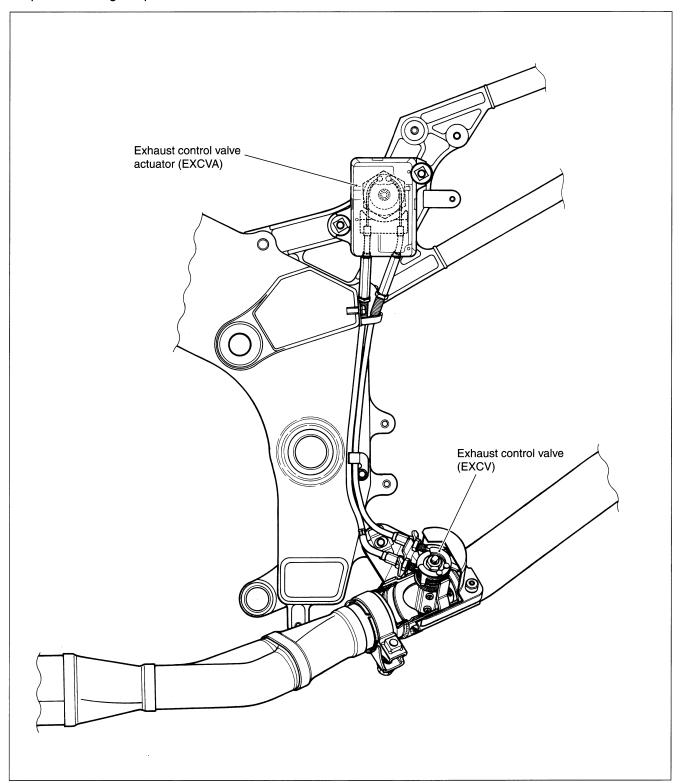


OPERATION

The EXCS is operated by the signal supplied from the ECM.

The open/close operation of the EXCV is performed by the EXCVA which is controlled by the ECM by changing the current direction of the actuator motor. The position sensor (incorporated in the EXCVA) detects the EXCVA movement by measuring the voltage and then the ECM determines the EXCV opening angle based on the engine rpm and gear positions.

Every time the ignition switch is turned ON, the EXCVA automatically drives the EXCV and detects full close/open position voltages and sets the EXCV to middle position.

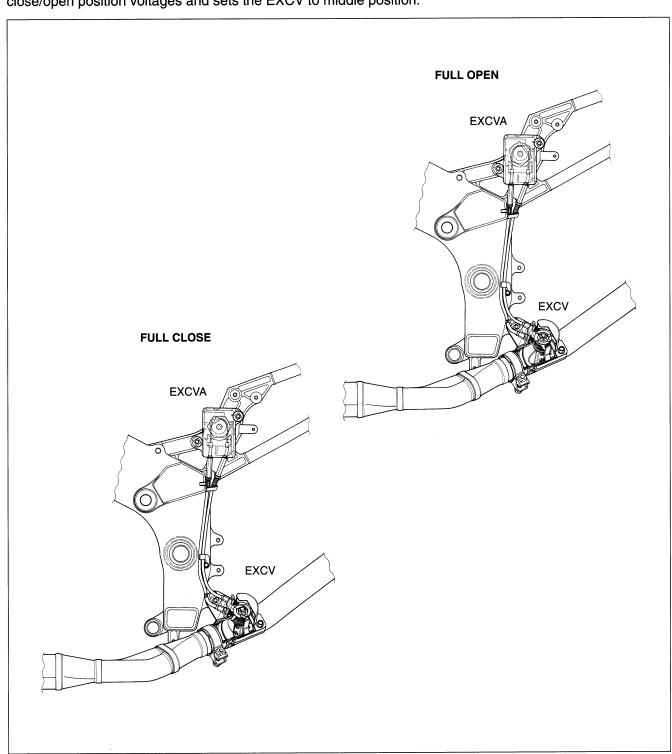

EXCVA (EXHAUST CONTROL VALVE ACTUATOR) AND EXCV (EXHAUST CONTROL VALVE)

EXCVA REMOVAL

- Turn the ignition switch OFF.
- Remove the front and rear seats.
- Remove the fuel tank. (5-5-5)
- Connect the special tool (Mode select switch) to the dealer mode coupler. (4-16)
- After turning the special tool's switch ON, turn the ignition switch ON.

 
09930-82720: Mode select switch

- Check the cable slots (A) of the EXCVA pulley face upward (adjustment position) as shown.
- Turn the ignition switch OFF.


CAUTION


Before removing the EXCVA, be sure to set the EXCVA pulley to the adjustment position.







- * When loosening or tightening the pulley bolt, be sure to fix the pulley with an adjustable wrench, or EXCVA may get damaged.
- * Do not use the adjustable wrench to turn EXCVA pulley so as not to cause damage to the internal gear of EXCVA.

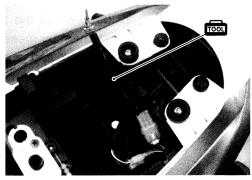


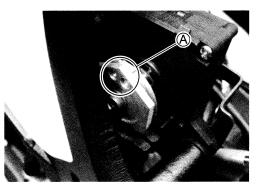

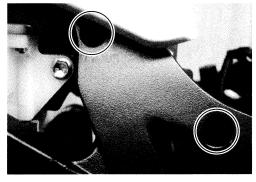


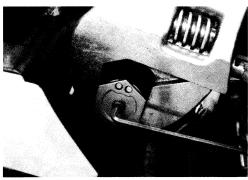

• Remove the clamp ①.

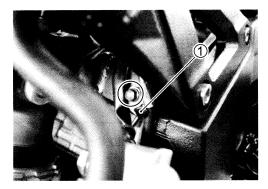


- Disconnect the No.2 cable ② and then No.1 cable ③ from the pulley.
- Disconnect the EXCVA lead wire couplers 4.
- · Remove the EXCVA.

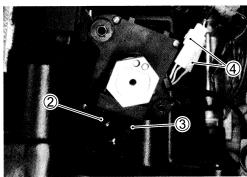

EXCVA can also be removed in the following procedures.

- Remove the front footrest ⑤.
- Disconnect the EXCV cable. (6-12)
- Remove the EXCVA mounting bolt. (6-4)
- Remove EXCVA, cable and EXCV together as a unit.

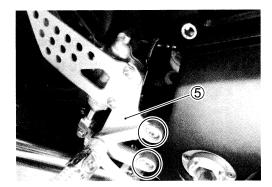


EXCVA INSTALLATION

Install the EXCVA in the reverse order of removal. Pay attention to the following points:

- Connect the No.1 cable ① (Black chrome plated adjuster) and No.2 cable 2 (Silver chrome plated adjuster) to the EXCVA pulley.

• After connecting the No.2 cable ②, loosen the lock-nut ③ and turn the adjuster 4 in or out until 11.0 mm (0.43 in) and more of the thread length (A) on the cable adjuster can be provided and tighten the lock-nut 3.

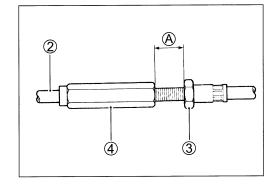

• Check the EXCVA to adjustment position. (\$\sumset\$6-4)

CAUTION

Do not use the adjustable wrench to turn EXCVA pulley so as not to cause damage to the internal gear of EXCVA.

• Install the pulley 5 to the shaft 6.

NOTE:

Make sure that the shaft's line B and cable slots C facing upward as shown.


• Hold the pulley with an adjustable wrench, and then tighten the pulley mounting bolt to the specified torque.


EXCVA pulley mounting bolt: 5 N·m (0.5 kgf-m, 3.5 lb-ft)


CAUTION

When loosening or tightening the pulley bolt, be sure to fix the pulley with an adjustable wrench, or EXCVA may get damaged.

- Tighten the EXCVA mounting bolt to the specified torque.
- EXCVA mounting bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

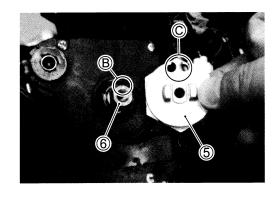

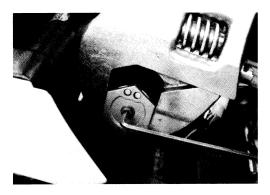

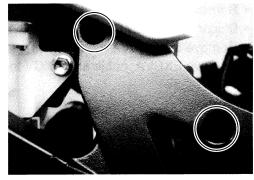

CAUTION

The cable slots of EXCVA pulley must be located upward (adjustment position). (2 6-4)



EXCVA INSPECTION

74-54


EXCV CABLE REPLACEMENT

- Disconnect the EXCV cables from the EXCVA pulley. (6-5)
- Disconnect the EXCV cables from the EXCV pulley. (6-12)


NOTE:

The EXCV cables are identified by the plated chrome color and shape.

Black chrome plated adjuster: No.1 cable ① Silver chrome plated adjuster: No.2 cable ②

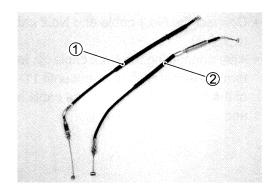


- Connect the EXCV cables (No.1 and No.2) temporarily to the EXCVA pulley.
- Install the muffler joint pipe together with the muffler body.
 (6-13)

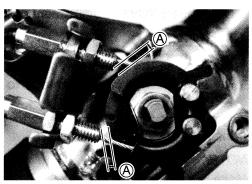


- After adjusting the inner cable length
 B, tighten the lock-nut


No.1 cable adjuster: Black chrome plated

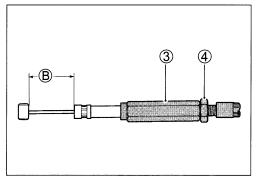

- Make the No.2 cable straight and turn in the cable adjuster ⑤ fully.
- Loosen the lock-nuts ⑥ and turn the No.2 cable adjuster ⑦ in or out until the inner cable length © becomes 58 59 mm (2.28 2.32 in).
- After adjusting the inner cable length ©, tighten the lock-nuts ⑥.

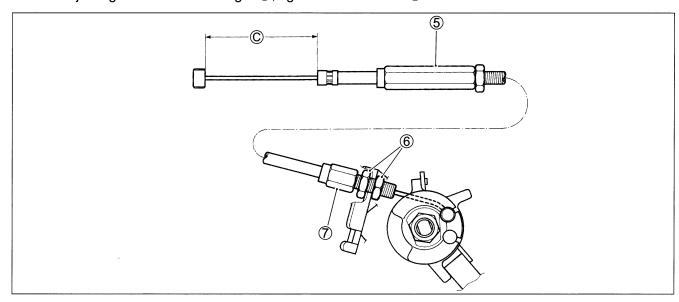

- Connect the No.1 cable and No.2 cable to the EXCVA pulley.
- After connecting the No.2 cable ®, loosen the lock-nut 9 and turn the adjuster 1 in or out until 11 – 12 mm (0.43 – 0.47 in) of the thread length ① on the cable adjuster cam be provided and tighten the lock-nut 9.

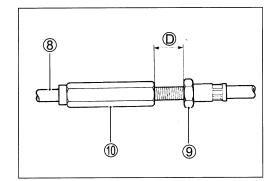

• Check the EXCVA to adjustment position. (6-4)

CAUTION

Do not use the adjustable wrench to turn EXCVA pulley so as not to cause damage to the internal gear of EXCVA.

• Install the pulley 11 to the shaft 12.

Make sure that the shaft's line (E) and cable slots (F) facing upward as shown.


- Hold the EXCVA pulley with an adjustable wrench, and then tighten the pulley mounting bolt to the specified torque.
- EXCVA pulley mounting bolt: 5 N·m (0.5 kgf-m, 3.7 lb-ft)


CAUTION

When loosening or tightening the pulley bolt, be sure to fix the pulley with an adjustable wrench, or EXCVA may get damaged.



The cable slots of the EXCVA pulley must be located upward (adjustment position). (26-4)

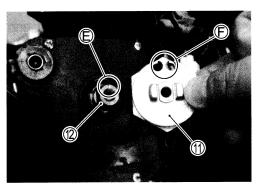

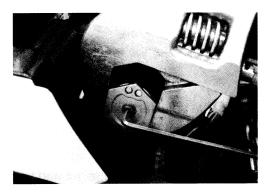




EXCVA ADJUSTMENT

1st step:

• Set the EXCVA to adjustment position. (6-4)





• Make sure that the No.2 cable and No.1 cable are fixed into the clamp.

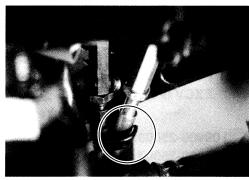

2nd step:


- Turn the mode select switch OFF.
- Turn the ignition switch ON to check the EXCVA operation.
- Turn the mode select switch ON.
- If C46 is not indicated on the LCD (DISPLAY), the adjustment is correctly completed. In this case, it is unnecessary to proceed to 3rd step.
- If C46 is indicated, repeat the adjustment procedure from 3rd and 4th step.

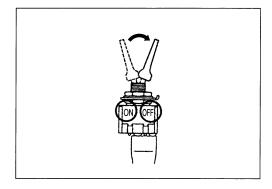

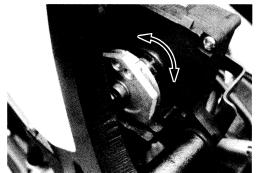

3rd step:

- This procedure is only required when C46 is indicated.
- Turn the ignition switch OFF.
- Insert the two copper wires into the back side of the position sensor lead wire coupler 1.
- Disconnect the EXCVA motor lead wire coupler 2.

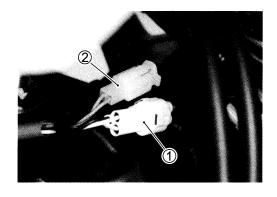

• To set the EXCV to fully close position, apply 12 volts to (A) and (B) terminals.

Positive wire — A (Pink wire) terminal

Negative wire — B (Gray wire) terminal

CAUTION

To prevent the motor damage, stop applying 12 V as soon as the EXCV reaches fully close position.

- Turn the ignition switch ON.
- Measure the position sensor output voltage at fully close position.

PATA Position sensor output voltage

EXCV is fully close: $0.5 \le \text{output voltage} \le 1.3 \text{ V}$

(⊕ Yellow – ⊕ White)

09900-25008: Multi circuit tester set

09900-25009: Needle pointed probe set

Tester knob indication: Voltage (---)

If the measured voltage is less than specification, adjust the No.1 cable adjuster as follows:

• Set the EXCVA to adjustment position. (6-4)

CAUTION

Adjusting the No.1 cable with the EXCV fully closed can damage the EXCVA. Be sure to adjust the No.1 cable with the EXCV set in adjustment position.


- Turn out the No.1 cable adjuster ③.
- Repeat the above procedure until the output voltage becomes specified value.


Position sensor output voltage EXCV is fully close: 0.5 ≤ output voltage ≤ 1.3 V


• To next step.

NOTE:

If C46 code is indicated after adjusting the voltage, increase the voltage to 0.9 V.

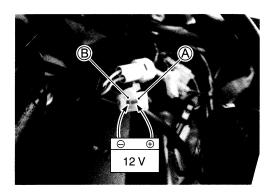

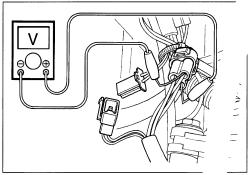

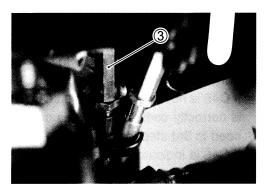

4th step:

To set the EXCV to fully open position, apply 12 volts to (A) and (B) terminals.

Positive wire — B (Gray wire) terminal Negative wire — A (Pink wire) terminal

CAUTION

To prevent the motor damage, stop applying 12 V as soon as the EXCV reaches fully open position.

Measure the position sensor output voltage at fully open position.

DATA Position sensor output voltage

EXCV is fully open: 3.7 \leq output voltage \leq 4.5 V (+ Yellow - → White)

If the measured voltage is more than specification, adjust the No.2 cable adjuster as follows:

• Set the EXCVA to adjustment position. (6-4)

CAUTION


Adjusting the No.2 cable with the EXCV fully opened can damage the EXCVA. Be sure to adjust the No.2 cable with the EXCV set in adjustment position.


- Turn out the No.2 cable adjuster ①.
- · Repeat the above procedure until the output voltage comes within the specified value.

PATA Position sensor output voltage

EXCV is fully open: $3.7 \le \text{output voltage} \le 4.5 \text{ V}$


· After adjusting the EXCV cables, perform 1st step to confirm C46 is not indicated.

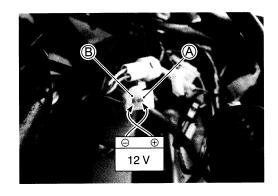


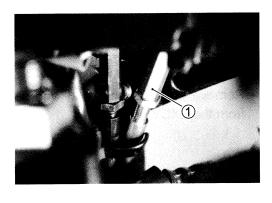


EXCV REMOVAL

- Disconnect the two cables from the EXCVA pulley. (Refer to the EXCVA REMOVAL procedures.) (26-4)
- Remove the muffler joint pipe 1 together with the muffler body 2 by removing the mounting bolts and loosen the connector bolt.

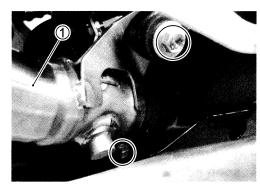

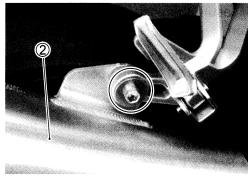


• Remove the EXCV cover 3 and disconnect the two cables from the EXCV pulley.

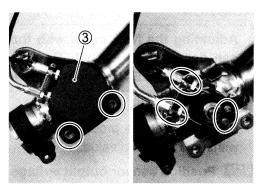

EXCV INSPECTION


- Turn the EXCV by hand and check that it moves smoothly.
- If it does not move smoothly, replace the EXCV together with the muffler joint pipe.
- Decarbonize the EXCV if necessary.

- * Do not attempt to disassemble the EXCV.
- * The EXCV is available only as the muffler joint pipe assembly.

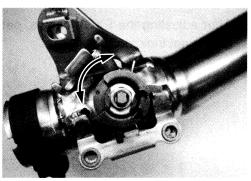

EXCV INSTALLATION

 
- Connect the EXCV cables temporarily to the EXCV pulley.
- Adjust the clearance (A) between the adjuster end and EXCV pulley to provide 3 mm (0.12 in) and more.
- Adjust the inner cable length of the No.2 cable. (6-7)
- Install the EXCV cover.




Exhaust pipe connector bolt: 23 N·m


(2.3 kgf-m, 16.5 lb-ft)

Muffler mounting bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

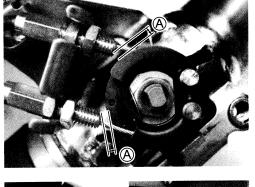

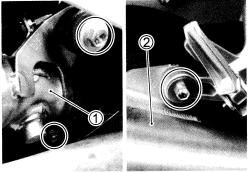

- Connect the No.1 and No.2 cables to the EXCVA pulley. (6-5 and 14)
- Adjust the No.2 cable adjuster thread length (B. (6-5 and
- Install the EXCVA pulley to its shaft. (\$\sumset\$ 6-6)

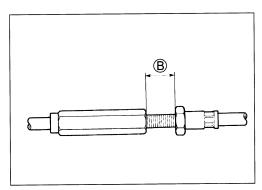


- * The cable slots of EXCVA pulley must be located forward (adjustment position). (26-4)
- * Do not use the adjustable wrench to turn EXCVA pulley so as not to cause damage to the internal gear of EXCVA.
- Tighten the EXCVA pulley mounting bolt to the specified torque. (6-14)
- EXCVA pulley mounting bolt: 5 N·m (0.5 kgf-m, 3.5 lb-ft)





- * When adjusting the No.1 and No.2 cables, the cable slots of EXCVA pulley must be located to adjustment position.
- * Do not use the adjustable wrench to turn EXCVA pulley so as not to cause damage to the internal gear of EXCVA.

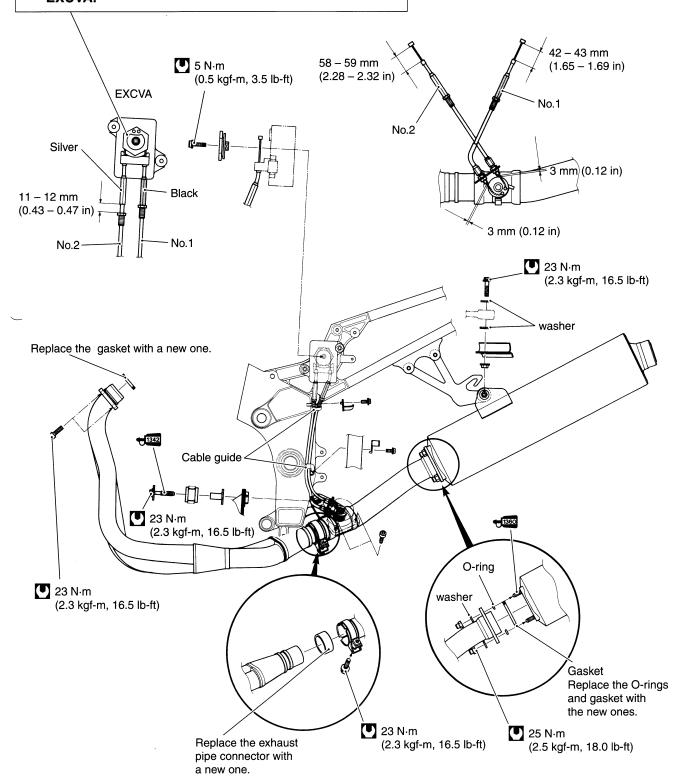

COOLING AND LUBRICATION SYSTEM

CONTENTS —	
ENGINE COOLANT7-	2
COOLING CIRCUIT7-	3
COOLING CIRCUIT INSPECTION7-	3
RADIATOR AND WATER HOSES7-	4
RADIATOR REMOVAL7-	4
RADIATOR CAP INSPECTION7-	4
RADIATOR INSPECTION AND CLEANING7-	4
RADIATOR REMOUNTING7-	5
WATER HOSE INSPECTION7-	5
COOLING FAN7-	6
INSPECTION7-	6
INSTALLATION7-	6
COOLING FAN THERMO-SWITCH7-	7
REMOVAL7-	7
INSPECTION7-	7
INISTALLATION7-	7
ENGINE COOLANT TEMPERATURE SENSOR7-	8
REMOVAL7-	8
INSPECTION7-	8
INSTALLATION7-	
THERMOSTAT7-	9
REMOVAL7-	9
INSPECTION7-1	
INSTALLTATION7-1	
WATER PUMP7-1	1
REMOVAL AND DISASSEMBLY7-1	1
LUBRICATION SYSTEM7-1	8
OIL PRESSURE7-1	8
OIL FILTER7-1	
OIL PRESSURE REGULATOR7-1	
OIL STRAINER7-1	
OIL JET7-1	
OIL PUMP7-1	
OIL PRESSURE SWITCH7-1	
ENGINEENGINE LUBRICATION SYSTEM CHART7-2 ENGINEENGINE LUBRICATION SYSTEM7-2	
ENGINEENGINE LUBRICATION 3131EM/-2	. 1

ENGINE COOLANT

At the time of manufacture, the cooling system is filled with a 50:50 mixture of distilled water and ethylene glycol anti-freeze. This 50:50 mixture will provide the optimum corrosion protection and excellent heat protection, and will protect the cooling system from freezing at temperatures above -31 °C (-24 °F).

If the motorcycle is to be exposed to temperatures below -31 °C (-24 °F), this mixing ratio should be increased up to 55 % or 60 % according to the figure.

CAUTION

- * Use a high quality ethylene glycol base anti-freeze, mixed with distilled water. Do not mix an alcohol base anti-freeze and different brands of anti-freeze.
- * Do not put in more than 60 % anti-freeze or less than 50 %. (Refer to Right figure.)
- * Do not use a radiator anti-leak additive.

50 % Engine coolant including reserve tank capacity

Anti-freeze	1 200 ml (3.1/2.6 US/lmp.pt)
Water	1 200 ml (3.1/2.6 US/lmp.pt)

Anti-freeze density	Freezing point
50 %	−30 °C (−24 °F)
55 %	–40 °C (–44 °F)
60 %	–55 °C (–67 °F)

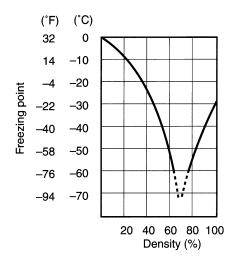


Fig.1 Engine coolant density-freezing point curve.


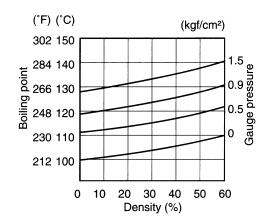


Fig.2 Engine coolant density-boiling point curve.

A WARNING

- * You can be injured by scalding fluid or steam if you open the radiator cap when the engine is hot. After the engine cools, wrap a thick cloth around cap and carefully remove the cap by turning it a quarter turn to allow pressure to escape and then turn the cap all the way off.
- * The engine must be cool before servicing the cooling system.
- * Coolant is harmful:
 - If it comes in contact with skin or eyes, flush with water.
 - If swallowed accidentally, induce vomiting and call physician immediately.
 - Keep it away from children.

COOLING CIRCUIT

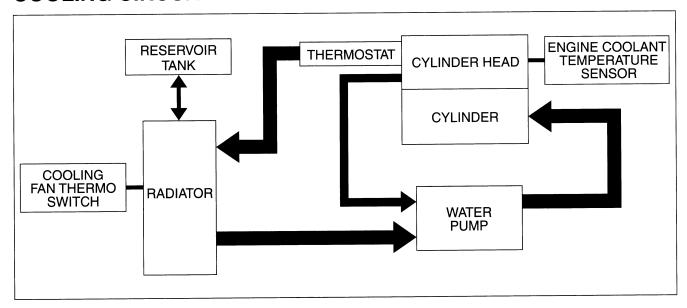

COOLING CIRCUIT INSPECTION

Before removing the radiator and draining the engine coolant, inspect the cooling circuit for tightness.

- Remove the under cowling. (8-3)
- Remove the radiator cap 1 and connect the tester 2 to the filler.

A WARNING

Do not remove the radiator cap when the engine is hot.


- Give a pressure of about 120 kPa (1.2 kgf/cm², 17 psi) and see if the system holds this pressure for 10 seconds.
- If the pressure should fall during this 10-second interval, it means that there is a leaking point in the system. In such a case, inspect the entire system and replace the leaking component or part.


▲ WARNING


When removing the radiator cap tester, put a rag on the filler to prevent spouting of engine coolant.

CAUTION

Do not allow the pressure to exceed the radiator cap release pressure, or the radiator can be damaged.

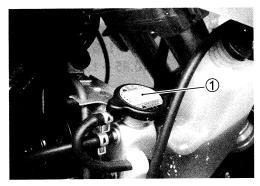

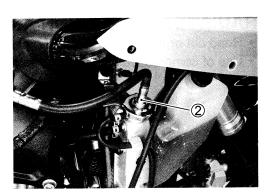

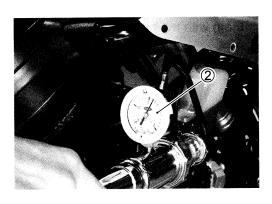


RADIATOR AND WATER HOSES RADIATOR REMOVAL


- Remove the under cowling. (8-3)
- Drain the engine coolant. (2-19)
- Remove the radiator. (3-4)

RADIATOR CAP INSPECTION

 - Fit the cap 1 to the radiator cap tester 2.
- Build up pressure slowly by operating the tester. Make sure that the pressure build-up stops at 95 - 125 kPa (0.95 - 12.5 kgf/cm², 13.5 - 17.8 psi) and that, with the tester held standstill, the cap is capable of holding that pressure for at least 10 seconds.
- Replace the cap if it is found not to satisfy either of these two requirements.




 $(0.95 - 1.25 \text{ kgf/cm}^2, 13.5 - 17.8 \text{ psi})$

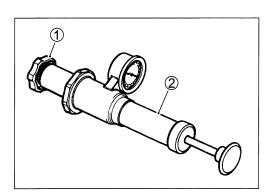


RADIATOR INSPECTION AND CLEANING

- Road dirt or trash stuck to the fins must be removed.
- Use of compressed air is recommended for this cleaning.

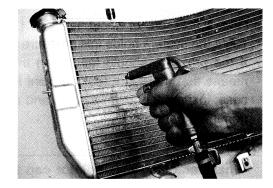

• Fins bent down or dented can be repaired by straightening them with the blade of a small screwdriver.

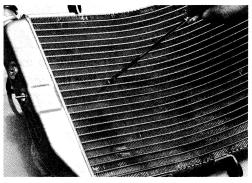


RADIATOR REMOUNTING

- Install the radiator.
- Route the radiator hoses. (10-19)
- Pour engine coolant. (2-19)
- Bleed air from the cooling circuit. (2-20)
- Install the under cowling.


WATER HOSE INSPECTION


- Remove the under cowling. (8-3)
- Any water hose found in a cracked condition or flattened must be replaced.
- Any leakage from the connecting section should be corrected by proper tightening.

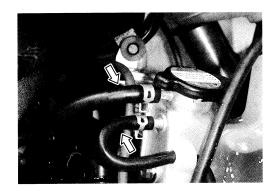






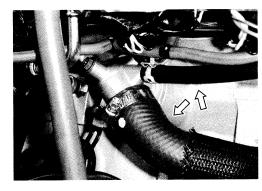

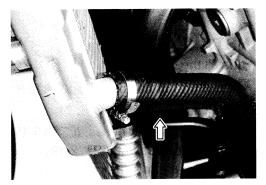




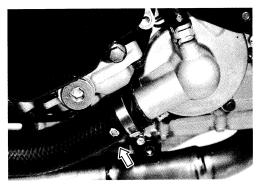

COOLING FAN


REMOVAL

- Remove the under cowling. (\$\sumset\$ 8-3)
- Drain the engine coolant. (2-19)
- Remove the radiator. (3-4)
- Remove the cooling fan.

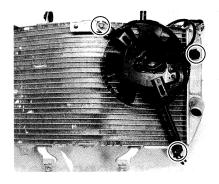

INSPECTION

- Remove the under cowling. (\$\sumsymbol{1} 8-3)
- Disconnect the cooling fan coupler ①.
- Test the cooling fan motor for load current with an ammeter connected as shown in the illustration.

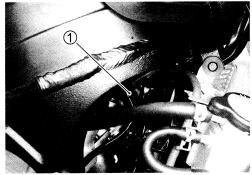

- The voltmeter is for making sure that the battery applies 12 volts to the motor. With the motor with electric motor fan running at full speed, the ammeter should be indicating not 5 amperes and more.
- If the fan motor does not turn, replace the motor assembly with a new one.

NOTE:


When making above test, it is not necessary to remove the cooling fan.


INSTALLATION

• Install the cooling fan.

Cooling fan mounting bolt: 8 N·m (0.8 kgf-m, 6.0 lb-ft)

- Install the radiator.
- Route the radiator hoses. (10-19)
- Pour engine coolant. (2-19)
- Bleed the air from the cooling circuit. (2-20)
- Install the under cowling. (10-24)

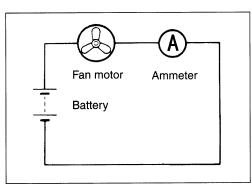


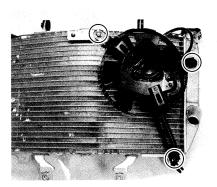

COOLING FAN THERMO-SWITCH

REMOVAL

- Remove the under cowling. (8-3)
- Drain the engine coolant. (2-19)
- Disconnect the cooling fan thermo-switch coupler ①.
- Remove the cooling fan thermo-switch ②.

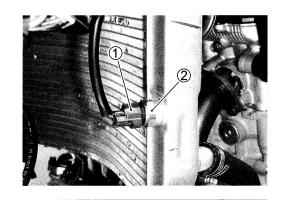

INSPECTION

- Check the thermo-switch closing or opening temperatures by testing it at the bench as shown in the figure. Connect the thermo-switch to a circuit tester and place it in the oil contained in a pan, which is placed on a stove.
- Heat the oil to raise its temperature slowly, and read the column thermometer when the switch closes or opens.
- 09900-25008: Multi circuit tester set
- Tester knob indication: Continuity test (•)))
- Cooling fan thermo-switch operating temperature:

Standard (OFF → ON): Approx. 105 °C (221 °F)


(ON→OFF): Approx. 100 °C (212 °F)


CAUTION

- * Take special care when handling the thermo-switch. It may cause damage if it gets a sharp impact.
- * Do not contact the cooling fan thermo-switch ① and the column thermometer ② with a pan.

INSTALLATION

- Install the O-ring ①.
- Tighten the cooling fan thermo-switch to the specified torque.
- Cooling fan thermo-switch: 17 N·m
 (1.7 kgf-m, 12.5 lb-ft)
- Pour engine coolant. (2-19)
- Install the under cowling. (10-24)

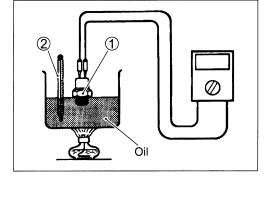

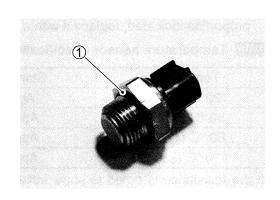

ENGINE COOLANT TEMPERATURE SEN-SOR


REMOVAL

- Remove the front seat. (\$\sumset\$ 8-6)
- Lift and support the fuel tank. (5-5)
- Disconnect the engine coolant temperature sensor coupler.
- · Keep the motorcycle upright.
- Place a rag under the sensor and remove the engine coolant temperature sensor ①.



INSPECTION

- · Check the engine coolant temperature sensor by testing it at the bench as shown in the figure. Connect the temperature sensor 1) to a circuit tester and place it in the oil contained in a pan, which is placed on a stove.
- · Heat the oil to raise its temperature slowly and read the column thermometer 2 and the ohmmeter.

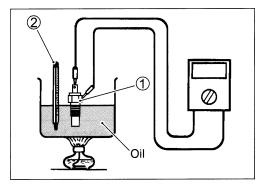

• If the temperature sensor ohmic value does not change in the proportion indicated, replace it with a new one.

DATA Temperature sensor specification

Temperature	Standard resistance
20 °C (68 °F)	Approx. 2.45 kΩ
50 °C (122 °F)	Approx. 0.811 kΩ
80 °C (176 °F)	Approx. 0.318 kΩ
110 °C (230 °F)	Approx. 0.142 kΩ

If the resistance is noted to show infinity or too much different resistance value, replace the temperature sensor with a new one.

- * Take special care when handling the temperature sensor. It may cause damage if it gets a sharp impact.
- * Do not contact the engine coolant temperature sensor 1) and the column thermometer 2) with a pan.

INSTALLATION

• Tighten the engine coolant temperature sensor to the specified torque.


■ Engine coolant temperature sensor: 18 N·m

(1.8 kgf-m, 13.0 lb-ft)

CAUTION

Take special care when handling the temperature sensor. It may cause damage if it gets a sharp impact.


- Install the fuel tank. (5-5)
- Install the front seat.

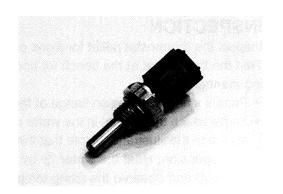



THERMOSTAT

REMOVAL

 - Remove the front seat. (8-6)
- Lift and support the fuel tank. (5-5)
- Place a rag under the thermostat cover.
- Remove the thermostat cover.



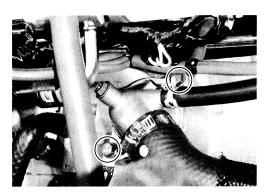

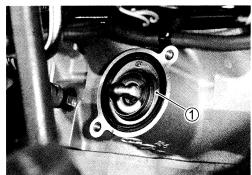


INSPECTION

Inspect the thermostat pellet for signs of cracking.

Test the thermostat at the bench for control action, in the following manner.

- Pass a string 1) between flange of thermostat 2, as shown.
- Immerse the thermostat in the water contained in a beaker, as shown in the illustration. Note that the immersed thermostat is in suspension. Heat the water ③ by placing the beaker on a stove ④ and observe the rising temperature on a thermometer ⑤.
- Read the thermometer just when opening the thermostat. This
 reading, which is the temperature level at which the thermostat valve begins to open, should satisfy the standard value.

Thermostat valve opening temperature Standard: Approx. 82 °C (180 °F)

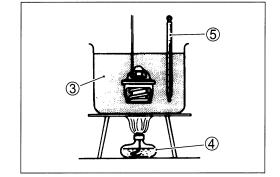

- Keep on heating the water to raise its temperature.
- Just when the water temperature reaches specified value, the thermostat valve should have lifted by at least 8.0 mm (0.31 in).

DATA Thermostat valve lift (A)

Standard: 8.0 mm and over at 95 °C

(0.31 in and over at 203 °F)


 A thermostat failing to satisfy either of the two requirements (start-to-open temperature and valve lift) must be replaced.


INSTALLATION

Install the thermostat.

NOTE:

The jiggle valve A of the thermostat faces upside.

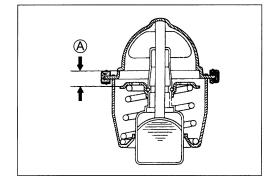

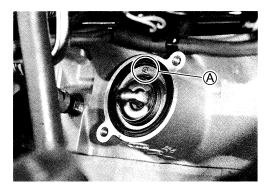


· Install the thermostat case.

NOTE:

Fit the clamp to the thermostat case bolt (A).

- Tighten the thermostat cover bolt to the specified torque.
- Thermostat cover bolt: 10 N⋅m (1.0 kgf-m 7.0 lb-ft)

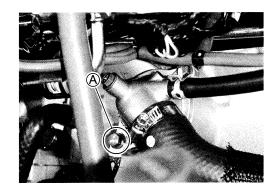


- Install the fuel tank. (5-5)
- Install the front seat.


WATER PUMP REMOVAL AND DISASSEMBLY

- Remove the under cowling. (8-3)
- Drain the engine coolant. (22-19)
- Drain the engine oil. (2-13)


NOTE:

 Before draining engine oil and engine coolant, inspect engine oil and coolant leakage between the water pump and crankcase. If engine oil is leaking, visually inspect the oil seal and O-ring. If engine coolant is leaking, visually inspect the mechanical seal and seal washer. (7-3)

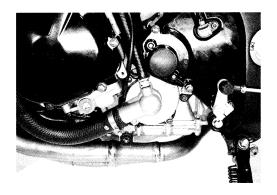






• Disconnect the water hoses.

 



• Remove the water pump cover.

 


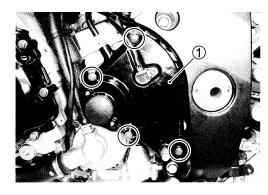

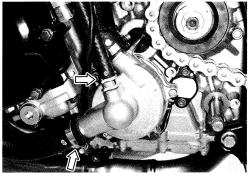


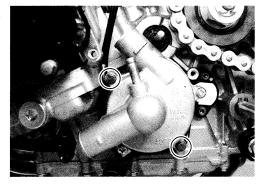

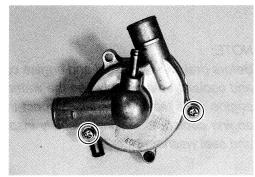


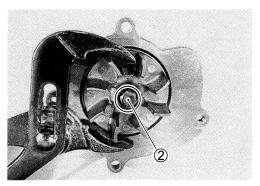

• Remove the mechanical seal ring ③ and the rubber seal ④ from the impeller.

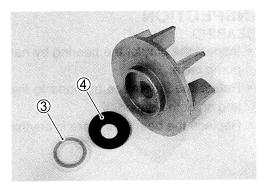

• Remove the impeller shaft ⑤.

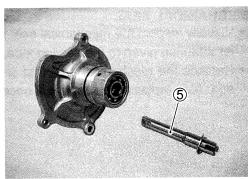

• Remove the bearings with the special tool.

09921-20240: Bearing remover set

NOTE:

If there is no abnormal noise condition, bearing removal is not necessary.

CAUTION

The removed bearing must be replaced with a new

• Remove the mechanical seal with the special tool.

09921-20240: Bearing remover set

NOTE:

If there is no abnormal condition, the mechanical seal removal is not necessary.

CAUTION

The removed mechanical seal must be replaced with a new one.


Remove the oil seal using a suitable bar.


NOTE:


If no abnormal, the oil seal removal is not necessary.

CAUTION

The removed oil seal must be replaced with a new one.

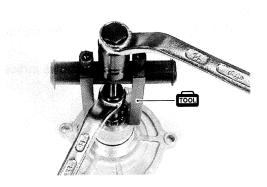

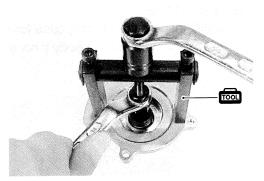


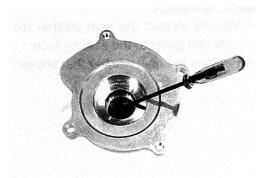

INSPECTION


BEARING

- Inspect the play of the bearing by hand while it is in the water pump case.
- Rotate the inner race by hand to inspect for abnormal noise and smooth rotation.
- Replace the bearing if there is anything unusual.

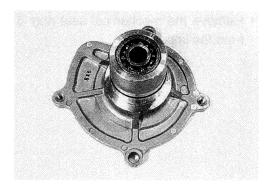


MECHANICAL SEAL

- Visually inspect the mechanical seal for damage, with particular attention given to the sealing face.
- Replace the mechanical seal that shows indications of leakage. Also replace the seal ring if necessary.

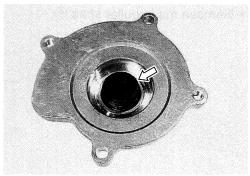


OIL SEAL

- Visually inspect the oil seal for damage, with particular attention given to the lip.
- Replace the oil seal that shows indications of leakage.

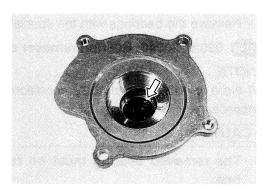


BEARING CASE

- Visually inspect the bearing case for damage.
- Replace the water pump body if necessary.

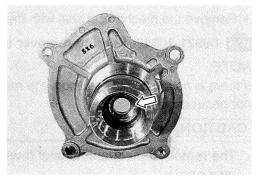

SEAL WASHER

- Visually inspect the seal washer for damage, with particular attention given to the sealing face.
- Replace the seal washer that shows indications of leakage.

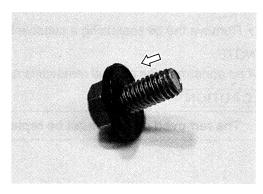

REASSEMBLY AND INSTALLATION


• Install the oil seal with the special tool.



09913-70210: Bearing installer set


NOTE:

The stamped mark on the oil seal faces outside.

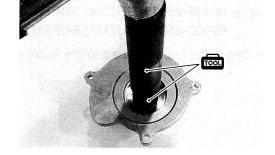

· Apply a small quantity of the SUZUKI SUPER GREASE to the oil seal lip.


√A 99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)

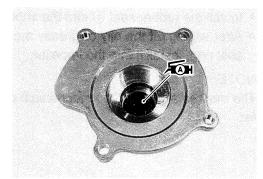


• Install the new mechanical seal using a suitable size socket wrench.

NOTE:

On the new mechanical seal, the sealer (A) has been applied.

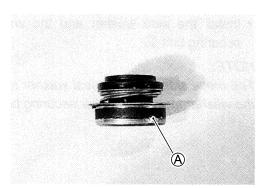

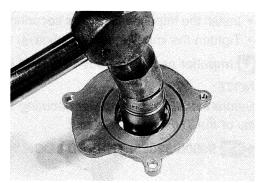


• Install the new bearings with the special tool.



1001 09913-70210: Bearing installer set

NOTE:


The stamped mark on the bearing faces crankcase side.

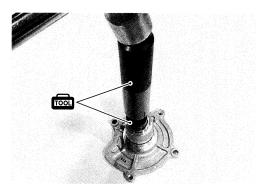

• Apply SUZUKI SUPER GREASE to the impeller shaft.

99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)


• Install the impeller shaft to the water pump body.

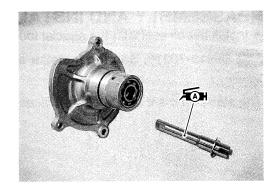

- Install the rubber seal 1 into the impeller.
- After wiping off the oily or greasy matter from the mechanical seal ring, install it into the impeller.

NOTE:


The marked side ® of the mechanical seal ring faces the impeller.

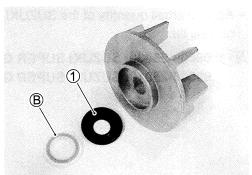

• Install the seal washer and the washer onto the impeller securing bolt ②.

NOTE:

The metal side $\mathbb C$ of the seal washer and the curved side $\mathbb D$ of the washer face the impeller securing bolt head.

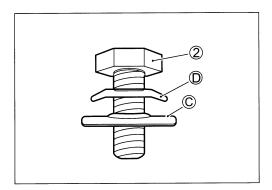


- Install the impeller ③ and its securing bolt ④ onto the shaft.
- Tighten the impeller securing bolt 4 to the specified torque.

Impeller securing bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

NOTE:

Before installing the impeller securing bolt, apply a small quantity of the THREAD LOCK to it.



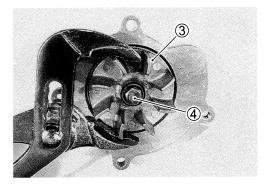


• Install the new O-rings, ⑤ and ⑥.

CAUTION

Use the new O-rings to prevent engine coolant leakage.

NOTE:

 - * Apply engine coolant to the O-ring 5.
- * Apply SUZUKI SUPER GREASE to the O-ring 6.



- Tighten the water pump cover screws to the specified torque.
- Water pump cover screw: 5 N⋅m (0.5 kgf-m, 3.7 lb-ft)


NOTE:


Fit the clamp to the water pump cover screw \mathbb{D} .


- Install the water pump and tighten its mounting bolts to the specified torque.
- **Water pump mounting bolt: 10 N⋅m (1.0 kgf-m, 7.0 lb-ft)**


NOTE:

Set the water pump shaft end E to the oil pump shaft F as shown.

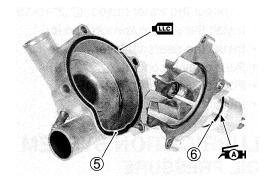

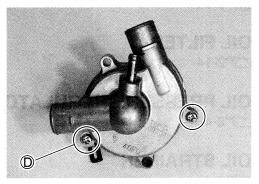

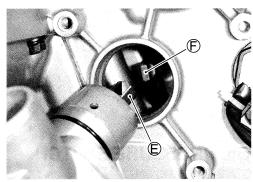

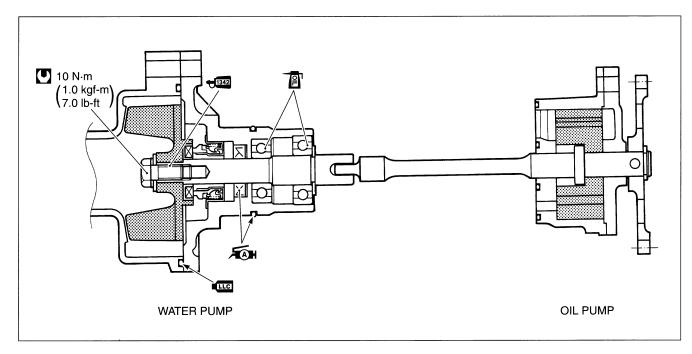

- Connect the water hoses. (10-19)
- Install the engine sprocket cover.
- Install the gearshift lever.
- Pour engine coolant. (2-19)
- Pour engine oil. (2-14)
- Install the under cowling.

LUBRICATION SYSTEM OIL PRESSURE

2-34

OIL FILTER

2-14

OIL PRESSURE REGULATOR

3-46

OIL STRAINER

3-46

OIL JET

3-57

OIL PUMP

₩3-44


OIL PRESSURE SWITCH

79-29

OIL COOLER


REMOVAL

- Remove the under cowling. (\$\sumset\$ 8-3)
- Drain the engine oil. (2-13)
- Remove the oil cooler. (3-4)

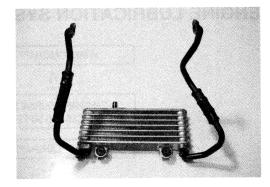


INSPECTION AND CLEANING

- Road dirt or trash stuck to the fins must be removed.
- Use of compressed air is recommended for this cleaning.

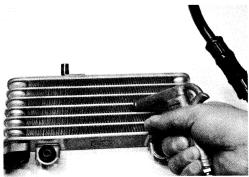

• Fins bent down or dented can be repaired by straightening them with the blade of a small screwdriver.

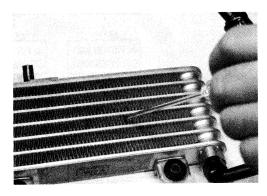

INSTALLATION

• Install a new O-ring ①.

CAUTION


Use the new O-rings to prevent engine oil leakage.


NOTE:

Apply engine oil to the O-ring ①.


• Tighten the oil cooler hose bolts to the specified torque.

Oil cooler hose bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

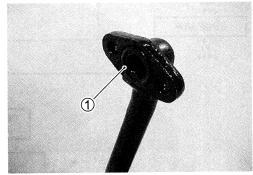


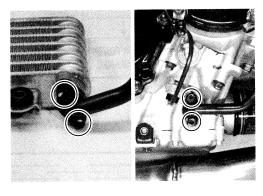


ENGINE LUBRICATION SYSTEM CHART

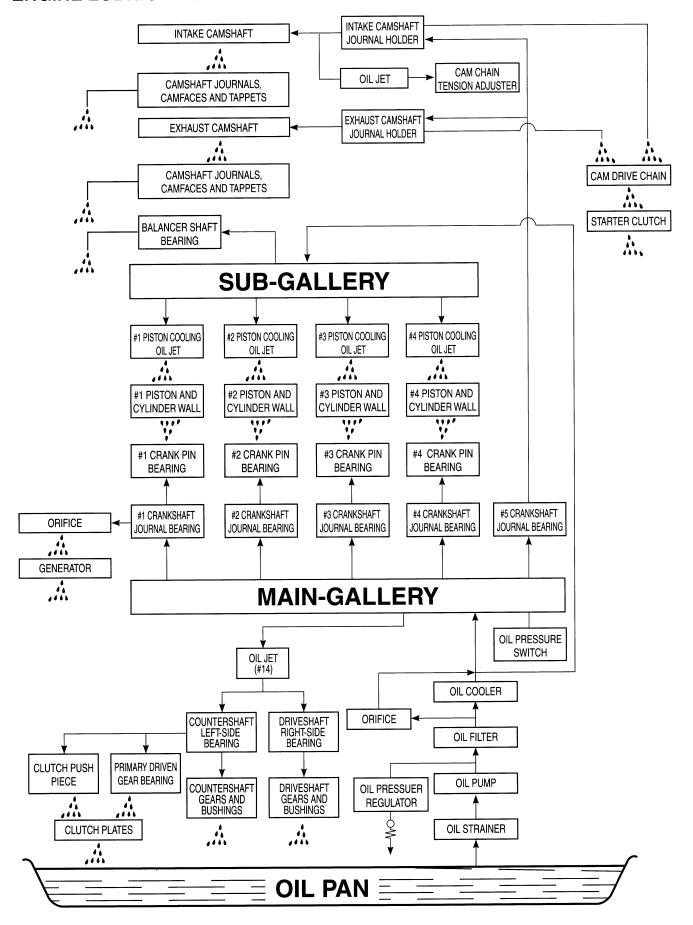

ENGINE LUBRICATION SYSTEM

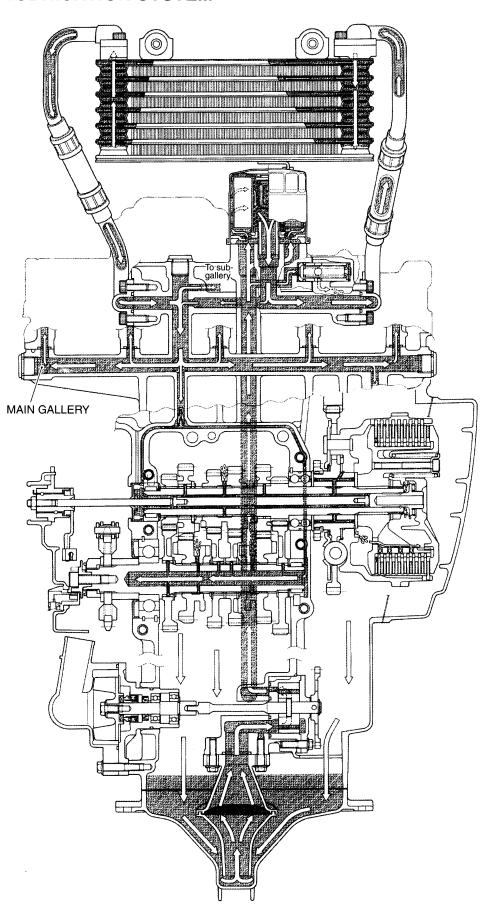

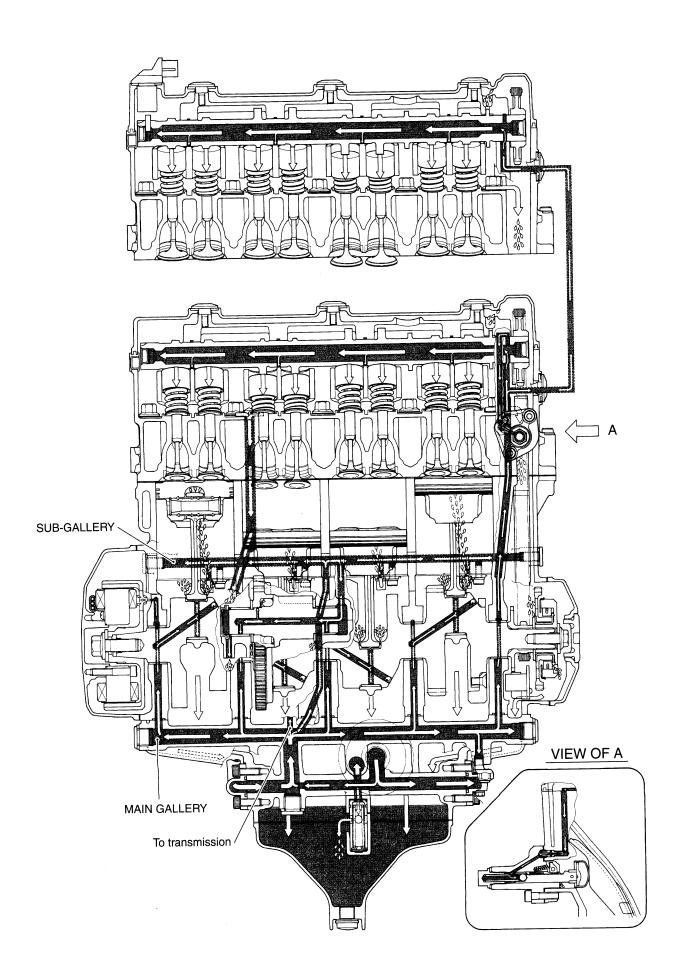

CHASSIS

CONTENTS	
EXTERIOR PARTS	8- 2
FASTENER REMOVAL AND REINSTALLATION	
SCREEN	8- 3
BODY COWLING COVER AND LOWER BRACKET COVER	
RIGHT AND LEFT UNDER COWLINGS	
BODY COWLING	8- 4
RIGHT AND LEFT AIR INTAKE PIPES	
COWLING BRACE	
FRONT SEAT	
REAR SEAT AND SEAT TAIL COVER	
FRAME COVER	8- 6
FRONT WHEEL	8- 7
CONSTRUCTION	8- <i>7</i>
REMOVAL	
INSPECTION AND DISASSEMBLY	
REASSEMBLY AND REMOUNTING	8-10
FRONT FORK	8-13
CONSTRUCTION	
REMOVAL AND DISASSEMBLY	
INSPECTION	
REASSEMBLY AND REMOUNTING	8-18
SUSPENSION SETTING	
STEERING DAMPER	
CONSTRUCTION	8-23
REMOVAL	<i>8-23</i>
INSPECTION	<i>8-23</i>
REMOUNTING	8-23
STEERING	8-24
CONSTRUCTION	8-24
REMOVAL AND DISASSEMBLY	
INSPECTION AND DISASSEMBLY	8-26
REASSEMBLY AND REMOUNTING	<i>8-26</i>
STEERING TENSION ADJUSTMENT	<i>8-29</i>
HANDLEBAR	8-30
CONSTRUCTION	
REMOVAL AND DISASSEMBLY	
REASSEMBLY AND REMOUNTING	<i>8-31</i>
REAR WHEEL	<i>8-33</i>
CONSTRUCTION	
REMOVAL	<i>8-34</i>
INSPECTION AND DISASSEMBLY	
REASSEMBLY AND REMOUNTING	8-37
REAR SHOCK ABSORBER	
CONSTRUCTION	8-41


REMOVAL	8-42
INSPECTION	8-42
REAR SHOCK ABSORBER DISPOSAL	8-43
REMOUNTING	8-44
SUSPENSION SETTING	8-44
REAR SUSPENSION	8-45
CONSTRUCTION	8-45
REMOVAL	
INSPECTION AND DISASSEMBLY	8-48
REASSEMBLY	8-51
REMOUNTING	
FINAL INSPECTION AND ADJUSTMENT	8-54
FRONT BRAKE	8-55
CONSTRUCTION	8-55
BRAKE PAD REPLACEMENT	
BRAKE FLUID REPLACEMENT	8-56
CALIPER REMOVAL AND DISASSEMBLY	8-57
CALIPER INSPECTION	8-58
CALIPER REASSEMBLY AND REMOUNTING	
BRAKE DISC INSPECTION	8-60
MASTER CYLINDER REMOVAL AND DISASSEMBLY	
MASTER CYLINDER INSPECTION	
MASTER CYLINDER REASSEMBLY AND REMOUNTING	8-62
REAR BRAKE	8-64
CONSTRUCTION	8-64
CONSTRUCTIONBRAKE PAD REPLACEMENT	8-64 8-65
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENT	8-64 8-65 8-65
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTBRAKE FLUID REPLACEMENTBRAKE FLUID REPLACEMENTBRAKE FLUID REPLACEMENT	8-64 8-65 8-65
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTION	8-64 8-65 8-65 8-66
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLY	8-64 8-65 8-66 8-67 8-67
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTIONCALIPER REASSEMBLY AND REMOUNTINGMASTER CYLINDER REMOVAL AND	8-64 8-65 8-65 8-67 8-67
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTIONCALIPER REASSEMBLY AND REMOUNTINGMASTER CYLINDER REMOVAL ANDDISASSEMBLY	8-64 8-65 8-66 8-67 8-67 8-68
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTIONCALIPER REASSEMBLY AND REMOUNTINGMASTER CYLINDER REMOVAL ANDDISASSEMBLY	8-64 8-65 8-66 8-67 8-67 8-68 8-68
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTIONCALIPER REASSEMBLY AND REMOUNTINGMASTER CYLINDER REMOVAL ANDDISASSEMBLYMASTER CYLINDER INSPECTIONMASTER CYLINDER REASSEMBLY AND REMOUNTING	8-64 8-65 8-66 8-67 8-68 8-68 8-69
CONSTRUCTIONBRAKE PAD REPLACEMENTBRAKE FLUID REPLACEMENTCALIPER REMOVAL AND DISASSEMBLYCALIPER INSPECTIONCALIPER REASSEMBLY AND REMOUNTINGMASTER CYLINDER REMOVAL ANDDISASSEMBLY	8-64 8-65 8-66 8-67 8-68 8-68 8-69
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-68 8-69 8-70
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-68 8-69 8-70 8-70
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-69 8-69 8-70 8-70
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-69 8-69 8-70 8-70
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-69 8-69 8-70 8-70
CONSTRUCTION	8-64 8-65 8-66 8-67 8-67 8-68 8-69 8-70 8-70 8-71 8-72
CONSTRUCTION	8-64 8-65 8-66 8-67 8-68 8-69 8-69 8-70 8-70 8-71 8-73
CONSTRUCTION	

EXTERIOR PARTS

FASTENER REMOVAL AND REINSTALLATION FASTENER

Removal

- Depress the head of fastener center piece ①.
- Pull out the fastener @.

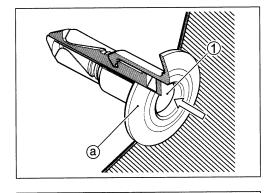


Installation


- Let the center piece stick out toward the head so that the pawls ② close.
- Insert the fastener into the installation hole.

NOTE:

To prevent the pawl ② from damage, insert the fastener all the way into the installation hole.

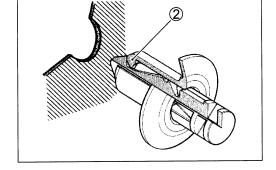

• Push in the head of center piece until it becomes flush with the fastener outside face.

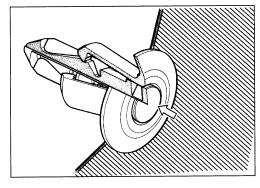


FASTENER

Removal

- Pull the head of fastener center piece
- Pull out the fastener **(b)**.


Installation

- Let the center piece stick out toward the head so that the pawls close.
- Insert the fastener into the installation hole.
- Push in the head of center piece.

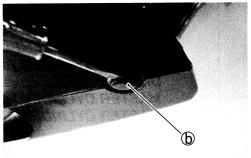

SCREEN

- Remove the bolts and nuts.
- Remove the screen.

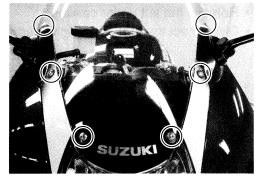


BODY COWLING COVER AND LOWER BRACKET COVER

- Remove the body cowling cover ① by removing the fasten-
- Remove the lower bracket cover ② by removing the bolts.



RIGHT AND LEFT UNDER COWLINGS


• Remove the fastener.

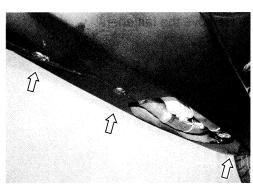

• Remove the fastener.



- Remove the right under cowling.
- Disconnect the turn signal light lead wire coupler.

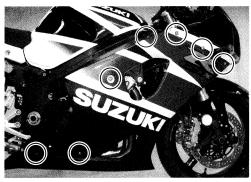


- Remove the left under cowling.
- Disconnect the turn signal light lead wire coupler.


BODY COWLING REMOVAL

• Remove the rear view mirrors and bolts.

• Remove the fasteners.

• Remove the bolts.

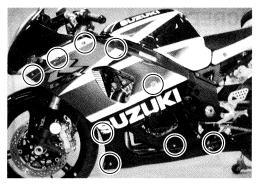

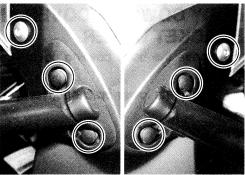







· Remove the screws.


- Disconnect the coupler and clamp.
- Remove the body cowling.



REMOUNTING


NOTE:

When remounting the body cowling, install the hooks (A) to the cowling brace holes.

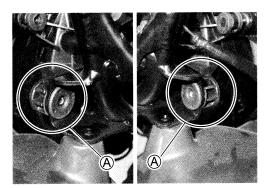

RIGHT AND LEFT AIR INTAKE PIPES

- Remove the body cowling. (\$\sumset\$ 8-4)
- Remove the fastener.
- Remove the air intake pipes ①.

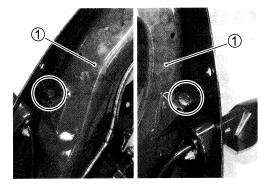

COWLING BRACE

REMOVAL

- Remove the body cowling. (\$\sumset\$ 8-4)
- Remove the cowling brace ①.

REMOUNTING

• Tighten the cowling brace bolt.


Cowling brace bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)



FRONT SEAT

• Remove the front seat by removing the bolts.



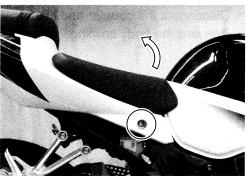


REAR SEAT AND SEAT TAIL COVER


• Remove the rear seat (seat tail cover) with the ignition key.



FRAME COVER

- Remove the seats.
- Remove the bolts.
- Disconnect the seat lock cable ①.
- Disconnect the rear combination light lead wire coupler ②.
- Remove the fasteners.
- Remove the frame cover.

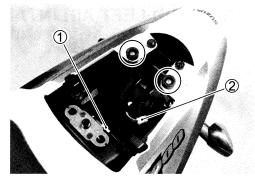

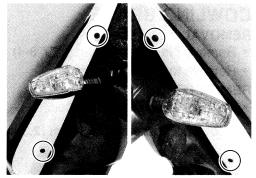


FRONT WHEEL CONSTRUCTION

23

2.3

16.5

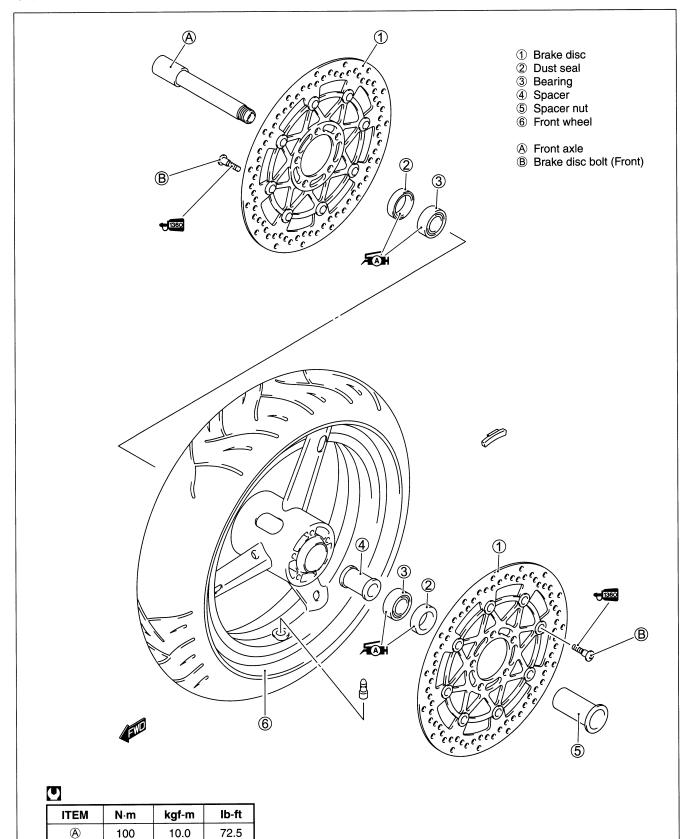

REMOVAL

• Remove the brake calipers.

CAUTION

Do not operate the brake lever while removing the calipers.

- Loosen two axle pinch bolts ① on the right front fork leg.
- Slightly loosen the front axle ② with the special tool.





· Raise the front wheel off the ground and support the motorcycle with a jack or a wooden block.


CAUTION


Do not work by using side stand. Do not support the motorcycle with exhaust pipe. Make sure that the motorcycle is supported securely.

- Draw out the front axle and remove the front wheel.
- Loosen two axle pinch bolts 3 on the left front fork leg and remove the spacer nut 4.

NOTE:

After removing the front wheel, fit the calipers temporarily to the original positions.

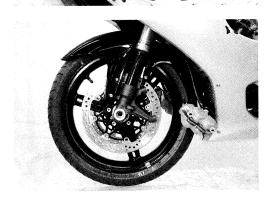

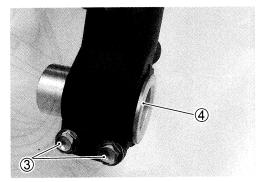


INSPECTION AND DISASSEMBLY

TIRE INSPECTION (8-70)

• Remove the brake disc.

BRAKE DISC INSPECTION (178-60)

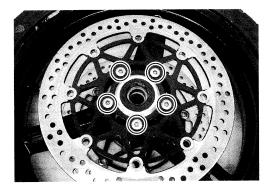


• Remove both side dust seals with the special tool.

09913-50121: Oil seal remover

CAUTION

The removed dust seals must be replaced with new ones.

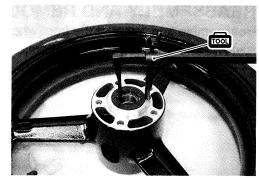

AXLE SHAFT


Using a dial gauge, check the axle shaft for runout and replace it if the runout exceeds the limit.

09900-20607: Dial gauge (1/100) 09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)

Axle shaft runout:

Service Limit: 0.25 mm (0.010 in)

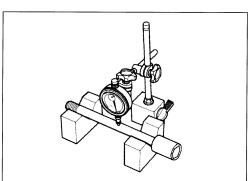


WHEEL

Make sure that the wheel runout checked as shown does not exceed the service limit. An excessive runout is usually due to worn or loosened wheel bearings and can be reduced by replacing the bearings. If bearing replacement fails to reduce the runout, replace the wheel.




Service Limit (Axial and Radial): 2.0 mm (0.08 in)

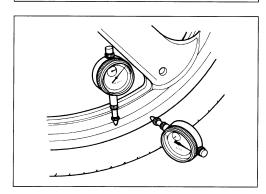


WHEEL BEARINGS

Inspect the play of the wheel bearings by finger while they are in the wheel. Rotate the inner race by finger to inspect for abnormal noise and smooth rotation.

Replace the bearing in the following procedure if there is anything unusual.

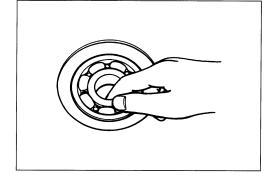


 Remove the wheel bearings with the special tool.




CAUTION

The removed bearings should be replaced with new ones.

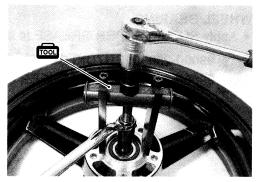

REASSEMBLY AND REMOUNTING

Reassemble and remount the front wheel in the reverse order of removal and disassembly. Pay attention to the following points:

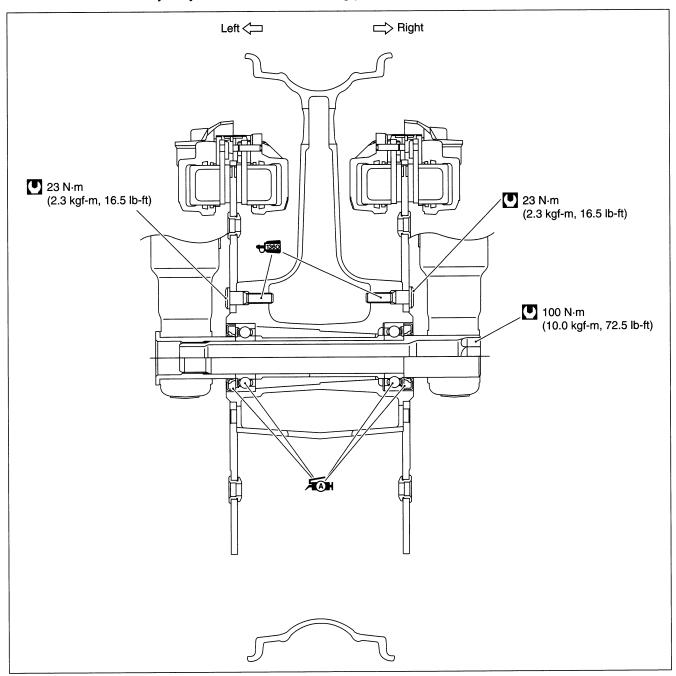

WHEEL BEARING

• Apply SUZUKI SUPER GREASE to the wheel bearings.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)



Install the wheel bearings as follows with the special tools.

09941-34513: Bearing/Steering race installer set 09924-84510: Bearing installer set

CAUTION

First install the left wheel bearing, then install the right wheel bearing.


The sealed cover of the bearing must face outside.


• Install the dust seal with the special tool.


09913-70210: Bearing installer set (52 mm)

Apply SUZUKI SUPER GREASE to the dust seal lip.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

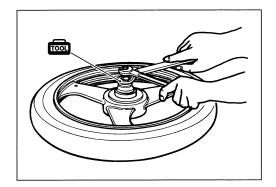

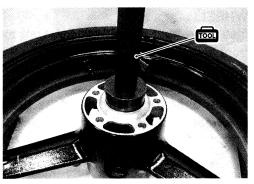

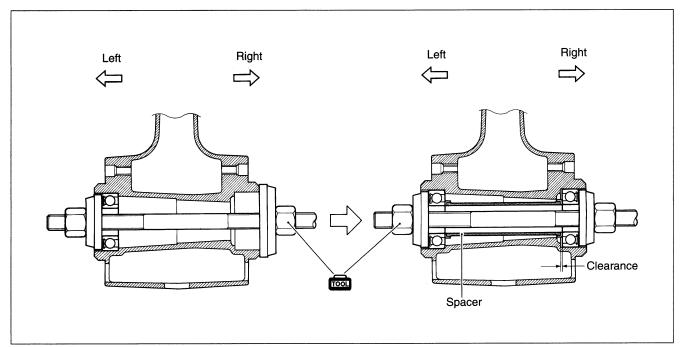


BRAKE DISC

Make sure that the brake disc is clean and free of any greasy matter.

 Apply THREAD LOCK to the disc mounting bolts and tighten them to the specified torque.


■ Brake disc bolt (Front): 23 N·m (2.3 kgf-m, 16.5 lb-ft)

+1360 99000-32130: THREAD LOCK SUPER "1360"

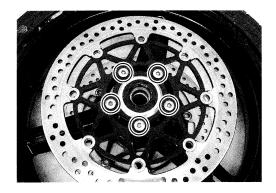

With the flange of spacer nut ① contacting the left front fork leg, tighten the two axle pinch bolts ② on the left front fork leg to the specified torque.

Front axle pinch bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

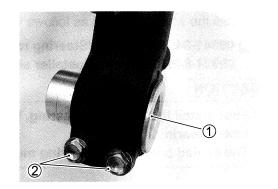

WHEEL

Install the front wheel with the front axle and hand-tighten the front axle temporarily.


▲ WARNING

The directional arrow on the tire should point to the wheel rotation, when remounting the wheel.



BRAKE CALIPER

- Tighten the brake caliper mounting bolts to the specified torque.
- Front brake caliper mounting bolt: 39 N·m (3.9 kgf-m, 28.0 lb-ft)

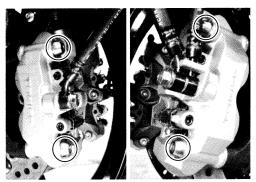


FRONT AXLE


- Tighten the front axle to the specified torque.
- Front axle: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

NOTE:


Before tightening the two axle pinch bolts on the right front fork leg, move the front fork up and down 4 or 5 times.

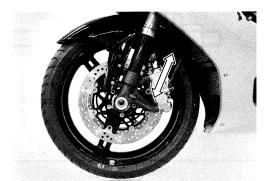

- Tighten two axle pinch bolts on the right front fork leg to the specified torque.
- Front axle pinch bolt: 23 N⋅m (2.3 kgf-m, 16.5 lb-ft)

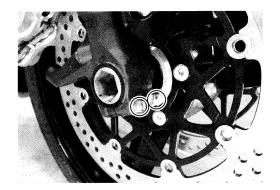



FRONT FORK CONSTRUCTION

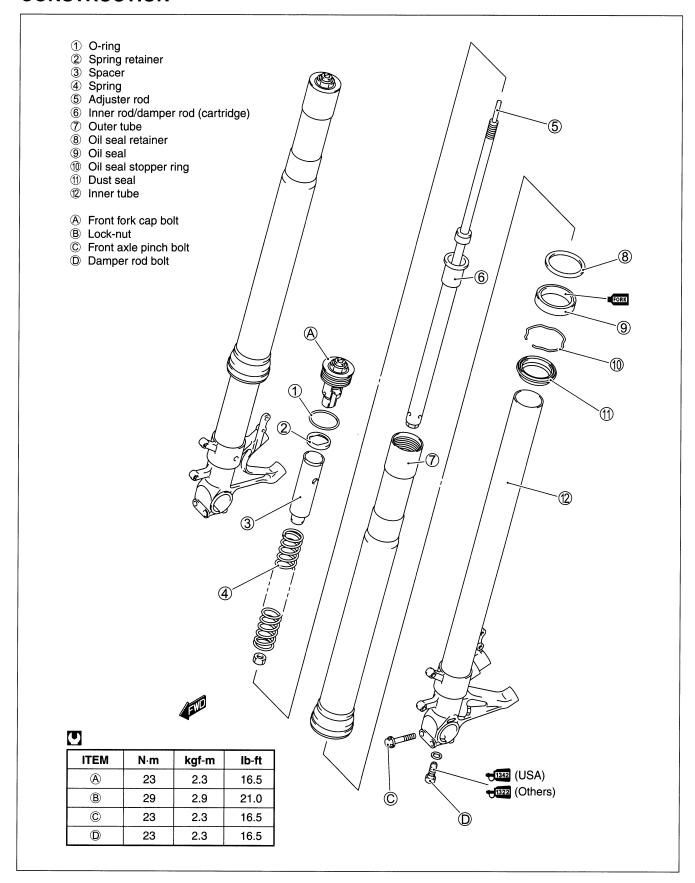

REMOVAL AND DISASSEMBLY

- Remove the front wheel. (8-8)
- Disconnect the brake hose from the brake hose guides on the front fender.
- Remove the front fender.

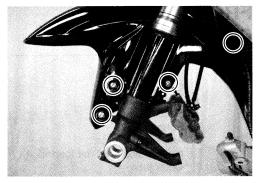


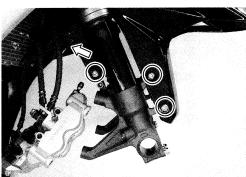


- Loosen the front fork upper clamp bolts ①, left and right.
- Loosen the handlebar clamp bolts 2, left and right.

NOTE:

- * Slightly loosen the front fork cap bolts ③ before loosening the lower clamp bolts to facilitate later disassembly.
- * Be sure to adjust the rebound damping force adjuster ④ to the softest position before removing the front fork.

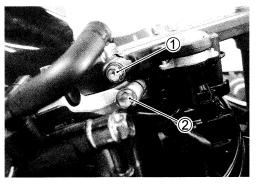

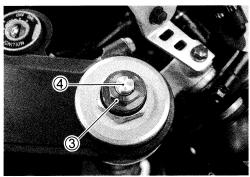


- Loosen the front fork lower clamp bolts, left and right.
- Remove the front forks, left and right.




- Separate the front fork cap bolt from the front fork.
- Compress the front fork spring with the special tool (A) and insert the special tool (B) between the lock-nut and the spacer.

09940-94930: Front fork spacer holder (A)
09940-94922: Stopper plate (B)

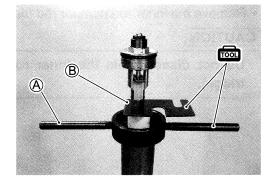


- Remove the front fork cap bolt from the inner rod by loosening the lock nut.
- Compress the fork spring with the special tool and remove the special tool.

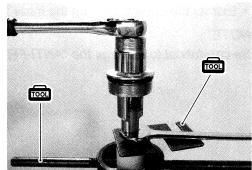


• Remove the spacer ⑥, spring retainer ⑤, spring ⑦, adjuster rod ⑧ and front fork cap ⑨.

CAUTION

- * Do not disassemble the front fork cap 9.
- * Do not have a outer tube after removing the front fork cap bolt from the front fork.

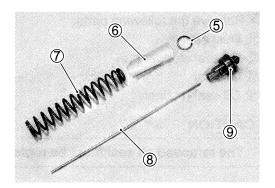


- Invert the front fork and stroke the inner rod several times to let out fork oil.
- Under the inverted condition of front fork, drain oil completely by holding the fork for a while.

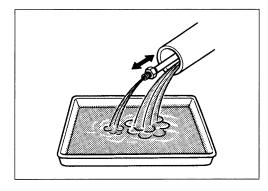

• Remove the damper rod bolt with the special tool.



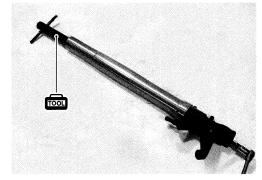

• Remove the inner rod/damper rod (cartridge) 10.

CAUTION


Do not disassemble the inner rod/damper rod (cartridge).



• Extract the outer tube from the inner tube.

NOTE:

Be careful not to damage the "ANTI-FRICTION" metals.

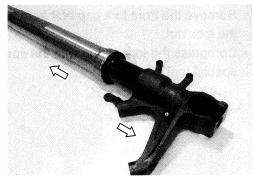

- Remove the following parts.
- 11 Dust seal
- 12 Oil seal stopper ring
- (13) Oil seal
- (4) Oil seal retainer

CAUTION

The removed oil seal must be replaced with a new one.


INSPECTION


INNER AND OUTER TUBES

- Inspect the inner tube outer surface and outer tube inner surface for scratches.
- Inspect the "ANTI-FRICTION" metal surfaces for scratches.
- If any defects are found, replace them with a new one.

CAUTION

Do not remove the "ANTI-FRICTION" metal (A) and (B).

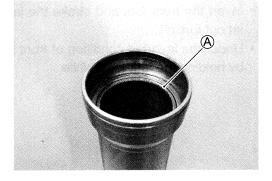

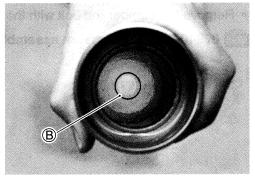


FORK SPRING

Measure the fork spring free length.


If it is shorter than the service limit, replace it with a new one.

Front fork spring free length: Service Limit: 225 mm (8.86 in)

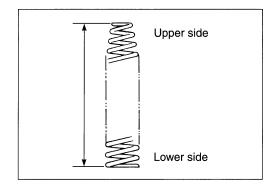

DAMPER ROD

Move the inner rod by hand to examine it for smoothness. If any defects are found, replace inner rod/damper rod (cartridge) with a new one.

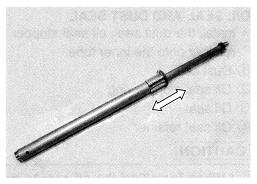

REASSEMBLY AND REMOUNTING

Reassemble and remount the front fork in the reverse order of removal and disassembly. Pay attention to the following points:

OIL SEAL AND DUST SEAL

- Install the dust seal, oil seal stopper ring, oil seal and oil seal retainer onto the inner tube.
- 1) Dust seal
- 2 Oil seal stopper ring
- ③ Oil seal
- 4 Oil seal retainer


CAUTION


- * When installing the oil seal to outer tube, be careful not to damage the oil seal lip.
- * Do not use solvents for washing to prevent oil seal damage.
- * Apply fork oil to the Anti-friction metals and lip of the oil seal.
- * Make sure that the oil seal stopper ring has been fitted securely.
- Insert the inner tube into the outer tube and fit the oil seal and dust seal with the special tool.




NOTE:

Stamped mark on the oil seal should face outside.

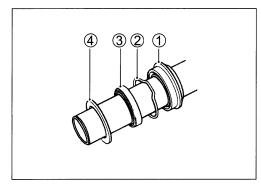

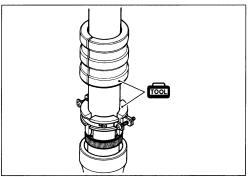

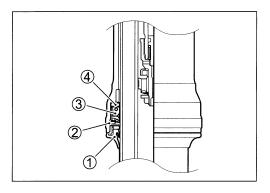

DAMPER ROD BOLT

- Insert the inner rod/damper rod (cartridge) into the inner tube.
- Apply THREAD LOCK to the damper rod bolt and tighten it to the specified torque with the special tool.

99000-32050: THREAD LOCK "1342" (USA)

99000-32110: THREAD LOCK SUPER "1322" (Others)




09940-30221: Front fork assembling tool

Damper rod bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

CAUTION

Use a new damper rod bolt gasket to prevent oil leakage.

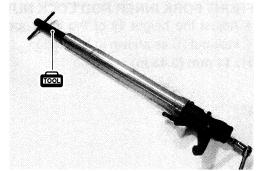


FORK OIL

- Place the front fork vertically without spring.
- Compress it fully.
- · Pour specified front fork oil up to the top level of the outer tube.

PATA Capacity (each leg): 509 ml (17.2/17.9 US/Imp oz)

 
FORK 99000-99044-L01: SUZUKI FORK OIL L01 or an equivalent fork oil





NOTE:

 
Refill front fork oil up to the top of the outer tube so that bubbles are visible while bleeding air.



Keep the front fork vertically and wait 5 – 6 minutes.

NOTE:

 - * Always keep oil level over the cartridge top end, or air may enter the cartridge during this procedure.
- * Take extreme care so as to pump out air completely.





NOTE:


When adjusting the fork oil level, compress the outer tube fully without the fork spring.


DATA Fork oil level: 101 mm (3.98 in)

09943-74111: Front fork oil level gauge

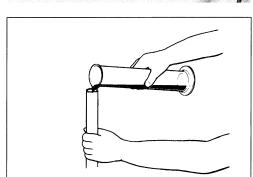

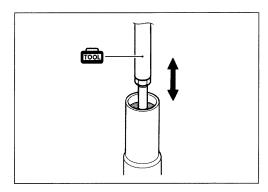

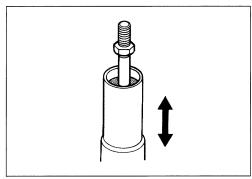


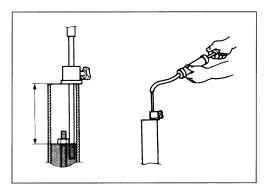

FRONT FORK INNER ROD LOCK NUT


• Adjust the height \oplus of the inner rod threads by turning the lock-nut 1 as shown in illustration.

H: 11 mm (0.43 in)

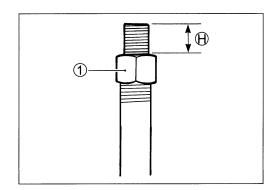


FORK SPRING

• Install the fork spring as shown in the illustration.

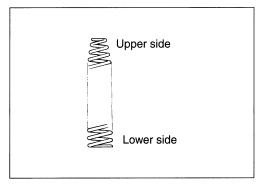

• Install the adjuster rod ①, spring ②, spring retainer ③ and spacer ④.

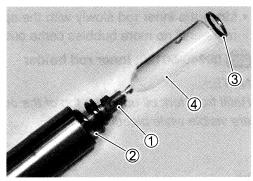


FRONT FORK CAP BOLT

- Pull up the inner rod with the special tool (A).
- Compress the spring with the special tool ® and then insert the special tool © between the lock-nut and the spacer.

09940-50120: Inner rod holder (A)

09940-94930: Front fork spacer holder ®

09940-94922: Stopper plate ©

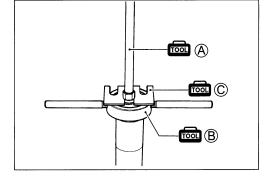


H: 11 mm (0.43 in)

• Slowly turn the cap bolt completely by hand until the end of the cap bolt seats on the lock nut.

CAUTION


Make sure that the rebound damping force adjuster ① to the softest position before installing the cap bolt.

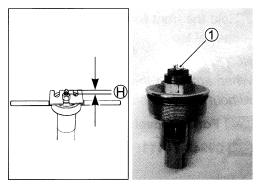


Hold the cap bolt ② and tighten the lock-nut ③ to the specified torque.

Inner rod lock-nut: 29 N⋅m (2.9 kgf-m, 21.0 lb-ft)


• Remove the special tools.

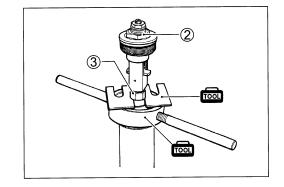

 
- Install the front fork cap bolt to the outer tube temporarily.
- Set the upper surface of the outer tube height (A) at 4.5 mm (0.18 in) from the upper surface of the steering stem upper bracket and tighten the front fork lower clamp bolts to the specified torque.



- Tighten the front fork cap bolt to the specified torque and recheck the front fork outer tube upper surface height (A) from the upper surface of the steering stem upper bracket.
- Front fork cap bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)
- Tighten the front fork upper clamp bolts and handlebar clamp bolts.
- Front fork upper clamp bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)
 Handlebar clamp bolt: 23 N.m (2.3 kgf-m, 16.5 lb-ft)

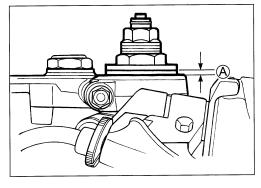



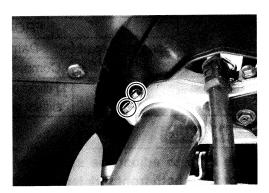

• Remount the front wheel. (\$\sumset\$78-10)

NOTE:

Before tightening the two axle pinch bolts right front fork leg, move the front fork up and down 4 or 5 times.




SUSPENSION SETTING

After installing the front fork, adjust the spring pre-load and damping force as follows.

SPRING PRE-LOAD ADJUSTMENT

There are five grooved lines on the side of the spring adjuster. Position 1 provides the maximum spring pre-load and position 5 provides the minimum spring pre-load.


STD POSITION: 4.5

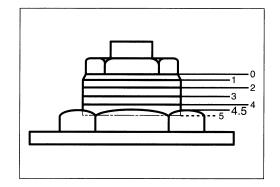

DAMPING FORCE ADJUSTMENT Compression damping force

Fully turn the damping force adjuster ① clockwise. It is at stiffest position and turn it out to standard setting position.

STD POSITION: 11 clicks out from stiffest position.

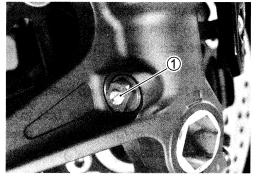

Rebound damping force

Fully turn the damping force adjuster ① clockwise. It is at stiffest position and turn it out to standard setting position.

STD POSITION: 6 clicks out from stiffest position

NOTE:


Make sure to check the 1st click position by last click sound when turning in the adjuster.

STANDARD FRONT SUSPENSION SETTING


	FRONT		
	Spring pre-load	Damping force adjuster	
	adjuster	Compression	Rebound
Solo and	4.5	11 clicks out from	6 clicks out from
dual riding		stiffest position	stiffest position

▲ WARNING

Be sure to adjust the spring pre-load and damping force on both front fork legs equally.

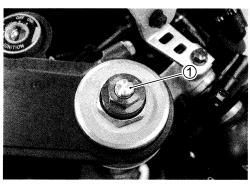


STEERING DAMPER CONSTRUCTION

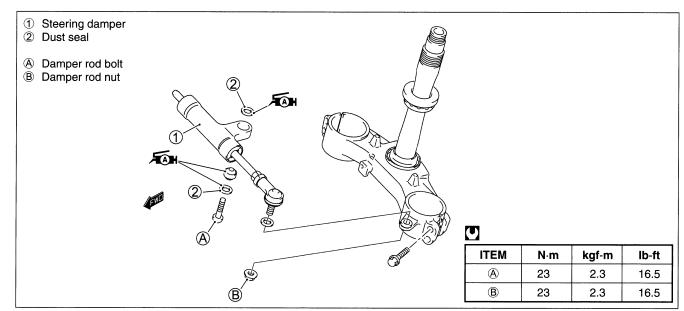

REMOVAL

- Remove the body cowling cover and lower bracket cover. (3-8-3)
- Remove the nut 1 by holding the nut 2.
- Remove the bolt 3 and remove the steering damper.

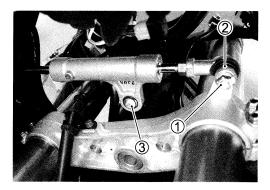

INSPECTION

Inspect the steering damper body, bearing and oil seal for damage and oil leaking.

Move the steering damper rod by hand to inspect for a smooth movement.

If any defects are found, replace the steering damper with a new one.

CAUTION


Do not remove the bolt A.


REMOUNTING

- Install the steering damper and tighten the bolt and nut.
- Steering damper bolt and nut: 23 N·m
 (2.3 kgf-m, 16.5 lb-ft)


• Apply SUZUKI SUPER GREASE to the bearings and dust seals.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

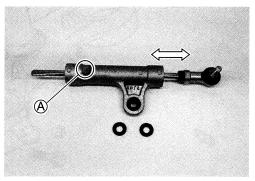

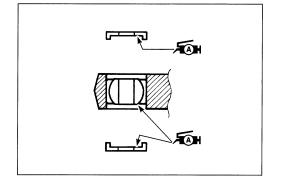

STEERING CONSTRUCTION

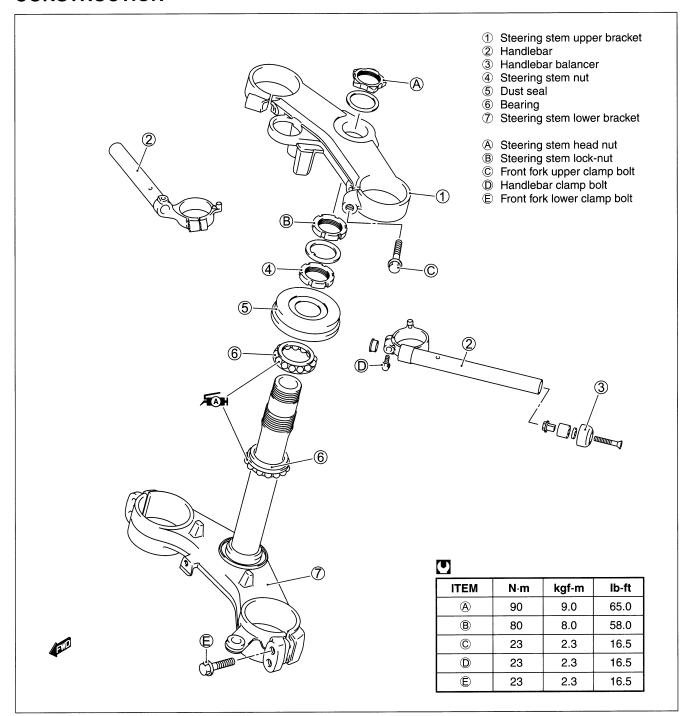

REMOVAL AND DISASSEMBLY


- Remove the front wheel. (\$\sumset\$ 8-8)
- Remove the front fork. (\$\sumsymbol{1} 8-14)

- Remove the right handlebar switch lead wires from the guide.
- Remove the steering stem upper bracket by removing its head nut.

NOTE:

It is not necessary to remove the ignition switch, only when replacing the steering stem lower bracket and bearings. (Ignition switch removal: 39-31)

- Remove the brake hose clamp bolt.
- Remove the steering damper. (\$\sumsymbol{1} 8-23)

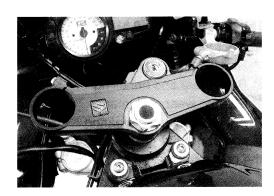





- Remove the steering stem lock-nut, washer and steering stem nut with the special tools.
- 09940-14911: Steering stem nut wrench 09940-14960: Steering stem nut wrench socket
- Draw out the steering stem lower bracket.

NOTE:

Hold the steering stem lower bracket by hand to prevent it from falling.

• Remove the dust seal ①, steering stem upper bearing inner race ② and bearing ③.

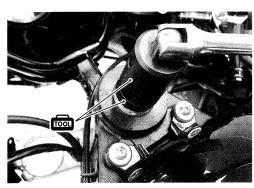

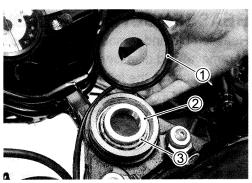

INSPECTION AND DISASSEMBLY

Inspect the removed parts for the following abnormalities.

 
- * Handlebars distortion
- * Race wear and brinelling
- * Bearing wear or damage
- * Abnormal noise of bearing

If any abnormal points are found, replace defective parts with the new ones.

 Remove the steering stem lower bearing inner race with a chisel.

CAUTION

The removed bearing outer race must be replaced with a new one.



CAUTION

The removed bearing outer race must be replaced with a new one.

REASSEMBLY AND REMOUNTING

Reassemble and remount the steering stem in the reverse order of removal and disassembly.

Pay attention to the following points:

OUTER RACE


• Press in the upper and lower bearing outer races with the special tools.





INNER RACE


• Press in the lower bearing inner race with the special tool.




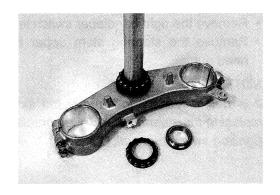

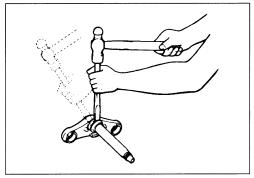

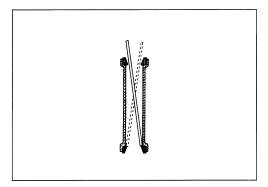


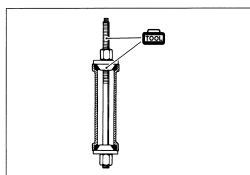

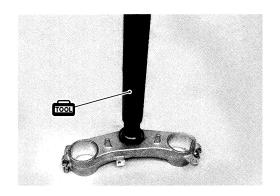

BEARING

  Apply SUZUKI SUPER GREASE to the bearings and bearing races.



- Install the lower bearing to the steering stem lower bracket.
- Install the upper bearing and bearing inner race.

STEM NUT

- Install the dust seal.
- Tighten the steering stem nut to the specified torque with the special tools.

09940-14911: Steering stem nut wrench 09940-14960: Steering stem nut wrench socket

Steering stem nut: 45 N·m (4.5 kgf-m, 32.5 lb-ft)

- Turn the steering stem lower bracket about five or six times to the left and right so that the angular ball bearings will be seated properly.
- Loosen the stem nut by 1/4 1/2 turn.

NOTE:

This adjustment will vary from motorcycle to motorcycle.

NOTE:


When installing the washer, align the stopper lug to the groove of the steering stem.


 Install the steering stem lock-nut and tighten it to the specified torque with the special tools.


09940-14911: Steering stem nut wrench 09940-14960: Steering stem nut wrench socket

Steering stem lock-nut: 80 N·m (8.0 kgf-m, 58.0 lb-ft)




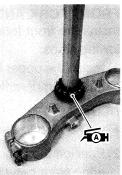

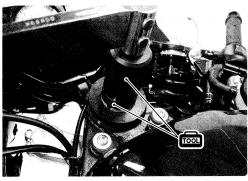

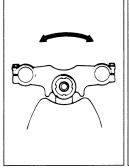



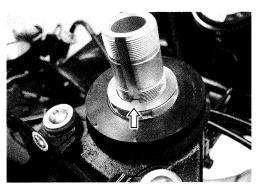



FRONT FORK AND STEERING STEM UPPER BRACKET

Install the front fork and steering stem upper bracket in the following steps:

1) Install the upper bracket, washer ① and steering stem head nut ② temporarily.


NOTE:


Pay attention to the direction of the washer.

2) Position the handlebars on the front forks and tighten the steering stem head nut ②.

Steering stem head nut: 90 N·m (9.0 kgf-m, 65 lb-ft)

- 3) Tighten the front fork upper and lower clamp bolts and brake hose clamp bolt. (8-21)
- Remount the handlebars. (8-31)
- Install the front wheel. (\$\sigma 8-10\$)
- Install the steering damper. (\$\sums\$8-23)

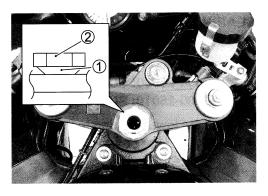

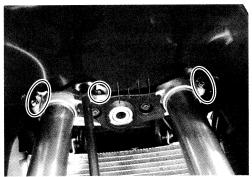

STEERING TENSION ADJUSTMENT

Check the steering movement in the following procedure.


- By supporting the motorcycle with a jack, lift the front wheel until it is off the floor by 20 – 30 mm (0.8 – 1.2 in).
- Remove the steering damper. (8-23)
- Check to make sure that the cables and wire harnesses are properly routed.
- With the front wheel in the straight ahead state, hitch the spring scale (special tool) on one handlebar grip end as shown in the figure and read the graduation when the handlebar starts moving. Do the same on the other grip end.


PATA Initial force: 200 − 500 grams **1000** 09940-92720: Spring scale

- If the initial force read on the scale when the handlebar starts turning is either too heavy or too light, adjust it till it satisfies the specification.
- First, loosen the front fork upper clamp bolts, handlebar clamp bolts, steering stem head nut and steering stem lock-nut, and then adjust the steering stem nut by loosening or tightening it.
- 2) Tighten the steering stem lock-nut, stem head nut, handle-bar clamp bolts and front fork upper clamp bolts to the specified torque and re-check the initial force with the spring scale according to the previously described procedure.
- 3) If the initial force is found within the specified range, adjustment has been completed.


NOTE:

Hold the front fork legs, move them back and forth and make sure that the steering is not loose.

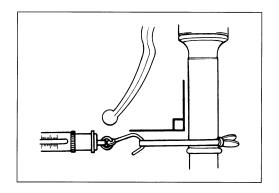

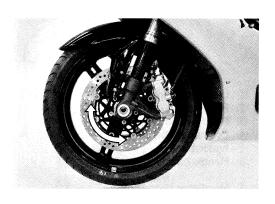


HANDLEBAR CONSTRUCTION

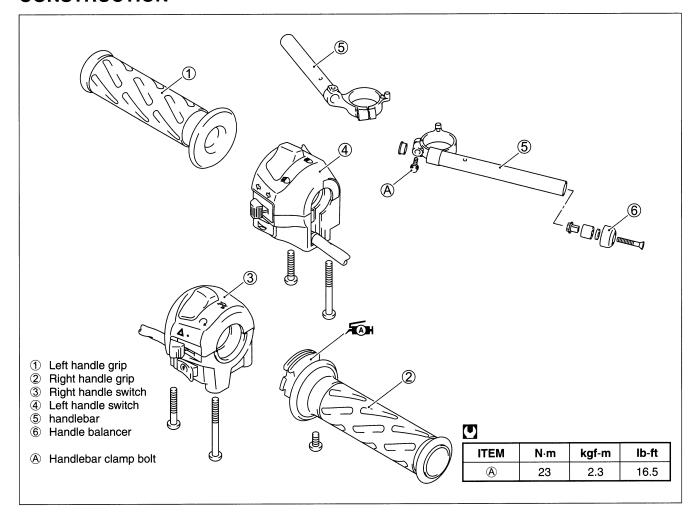


REMOVAL AND DISASSEMBLY RIGHT HANDLEBAR

- Remove the brake master cylinder ①. (\$\sumset\$ 8-61)
- Remove the right handle switch 2.
- Remove the handle balancer 3.
- Remove the right handle grip 4.

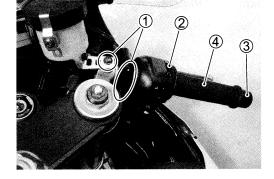


LEFT HANDLEBAR

- Remove the left handle switch 1.
- Remove the handle balancer ②.
- Remove the left handle grip 3.
- Remove the clutch lever holder 4.

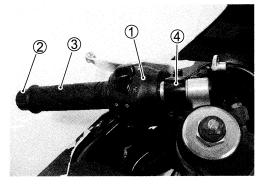


• Loosen the handlebar clamp bolts.

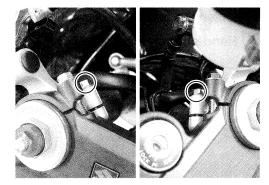


- Loosen the front fork upper clamp bolt.
- Remove the steering stem upper bracket by removing the steering stem head nut.

NOTE:

Place the rags under the steering stem upper bracket to prevent scratching the body cowling and the air intake pipes.

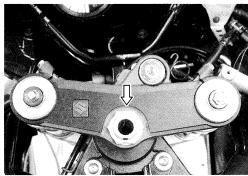

· Draw out the handlebars to upward.

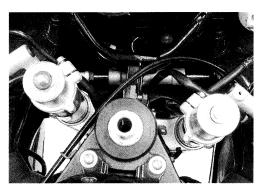


REASSEMBLY AND REMOUNTING


Reassemble and remount the handlebar in the reverse order of removal and disassembly.


Pay attention to the following points:

 - Install the handlebars temporary.
- Install the steering stem upper bracket.
- Tighten the steering stem head nut.




- Tighten the front fork upper clamp bolts.
- Front fork upper clamp bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

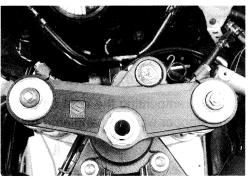


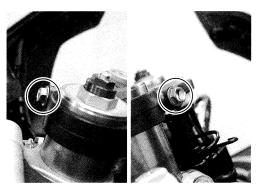

Handlebar clamp bolt: 23 N·m (2.3 kgf-m, 16.5 lb-ft)

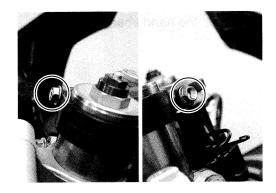

• When remounting the clutch lever holder, align the holder's mating surface (A) with punch mark (B) on the handlebar.

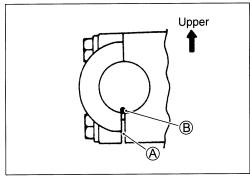

- Install the front brake master cylinder. (\$\sumset\$8-62)
- When remounting the brake master cylinder, align the holders mating surface with punch mark © on the handlebar.



 Apply the SUZUKI SUPER GREASE to the throttle cables and their holder.


99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

• When remounting the right and left handle switches, engage the stopper with the handlebar hole.






REAR WHEEL CONSTRUCTION

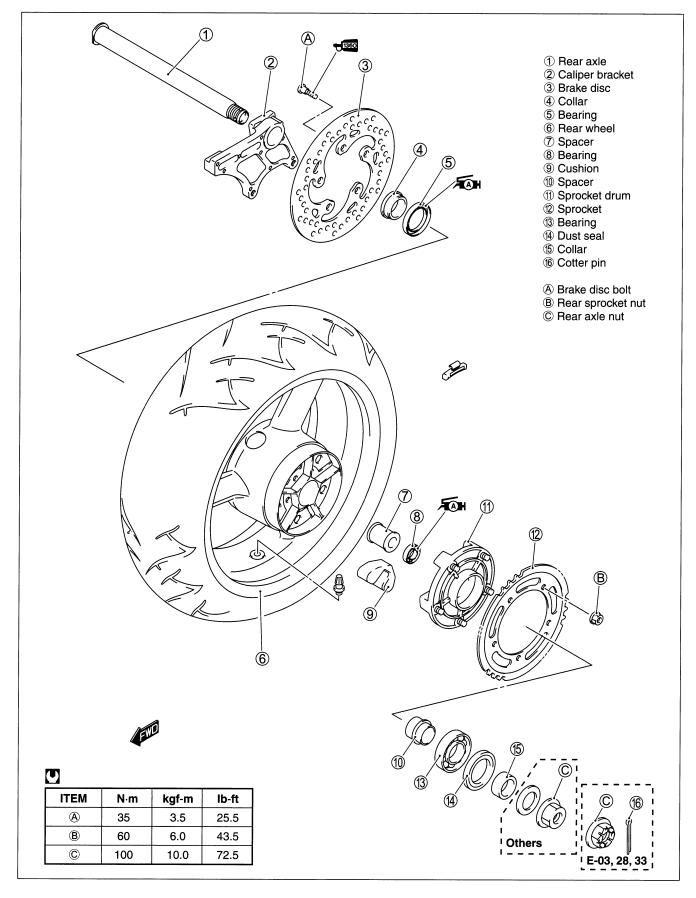

REMOVAL


- Remove the cotter pin. (For E-03, 28, 33)
- Loosen the axle nut.
- Raise the rear wheel off the ground and support the motorcycle with a jack or wooden block.
- Remove the axle nut and draw out the rear axle.

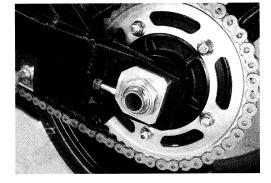


• Remove the rear wheel by disengaging the drive chain.

CAUTION


Do not operate the brake pedal while removing the rear wheel.

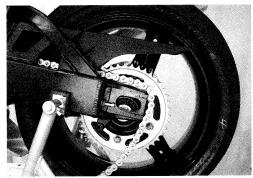


- Remove the collar 1.
- Remove the brake disc 2.

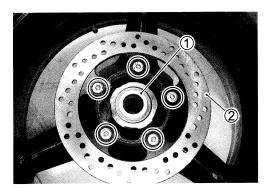

- Remove the collar 3.
- Loosen the rear sprocket mounting bolt and separate the rear sprocket ④ from its mounting drum ⑤.
- Draw out the rear sprocket mounting drum ⑤ from the wheel hub.

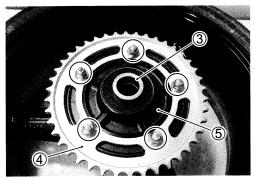

• Remove the rear sprocket mounting drum retainer 6.

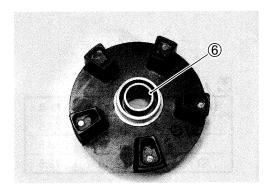


• Remove the dust seal with the special tool.

09913-50121: Oil seal remover

CAUTION

The removed dust seal must be replaced with a new one.

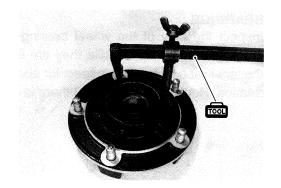

INSPECTION AND DISASSEMBLY

TIRE INSPECTION (\$\inspec\$2-28, 8-70)
WHEEL INSPECTION (\$\inspec\$8-70)

REAR AXLE


Using a dial gauge, check the rear axle for runout. If the runout exceeds the limit, replace the rear axle.

Axle shaft runout: Service Limit: 0.25 mm (0.010 in)

09900-20607: Dial gauge (1/100 mm)


09900-20701: Magnetic stand

09900-21304: V-block set (100 mm)

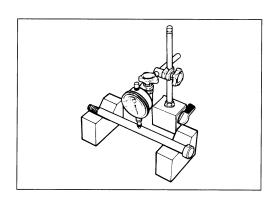


WHEEL DAMPER

Inspect the damper for wear and damage. Replace the damper if there is anything unusual.

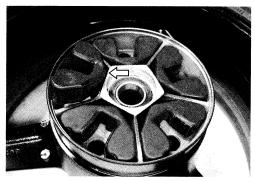


SPROCKET


Inspect the sprocket teeth for wear. If they are worn as shown, replace the two sprockets and drive chain as a set.

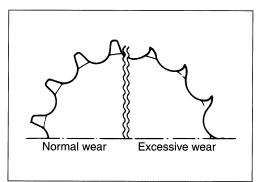


Inspect the play of the wheel bearing and sprocket mounting drum bearing by hand while they are installed in place. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.

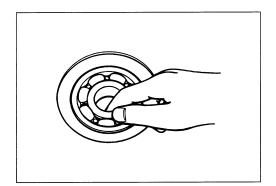

 • Remove the sprocket mounting drum bearing and wheel bearings with the special tool.




The removed bearings must be replaced with new

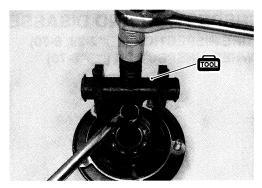



REASSEMBLY AND REMOUNTING

Reassemble and remount the rear wheel in the reverse order of removal and disassembly. Pay attention to the following points:

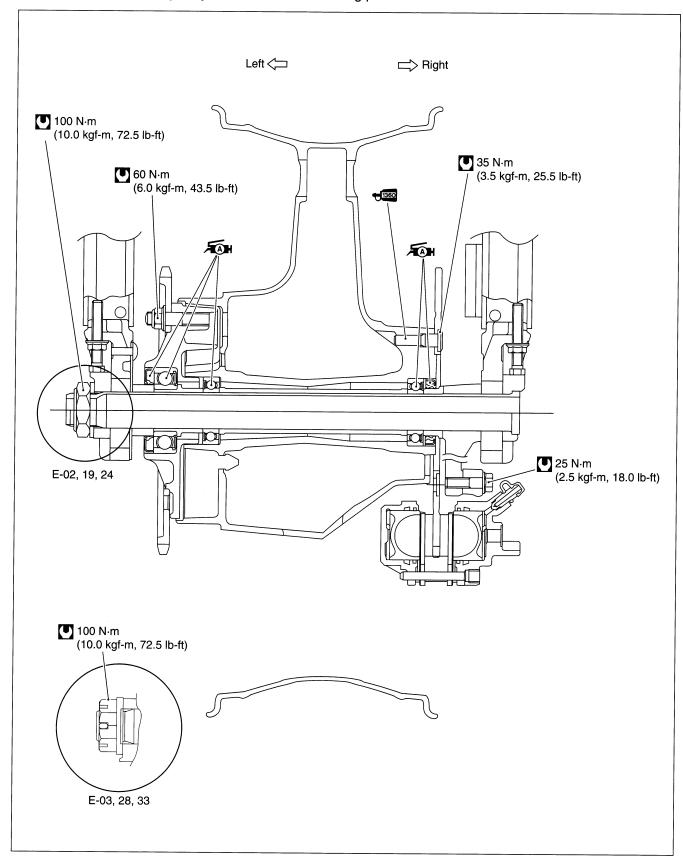


BEARINGS

• Apply SUZUKI SUPER GREASE to the bearings before installing.

√ 99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)

• Install the new bearing to the sprocket mounting drum with the special tool.

09924-84510: Bearing installer set

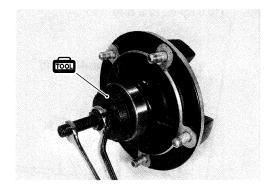


• First install the right wheel bearing, then install the left wheel bearing with the special tools.




09941-34513: Bearing/Steering race installer set 09913-70210: Bearing installer set

CAUTION

The sealed cover of the bearing must face outside.

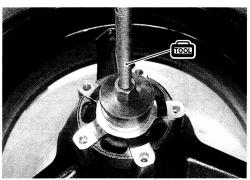

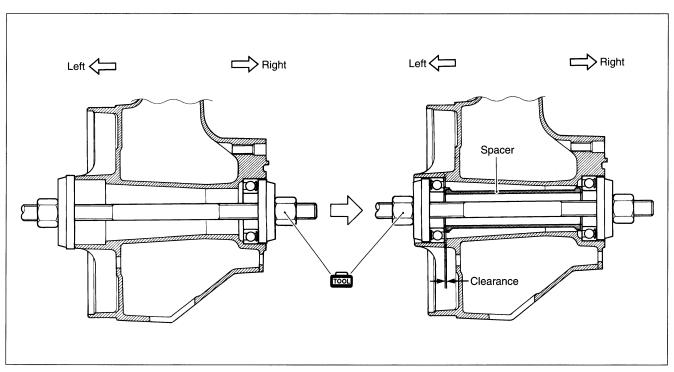

DUST SEALS

• Install the new dust seal with the special tool.


09913-70210: Bearing installer set


 Apply SUZUKI SUPER GREASE to the dust seal lip before assembling rear wheel.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

REAR SPROCKET AND SPROCKET MOUNTING DRUM

- Install the rear sprocket mounting drum retainer ①.
- Install the rear sprocket mounting drum to the rear wheel.

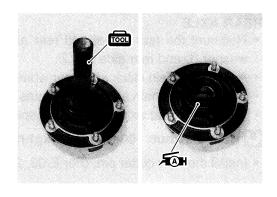

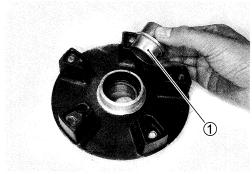

- Tighten the sprocket mounting nuts to the specified torque.
- Rear sprocket nut: 60 N·m (6.0 kgf-m, 43.5 lb-ft)

NOTE:

Stamped mark on the sprocket should face outside.

• Install the collar 2.

BRAKE DISC

 Apply THREAD LOCK to the disc bolts and tighten them to the specified torque.


NOTE:


Make sure that the brake disc is clean and free of any greasy matter.

♥350 99000-32130: THREAD LOCK SUPER "1360"

■ Brake disc bolt: 35 N·m (3.5 kgf-m, 25.5 lb-ft)

• Install the collar ①.

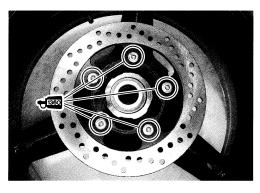

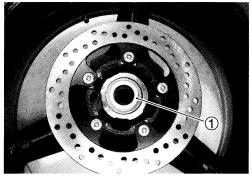


REAR AXLE


- Remount the rear wheel and rear axle shaft and, install the washer ① and rear axle nut ②.
- Adjust the chain slack after rear wheel installation. (2-22)
- Tighten both chain adjuster lock-nuts ③ securely.
- Tighten the rear axle nut ② to the specified torque.


Rear axle nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

• Install the new cotter pin. (For E-03, 28, 33)

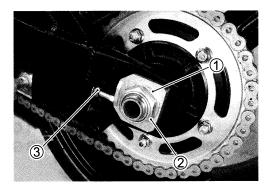

REAR SHOCK ABSORBER CONSTRUCTION

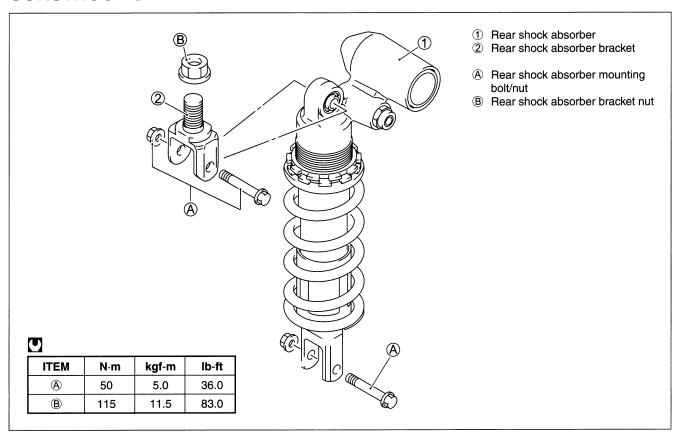


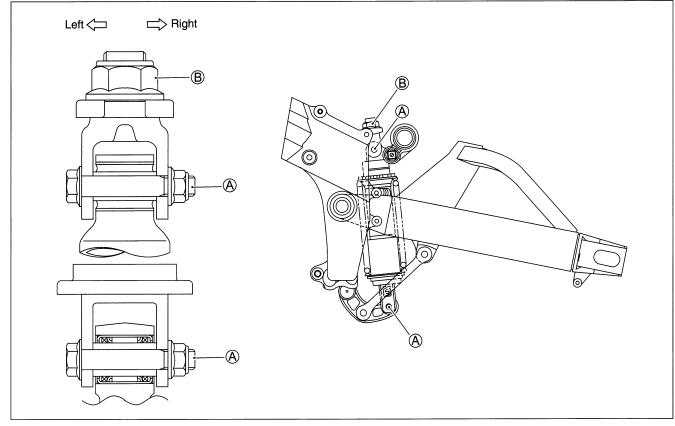

REMOVAL

- Support the motorcycle with a jack relieve no load on the rear shock absorber.
- Remove the rear shock absorber upper and lower mounting bolts and nuts.



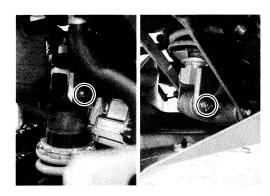




INSPECTION


Inspect the shock absorber body and bushing for damage and oil leakage.

If any defects are found, replace the shock absorber with a new one.

CAUTION

Do not attempt to disassemble the rear shock absorber unit. It is unserviceable.

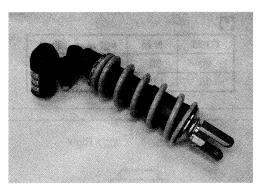

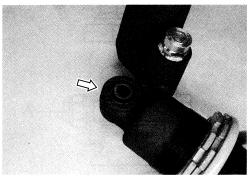

REAR SHOCK ABSORBER DISPOSAL

A WARNING

- * The rear shock absorber unit contains high-pressure nitrogen gas.
- * Mishandling can cause explosion.
- * Keep away from fire and heat. High gas pressure caused by heat can cause an explosion.
- * Release gas pressure before disposing.

GAS PRESSURE RELEASE

The rear cushion damper unit contains high-pressure nitrogen gas. Make sure to observe the following precautions.

▲ WARNING


- * Never apply heat or disassemble the damper unit since it can explode or oil can splash hazardously.
- * When discarding the rear cushion unit, be sure to release gas pressure from the unit following the procedures below.


Mark the drill center at the location (A) using a center punch. Wrap the rear cushion unit with a vinyl bag and fix it on a vise as shown.

Drill a 2-3 mm (0.08 - 0.12 in) hole at the marked drill center using a drilling machine and let out gas while taking care not to get the vinyl bag entangled with the drill bit.

▲ WARNING

- * Be sure to wear protective glasses since drilling chips and oil may fly off with blowing gas when the drill bit has penetrated through the body.
- * Make sure to drill at the specified position. Otherwise, pressurized oil may spout out forcefully.

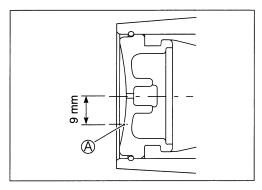

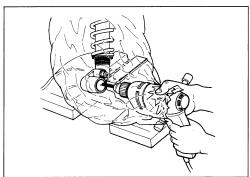

REMOUNTING


Remount the rear shock absorber in the reverse order of removal.

Pay attention to the following points:

• Install the rear shock absorber and tighten the rear shock absorber upper/lower mounting bolts and nuts.

Rear shock absorber mounting nut:

50 N·m (5.0 kgf-m, 36.0 lb-ft)

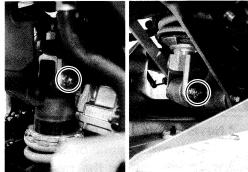

SUSPENSION SETTING

After installing the rear suspension, adjust the spring pre-load and damping force as follows.

SPRING PRE-LOAD ADJUSTMENT

The set length 184.6 mm (7.27 in) provides the maximum spring pre-load.

The set length 174.6 mm (6.87 in) provides the minimum spring pre-load.

PATA STD Length: 179.6 mm (7.07 in)

DAMPING FORCE ADJUSTMENT

Rebound side

Fully turn the damping force adjuster ① clockwise. It is at stiffest position and turn it out to standard setting position.

STD Position: 8 clicks out from stiffest position

[Fine-tune the adjuster by turning it slightly until two punch marks align.]

 
Compression side


Fully turn the damping force adjuster 2 clockwise. It is at stiffest position and turn it out to standard setting position.


DATA STD Position: 8 clicks out from stiffest position

[Fine-tune the adjuster by turning it slightly until two punch marks align.]

DATA Standard suspension setting




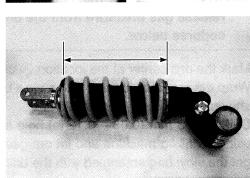

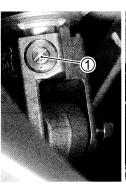



REAR SUSPENSION CONSTRUCTION

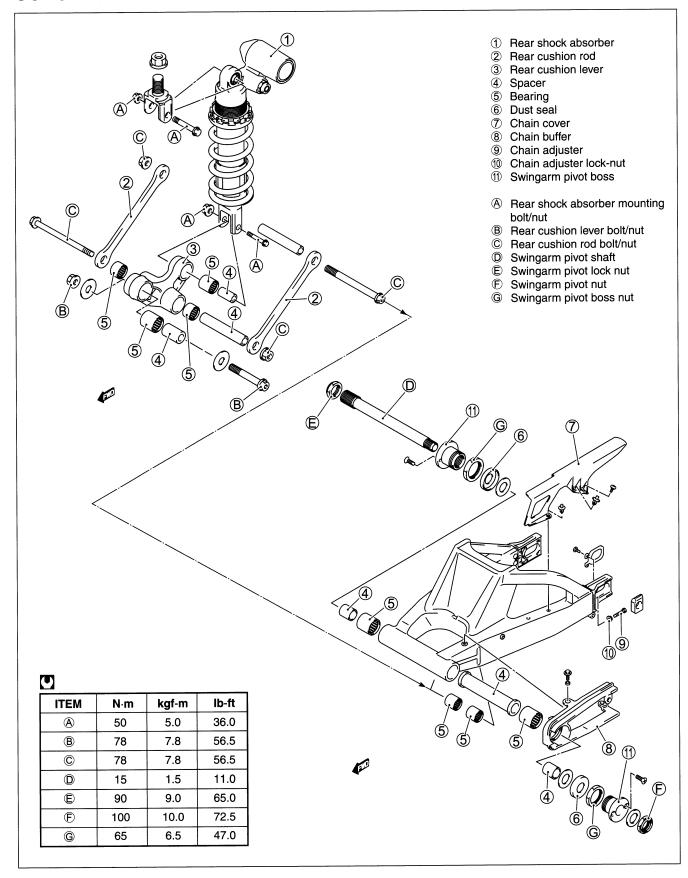

REMOVAL

• Cut the drive chain. (8-74)

NOTE:

It is necessary to cut the drive chain, only when replacing drive chain or swingarm.

- Raise the rear wheel off the ground and support the motorcycle with a jack or a wooden block.
- Remove the rear wheel. (8-34)
- Remove the side stand.

NOTE:


It is necessary to remove the side-stand, only when replacing the cushion lever.




CAUTION


Completely wipe off any brake fluid adhering to any part of motorcycle. The fluid reacts chemically with paint, plastics, rubber materials, etc., and will damage them severely.

· Remove the brake hose guides.

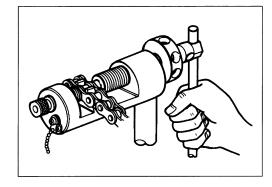



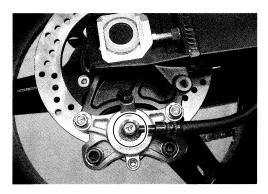


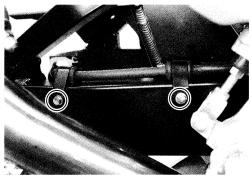


- Remove the cushion lever mounting bolt/nut and rear shock absorber lower mounting bolt/nut.
- · Remove the cushion lever.

NOTE:


Slightly loosen the cushion lever mounting bolt/nut $ilde{oldsymbol{\mathbb{A}}}$ to facilitate later disassembly.

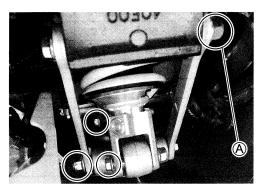



09940-14940: Swingarm pivot thrust adjuster socket wrench

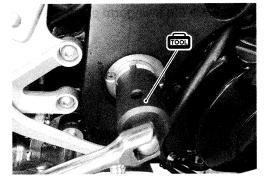


  
- Hold the swingarm pivot shaft ① and remove the swingarm pivot nut ②.
- 09900-18740: Hexagon socket (24 mm)
- Draw out the swingarm pivot shaft.
- Remove the rear suspension assembly.
- Remove the cushion rod.





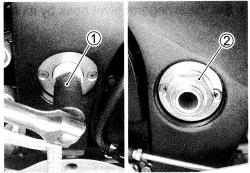

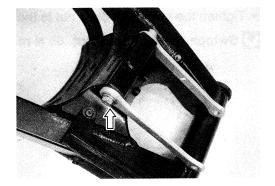

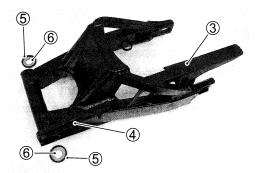


SWINGARM PIVOT BOSS REMOVAL AND INSTALLATION

- Remove the swingarm. (\$\sums\$8-46)
- Remove the swingarm pivot boss nut.


NOTE:

Remove the swingarm pivot boss when only replacing it.

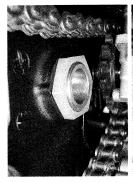





• Remove the swingarm pivot boss by removing its set screws.

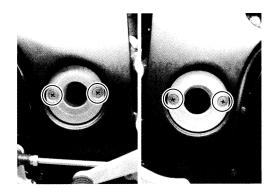

• Set the swingarm pivot boss by its set screws.

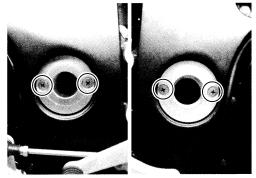



- Tighten the swingarm boss nut to the specified torque.
- Swingarm pivot boss nut: 65 N·m (6.5 kgf-m, 47.0 lb-ft)

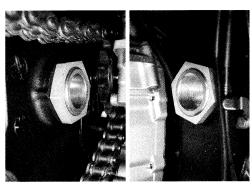

INSPECTION AND DISASSEMBLY SPACER


- Remove the spacers from swingarm.
- Remove the spacers from the cushion lever.
- Inspect the spacers for any flaws or other damage. If any defects are found, replace the spacers with new ones.

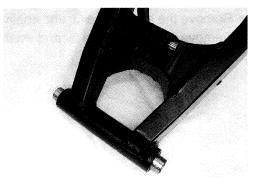

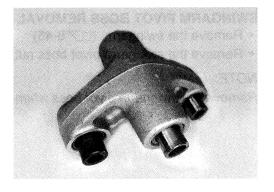

Insert the spacer into bearing and check the play when moving the spacer up and down.

If excessive play is noted, replace the bearing with a new one.

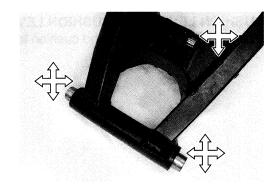



• Draw out the swingarm pivot bearings ① and the swingarm cushion rod upper bearings ② with the special tool.



CAUTION

The removed bearings must be replaced with new ones.

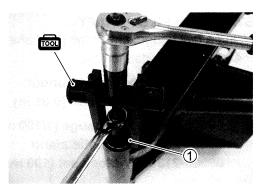


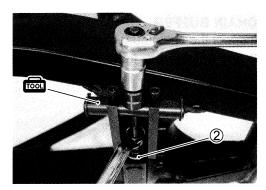

CUSHION LEVER BEARING

Insert the spacer into bearing and check the play when moving the spacer up and down.

If excessive play is noted, replace the bearing with a new one.

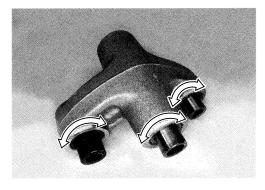


• Draw out the cushion lever bearings with the special tool.




CAUTION

The removed bearings must be replaced with new ones.

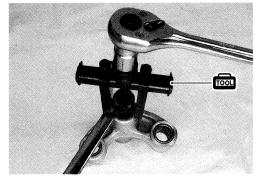

CUSHION LEVER AND CUSHION LEVER RODS

Inspect the cushion lever and cushion lever rods for damage.

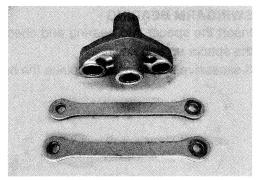

SWINGARM PIVOT SHAFT

Using a dial gauge, check the pivot shaft runout and replace it if the runout exceeds the limit.

Swingarm pivot shaft runout:

Service limit: 0.3 mm (0.01 in)


09900-20607: Dial gauge (1/100 mm, 10 mm)


09900-20701: Magnetic stand 09900-21304: V-block set (100 mm)



Inspect the chain buffer for wear and damage.


If any defects are found, replace the chain buffer with a new one.

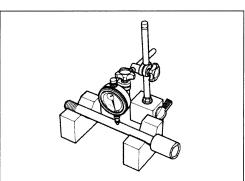

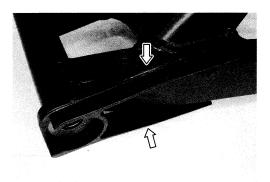

REASSEMBLY

Reassemble the swingarm in the reverse order of disassembly and removal. Pay attention to the following points:

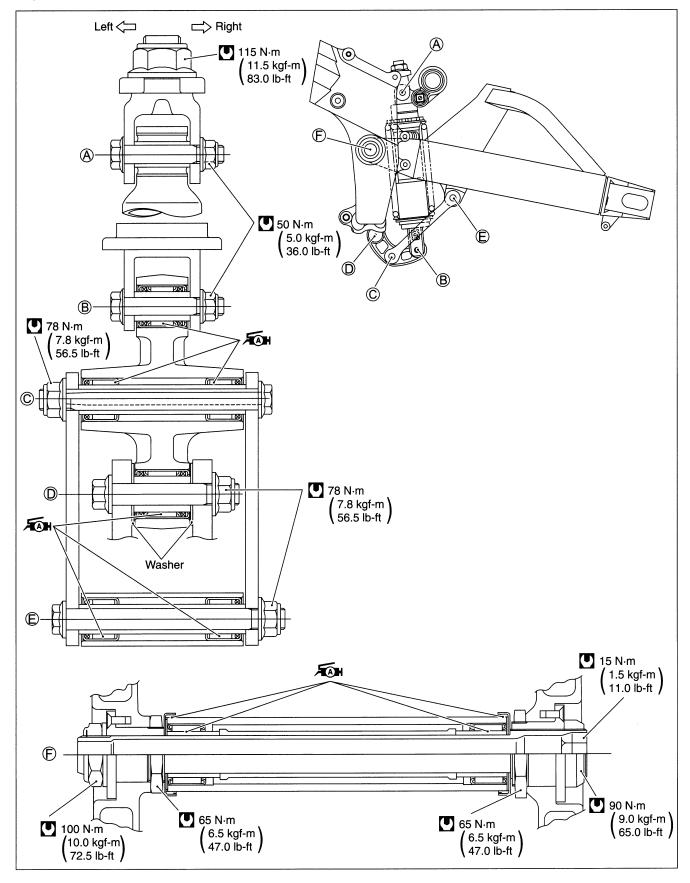

SWINGARM BEARING

 Press the bearing into the swingarm pivot with the special tool.


09941-34513: Steering race installer

• Press the swingarm cushion rod upper side bearing with the special tool.

09941-34513: Steering race installer

NOTE:

When reinstalling the bearing, stamped mark on bearing must face outside.

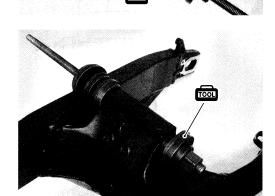


CUSHION LEVER BEARING

• Press the bearings into the cushion lever with the special tool.

09941-34513: Steering race installer


NOTE:


When installing the bearing, stamped mark on bearing must face outside.

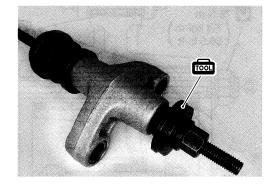


 Apply SUZUKI SUPER GREASE to the bearings, spacers, washers and dust seals.

99000-25030: SUZUKI SUPER GREASE "A" (USA)
99000-25010: SUZUKI SUPER GREASE "A" (Others)

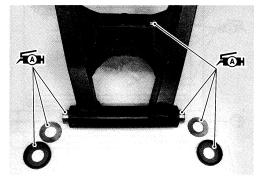


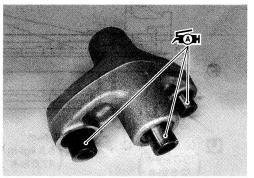

Assemble the cushion rod onto the swingarm temporarily.

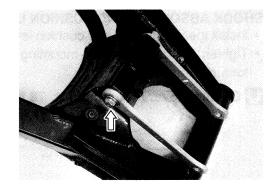

• Remount the chain case 1 and chain buffer 2.

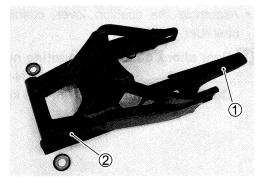


REMOUNTING


Remount the swingarm in the reverse order of disassembly and removal, and pay attention to the following points.

SWINGARM PIVOT THRUST CLEARANCE ADJUSTMENTAdjust swingarm pivot thrust clearance in the following procedure.


• Insert the swingarm pivot shaft and tighten to the specified torque.

- 09900-18740: Hexagon socket (24 mm)
- Swingarm pivot shaft: 15 N·m (1.5 kgf-m, 11.0 lb-ft)
- Hold the swingarm pivot shaft and tighten the swingarm pivot nut ① to the specified torque.
- Swingarm pivot nut: 100 N·m (10.0 kgf-m, 72.5 lb-ft)

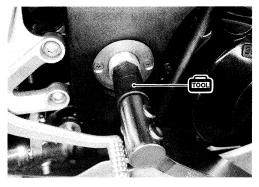

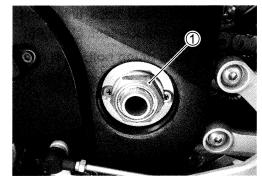


- Tighten the swingarm pivot lock-nut to the specified torque with the special tool.
- 09940-14940: Swingarm pivot thrust adjuster socket wrench
- Swingarm pivot lock-nut: 90 N·m (9.0 kgf-m, 65.0 lb-ft)

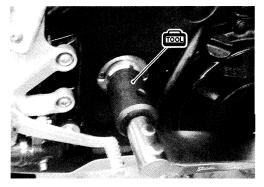

SHOCK ABSORBER AND CUSHION LEVER MOUNTING NUT


- Install the washers (and cushion lever. (8-51)
- Tighten the cushion lever mounting nut ① to the specified torque.
- Cushion lever mounting nut: 78 N·m (7.8 kgf-m, 56.5 lb-ft)

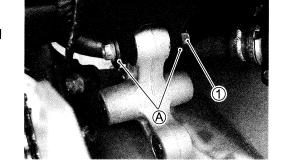


- Assemble the cushion lever, cushion rod and rear shock absorber. (8-44)
- Rear shock absorber mounting nut 2:

50 N·m (5.0 kgf-m, 36.0 lb-ft)


Cushion rod nut ③: 78 N·m (7.8 kgf-m, 56.5 lb-ft)

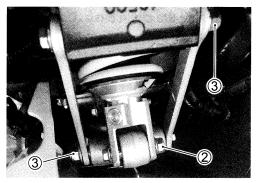

- Route the brake hose and install the brake hose guides. (10-21)
- Remount the rear wheel. (378-37)
- Remount the side-stand. (10-26)
- Connect the drive chain. (8-75)

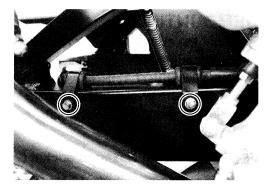

- Tighten the brake hose union bolt to the specified torque. (Brake fluid replacement: \$\sigma 8-65\$)
- Brake hose union bolt: 23 N⋅m (2.3 kgf-m, 16.5 lb-ft)

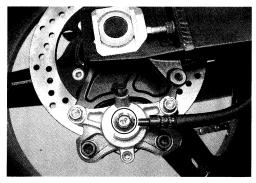


FINAL INSPECTION AND ADJUSTMENT

After installing the rear suspension and wheel, the following adjustments are required before driving.

- * Drive chain (2-22)
- * Tire pressure (2-28)

FRONT BRAKE CONSTRUCTION

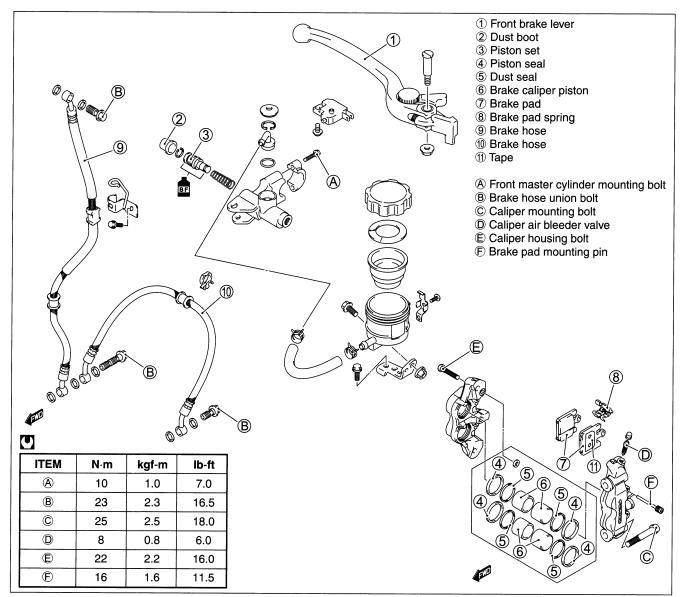

▲ WARNING

- * This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use mix different types of fluid such as silicone-based or petroleum-based.
- * Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or stored for long periods.
- * When storing the brake fluid, seal the container completely and keep away from children.
- * When replenishing brake fluid, take care not to get dust into fluid.
- * When washing brake components, use fresh brake fluid. Never use cleaning solvent.
- * A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or neutral detergent.

CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc. and will damage then severely.

BRAKE PAD REPLACEMENT

- Remove the pad mounting pins ① and springs.
- Remove the brake pads.

CAUTION

- * Do not operate the brake lever while dismounting the
- * Replace the brake pads as a set, otherwise braking performance will be adversely affected.
- Install the new brake pads.

Pad mounting pin: 16 N·m (1.6 kgf-m, 11.5 lb-ft)

NOTE:

- * Before installing the pad, clean the piston and peel the backing sheet 2 from the pad.
- * Pay attention to the direction of the convex part (A) of pad
- * After replacing the brake pads, pump the brake lever a few times to check for proper brake operation and then check the brake fluid level.


BRAKE FLUID REPLACEMENT


- Place the motorcycle on a level surface and keep the handlebars straight.
- Remove the brake fluid reservoir cap and diaphragm.
- Drain the old brake fluid as much as possible.
- Fill the reservoir with new brake fluid.
- · Connect a clear hose to the caliper air bleeder valve and insert the other end of hose into a receptacle.
- Loosen the air bleeder valve and pump the brake lever until old brake fluid flows out of the bleeder system.
- · Close the caliper air bleeder valve and disconnect a clear hose. Fill the reservoir with new fluid to the upper mark of the reservoir.





CAUTION

Bleed air from the brake system. (2-27)

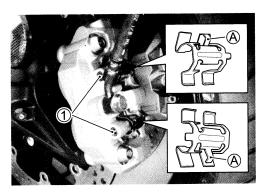

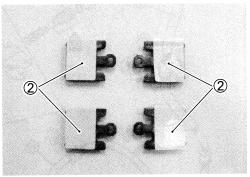

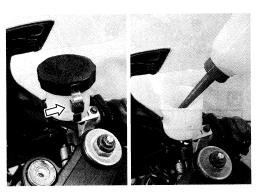

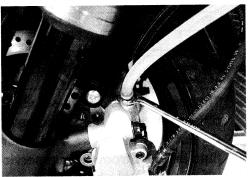

CALIPER REMOVAL AND DISASSEMBLY

- Remove the brake pads. (8-56)
- Remove the brake hose from the caliper by removing the union bolt ① and catch the brake fluid in a suitable receptacle.

NOTE:

- * Place a rag underneath the union bolt on the brake caliper to catch any split brake fluid.
- * When reusing the pad, put a reference mark on the pad so that the original position can be restored during reassembly. After cleaning the pad, attach a new tape on it.
- Remove the brake caliper by removing the caliper mounting bolts ②.

NOTE:

Slightly loosen the caliper housing bolts before removing the caliper mounting bolts to facilitate later disassembly.

CAUTION

Never reuse the brake fluid left over from previous servicing and stored for long periods of time.

▲ WARNING

Brake fluid, if it leaks, will interfere with safe running and discolor painted surfaces. Check the brake hose and hose joints for cracks and fluid leakage.

- Remove the caliper air bleeder valve 3.
- Separate the caliper halves by removing the caliper housing bolts 4.
- Remove the O-ring.


CAUTION


Replace the O-ring with a new one.

• Place a rag over the pistons to prevent it from popping out and then force out the pistons using compressed air.

CAUTION

Do not use high pressure air to prevent piston damage.

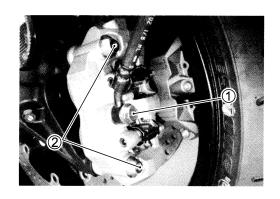

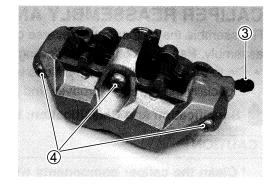






CAUTION

Do not reuse the dust seals and piston seals to prevent fluid leakage.

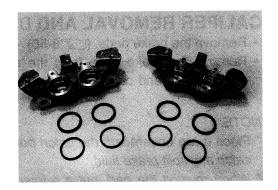

CALIPER INSPECTION


BRAKE CALIPER

Inspect the brake caliper cylinder wall for nicks, scratches or other damage.

BRAKE CALIPER PISTON

Inspect the brake caliper piston surface for any scratches or other damage.

Clean and degrease the contact portions (A) of pad and piston.

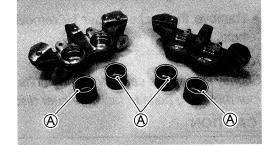

CALIPER REASSEMBLY AND REMOUNTING

Reassemble the caliper in the reverse order of removal and disassembly. Pay attention to the following points:


• Clean the caliper bores and pistons with specified brake fluid, especially the dust seal grooves and piston seal grooves.



Specification and Classification: DOT 4


CAUTION

- * Clean the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to clean them.
- * Do not wipe the brake fluid off after cleaning the components.
- * When cleaning the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine or others.
- * Replace the piston seals and dust seals with new ones when reassembly. Apply the brake fluid to both seals when installing them.

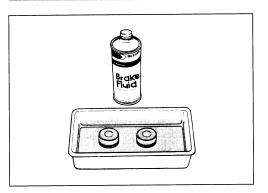

PISTON SEAL

• Install the piston seals as shown in the illustration.

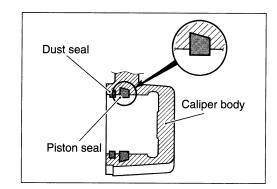

O-RING

• Install the new O-ring and reassemble caliper halves.

CAUTION

Replace the O-ring with a new one.



- Tighten each bolt to the specified torque.
- Front brake caliper housing bolt:

22 N·m (2.2 kgf-m, 16.0 lb-ft)

Front brake caliper mounting bolt 1:


39 N·m (3.9 kgf-m, 28.0 lb-ft)

Front brake hose union bolt 2:

23 N·m (2.3 kgf-m, 16.5 lb-ft)

CAUTION

Bleed air from the system after reassembling the caliper. (\bigcirc 2-27)

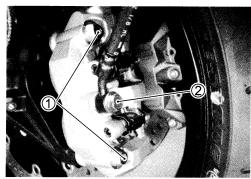

BRAKE DISC INSPECTION

Visually check the brake disc for damage or cracks.

Measure the thickness with a micrometer.

Replace the disc if the thickness is less than the service limit or if damage is found.

Front disc thickness: Service Limit: 5.0 mm (0.197 in)

09900-20205: Micrometer (0 – 25 mm)

• Remove the brake calipers. (\$\sumset\$ 8-57)

Measure the runout with a dial gauge.

Replace the disc if the runout exceeds the service limit.


Front disc runout: Service Limit: 0.30 mm (0.012 in)


09900-20607: Dial gauge (1/100 mm)

09900-20701: Magnetic stand

* Brake disc removal (8-8)


* Brake disc installation (28-11)

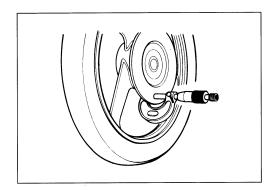

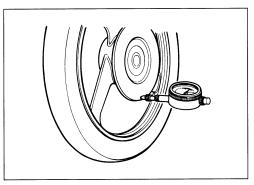

MASTER CYLINDER REMOVAL AND DISAS-SEMBLY

• Disconnect the front brake light switch lead wires.

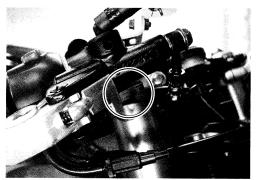


 Place a rag underneath the union bolt on the master cylinder to catch any split brake fluid. Remove the union bolt and disconnect the brake hose.

CAUTION


Immediately and completely wipe off any brake fluid contacting any part of the motorcycle. The fluid reacts chemically with paint, plastics and rubber materials, etc. and will damage them severely.

 Remove the master cylinder by removing the master cylinder bolts.

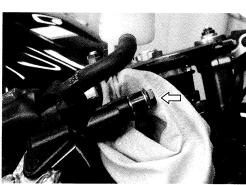





• Remove the reservoir cap ①, insulator ② and diaphragm ③.

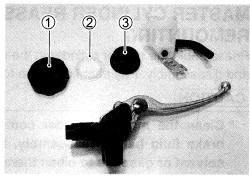

• Remove the brake lever 4 and brake switch 5.

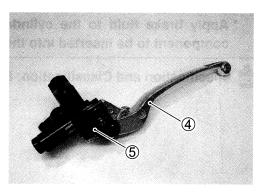


- Pull out the dust boot ① and remove the snap ring ②.
- Remove the piston/secondary cup, primary cup and return spring.
 - 3 Secondary cup
 - 4 Piston
 - ⑤ Primary cup
 - 6 Return spring
- Remove the snap ring ⑦, connector ⑧ and O-ring ⑨.

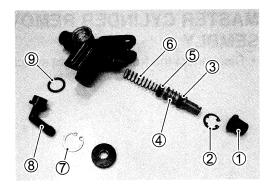

MASTER CYLINDER INSPECTION

Inspect the master cylinder bore for any scratches or other damage.

Inspect the piston surface for any scratches or other damage. Inspect the primary cup, secondary cup and dust seal for wear or damage.

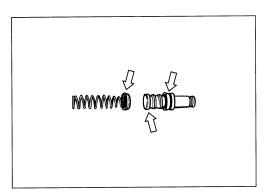

MASTER CYLINDER REASSEMBLY AND REMOUNTING

Reassemble the master cylinder in the reverse order of removal and disassembly. Pay attention to the following points:

CAUTION


- * Clean the master cylinder components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to clean them.
- * Do not wipe the components with a rag.
- * Apply brake fluid to the cylinder bore and all the component to be inserted into the bore.






Specification and Classification: DOT 4

- When remounting the brake master cylinder onto the handlebar, align the master cylinder holders mating surface with punched mark (A) on the handlebar and tighten the upper clamp bolt first as shown.
- Front brake master cylinder mounting bolt: 10 N·m (1.0 kgf-m, 7.0 lb-ft)

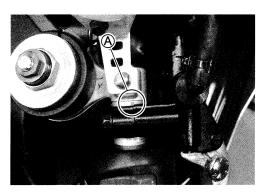


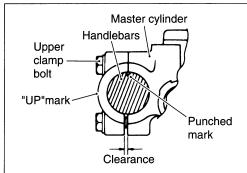


- Tighten the union bolt. (Brake hose routing: 10-20)
- Brake hose union bolt: 23 N·m (2.3 kgf.m, 16.5 lb-ft)
- Bleed air from the brake system. (2-27)

INSPECTION AFTER REASSEMBLY

• Front brake (\$\inf_2\$-25)

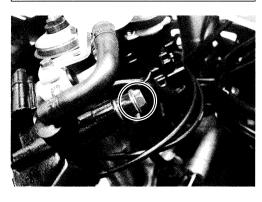

REAR BRAKE CONSTRUCTION

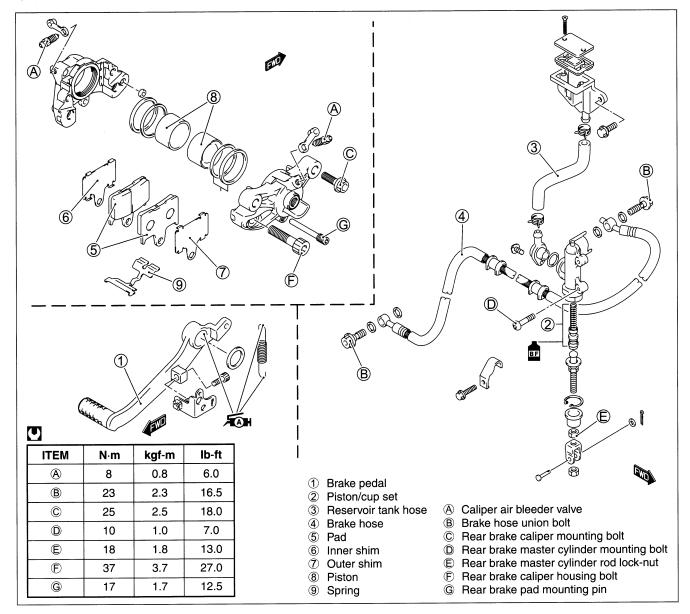

A WARNING


- * This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use mix different types of fluid such as silicone-based or petroleum-based.
- * Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or stored for long periods.
- * When storing the brake fluid, seal the container completely and keep away from children.
- * When replenishing brake fluid, take care not to get dust into fluid.
- * When washing brake components, use fresh brake fluid. Never use cleaning solvent.
- * A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or neutral detergent.

CAUTION

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc. and will damage then severely.

BRAKE PAD REPLACEMENT


• Remove the brake pad mounting pin ① and spring ②.

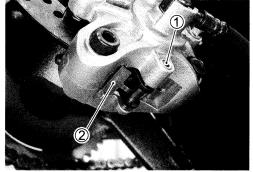

• Remove the brake pads.


CAUTION

 - * Do not operate the brake pedal while dismounting the pads.
- * Replace the brake pads as a set, otherwise braking performance will be adversely affected.
- Install the new brake pads and shims.



NOTE:

After replacing the brake pads, pump the brake pedal a few times to set the brake parts correctly and then check the brake fluid level.

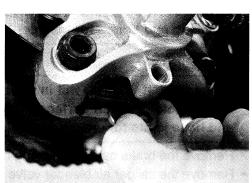


BRAKE FLUID REPLACEMENT


- Remove the frame cover. (\$\sumset\$8-6)
- Remove the brake fluid reservoir cap.
- Replace the brake fluid in the same manner as the front brake. (\$\tilde{1}\tilde{8}-56\$)



CAUTION

Bleed air from the brake system. (2-27)

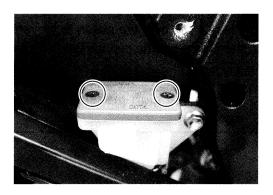

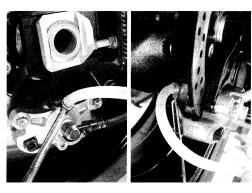

CALIPER REMOVAL AND DISASSEMBLY

- Remove the brake pads. (8-65)
- Remove the union bolt 1) and catch the brake fluid in a suitable receptacle.

NOTE:

Slightly loosen the caliper housing bolts 2 to facilitate later disassembly before removing the caliper mounting bolts.

CAUTION

Never reuse the brake fluid left over from previous servicing and stored for long periods.

▲ WARNING

Brake fluid, if it leaks, will interfere with safe running and discolor painted surfaces. Check the brake hose and hose joints for cracks and fluid leakage.

- Remove the brake caliper mounting bolts ③.
- Remove the caliper air bleeder valve 4.
- Remove the caliper housing bolts ⑤.
- · Separate the caliper halves.
- Remove the O-ring 6.

 
CAUTION

Replace the O-ring with a new one.

 Place a rag over the piston to prevent it from popping out and then force out the pistons using compressed air.


CAUTION


Do not use high pressure air to prevent piston damage.





CAUTION


Do not reuse the dust seals and piston seals to prevent fluid leakage.

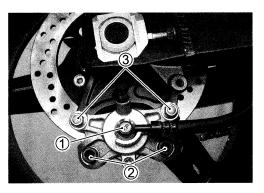

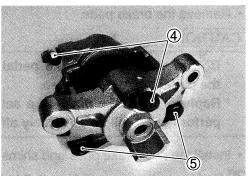

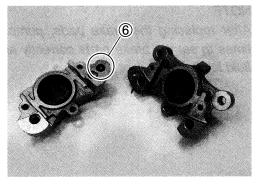

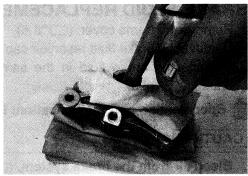

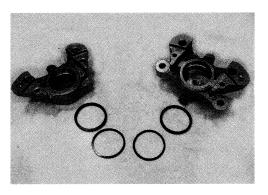

CALIPER INSPECTION

CALIPER INSPECTION (178-58) BRAKE DISC INSPECTION (1278-60)

DATA Service Limit

Rear disc thickness: 4.5 mm (0.177 in) Rear disc runout: 0.30 mm (0.012 in)

CALIPER REASSEMBLY AND REMOUNTING

Reassemble the caliper in the reverse order of removal and disassembly. Pay attention to the following points:

 Clean the caliper bores and pistons with specified brake fluid, especially the dust seal grooves and piston seal grooves.



Specification and Classification: DOT 4

CAUTION

- * Clean the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to clean them.
- * Do not wipe the brake fluid off after cleaning the components.
- * When cleaning the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine the oth-
- * Replace the piston seals and dust seals with new ones when reassembly. Apply the brake fluid to both seals when installing them.



Install the piston seals as shown in the illustration.

O-RING

• Install the new O-ring and reassemble caliper halves.

CAUTION

Replace the O-ring with a new one.

- Completely clean the thread of the caliper housing and bolts.
- Apply THREAD LOCK to the caliper housing bolts.

←1360 99000-32130: THREAD LOCK SUPER "1360"

Tighten each bolt to the specified torque.

Brake hose union bolt ①: 23 N⋅m (2.3 kgf-m, 16.5 lb-ft) Rear brake caliper housing bolt 2: 37 N·m


(3.7 kgf-m, 27.0 lb-ft)


Rear brake caliper mounting bolt 3: 25 N·m

(2.5 kgf-m, 18.0 lb-ft)


CAUTION

Bleed air from the system after reassembling the caliper. (2-27)

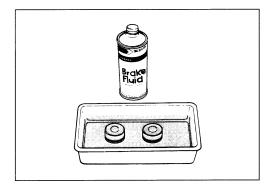

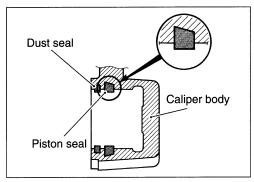




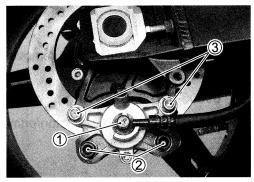

MASTER CYLINDER REMOVAL AND DISASSEMBLY

 - Remove the frame cover. (8-6)
- Remove the brake fluid reservoir tank mounting bolt ①.



- Loosen the lock-nut ③.
- Remove the mounting bolts 4.

 
CAUTION

Immediately and completely wipe off any brake fluid contacting any parts of the motorcycle. The fluid reacts chemically with paint, plastic and rubber materials, etc. and will damage them severely.

- Disconnect the reservoir tank hose.
- · Remove the master cylinder by turning the master cylinder rod (5).
- Remove the reservoir cap 6 and diaphragm 7.
- Remove the connector ® by removing the screw.
- Remove the O-ring 9.


CAUTION


Replace the O-ring with a new one.





📶 09900-06108: Snap ring pliers


• Remove the push rod ②, piston/primary cup ③ and spring ④.

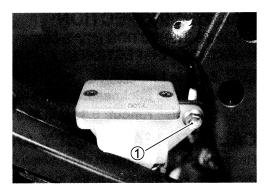

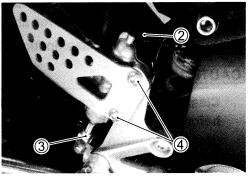

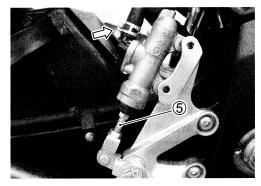

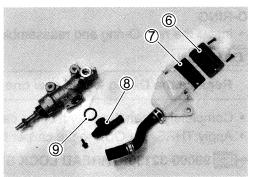

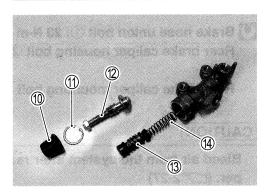


MASTER CYLINDER INSPECTION

CYLINDER, PISTON AND CUP SET

Inspect the cylinder bore wall for any scratches or other damage.

Inspect the cup set and each rubber part for damage.

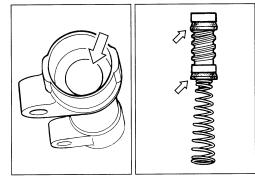

MASTER CYLINDER REASSEMBLY AND REMOUNTING

 
Reassemble and remount the master cylinder in the reverse order of removal and disassembly. Pay attention to the following points:

CAUTION

- * Clean the master cylinder components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to clean them.
- * Do not wipe the components with a rag.
- * Apply brake fluid to the cylinder bore and all the component to be inserted into the bore.



■ Specification and Classification: DOT 4



■ Brake hose union bolt ①: 23 N·m (2.3 kgf-m, 16.5 lb-ft) Rear master cylinder mounting bolt 2:

10 N·m (1.0 kgf-m, 7.0 lb-ft)


Rear master cylinder rod lock-nut 3:


18 N·m (1.8 kgf-m, 13.0 lb-ft)


• Bleed air from the brake system. (2-27)

INSPECTION AFTER REASSEMBLY

Rear brake (2-26)

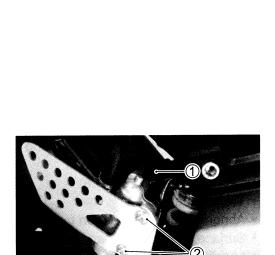

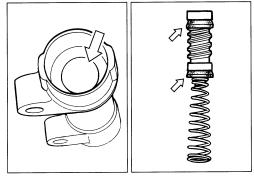

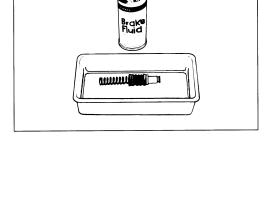

TIRE AND WHEEL TIRE REMOVAL


The most critical factor of tubeless tire is the seal between the wheel rim and the tire bead. For this reason, it is recommended to use a tire changer that can satisfy this sealing requirement and can make the operation efficient as well as functional.

For operating procedures, refer to the instructions supplied by the tire changer manufacturer.

NOTE:

When removing the tire in the case of repair or inspection, mark the tire with a chalk to indicate the tire position relative to the valve position.

Even though the tire is refitted to the original position after repairing puncture, the tire may have to be balanced again since such a repair can cause imbalance.

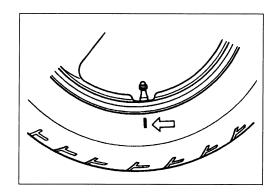


INSPECTION

WHEEL

Wipe the wheel clean and check for the following:


- Distortion and crack
- Any flaws and scratches at the bead seating area.
- Wheel rim runout (8-9)

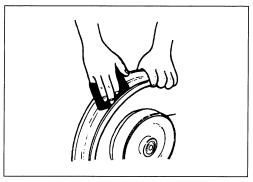

TIRE

Tire must be checked for the following points:

- Nick and rupture on side wall
- Tire tread depth (2-28)
- Tread separation
- · Abnormal, uneven wear on tread
- Surface damage on bead
- Localized tread wear due to skidding (Flat spot)
- Abnormal condition of inner liner

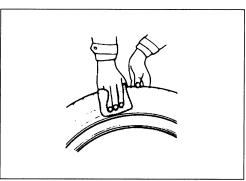


VALVE INSPECTION


Inspect the valve after the tire is removed from the rim. Replace the valve with a new one if the seal A rubber is peeling or has damage.

NOTE:

If the external appearance of the valve shows no abnormal condition, removing of the valve is not necessary.

If the seal has abnormal deformation, replace the valve with a new one.

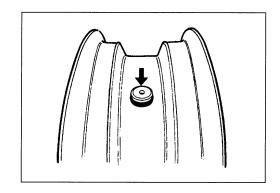

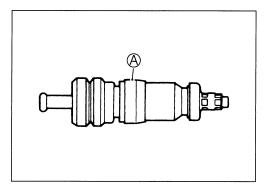



NOTE:

To properly install the valve into the valve hole, apply a special tire lubricant or neutral soapy liquid to the valve.

CAUTION

Be careful not to damage the lip © of valve.

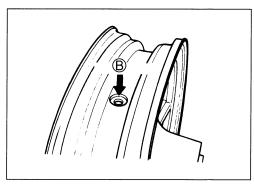

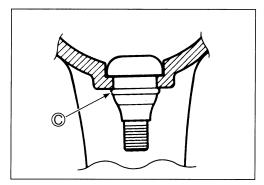



TIRE INSTALLATION

- Apply tire lubricant to the tire bead.
- When installing the tire onto the wheel, observe the following points.

CAUTION

- * Do not reuse the valve which has been once removed.
- * Never use oil, grease or gasoline on the tire bead in place of tire lubricant.
- When installing the tire, the arrow (A) on the side wall should point to the direction of wheel rotation.
- Align the chalk mark put on the tire at the time of removal with the valve position.

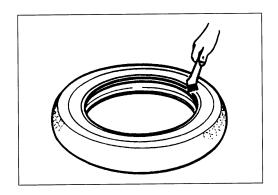

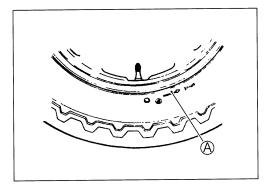

- For installation procedure of tire onto the wheel, follow the instructions given by the tire changer manufacturer.
- Bounce the tire several times while rotating. This makes the tire bead expand outward to contact the wheel, thereby facilitating air inflation.
- Inflate the tire.

A WARNING

- * Do not inflate the tire to more than 400 kPa (4.0 kgf/cm², 57 psi). If inflated beyond this limit, the tire can burst and possibly cause injury. Do not stand directly over the tire while inflating.
- * In the case of preset pressure air inflator, pay special care for the set pressure adjustment.

- In this condition, check the "rim line" (B) cast on the tire side walls. The line must be equidistant from the wheel rim all around. If the distance between the rim line and wheel rim varies, this indicates that the bead is not properly seated. If this is the case, deflate the tire completely and unseat the bead for both sides. Coat the bead with lubricant and fit the tire again.
- When the bead has been fitted properly, adjust the pressure to specification.
- As necessary, adjust the tire balance.

CAUTION

Do not run with a repaired tire at a high speed.

DATA Cold inflation tire pressure


	Front	Rear
Solo riding	250 kPa (2.50 kgf/	290 kPa (2.90 kgf/
	cm², 36 psi)	cm², 42 psi)
Dual riding	250 kPa (2.50 kgf/	290 kPa (2.90 kgf/
	cm², 36 psi)	cm², 42 psi)




• When installing the balancer weights to the wheel, set the two balancer weights (A) on both sides of wheel rim.


CAUTION

Weight difference between the two balancer weights must be less than 10 g (0.02 lb).

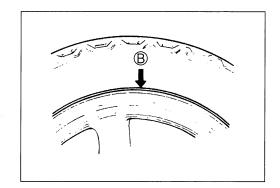

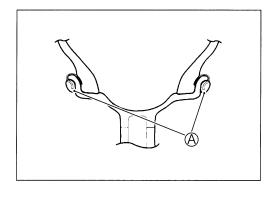

DRIVE CHAIN

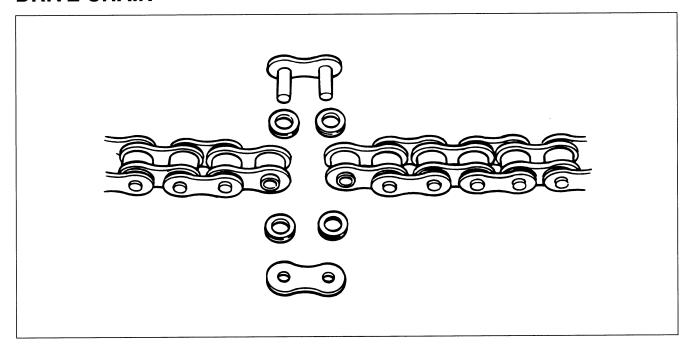

Use the special tool in the following procedures, to cut and rejoin the drive chain.

09922-22711: Drive chain cutting and joining tool set *NOTE:*


When using the special tool, apply a small quantity of grease to the threaded parts of the special tool.


DRIVE CHAIN CUTTING


- Set up the special tool as shown in the illustration.
 - 1 Tool body
 - 2 Grip handle
 - 3 Pressure bolt "A"
 - 4 Pressure bolt "B"
 - ⑤ Bar
 - 6 Adjuster bolt (with through hole)
 - 7 Pin remover
 - ® Chain holder (engraved mark 500) with reamer bolt M5 x 10

NOTE:


The tip of pin remover ? should be positioned inside approximately 5 mm (0.2 in) from the end face of pressure bolt "A" ? as shown in the illustration.

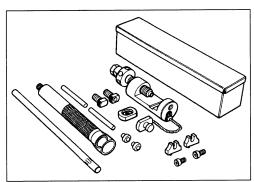

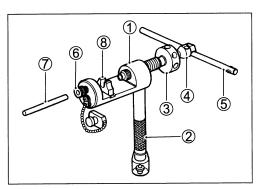

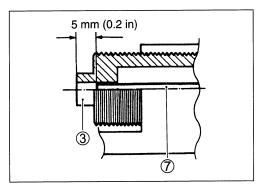

- · Place the drive chain link being disjointed on the holder part ® of the tool.
- Turn in both the adjuster bolt 6 and pressure bolt "A" 3 so that each of their end hole fits over the chain joint pin properly.
- Tighten the pressure bolt "A" 3 with the bar.

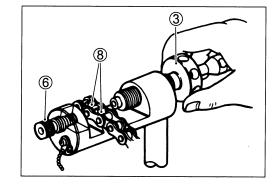

• Turn in the pressure bolt "B" 4 with the bar 5 and force out the drive chain joint pin 9.

CAUTION

Continue turning in the pressure bolt "B" 4 until the joint pin has been completely pushed out of the chain.


NOTE:

After the joint pin (9) is removed, loosen the pressure bolt "B" (4) and then pressure bolt "A" 3.

• Remove the joint pin 9 of the other side of joint plate.

CAUTION

Never reuse joint pins, O-rings and plates. After joint pins, O-rings and plates have been removed from the drive chain, the removed joint pins, O-rings and plates should be discarded and new joint plate, O-rings and plate must be installed.

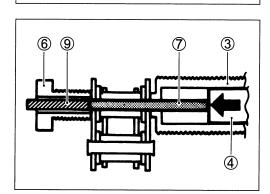

DRIVE CHAIN CONNECTING

JOINT PLATE INSTALLATION

- Set up the special tool as shown in the illustration.
 - 1 Tool body

- 5 Adjuster bolt
- 2 Grip handle


- (without hole)
- 3 Joint plate holder
- 6 Pressure bolt "A"
- (7) Bar
- (engraved mark "F50")
- 4 Wedge holder & wedge pin
- Connect both ends of the drive chain with the joint pin ® inserted from the wheel side (A) as installed on the motorcycle.
 - 9 O-ring ... 4 pcs
 - 10 Joint plate


Joint set part number

DID: 27620-40F00



Do not use joint clip type of drive chain. The joint clip may have a chance to drop which may cause severe damage to motorcycle and severe injury.

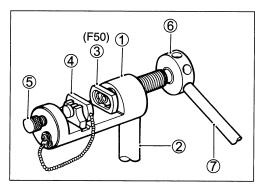

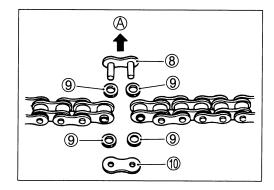



Apply grease on the recessed portion of the joint plate holder
 and set the joint plate ①.

NOTE:

When positioning the joint plate ① on the tool, its stamp mark must face the joint plate holder ③ side.

- Set the drive chain on the tool as illustrated and turn in the adjuster bolt 5 to secure the wedge holder & wedge pin 4.
- Turn in the pressure bolt "A" (6) further using the bar (7) to press the joint plate over the joint pins.

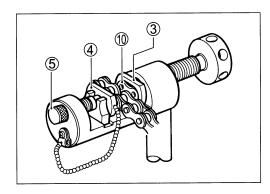

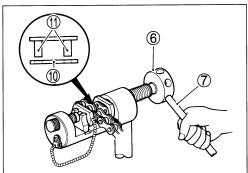

• Continue pressing the joint plate until the distance between the two joint plates come to the specification.

DATA Joint plate distance specification W

|--|

CAUTION


Should pressing of the joint plate be made excessively beyond the specified dimension, the work should be redone using the new joint parts.


JOINT PIN STAKING

- Set up the special tool as shown in the illustration.
 - 1 Tool body
 - 2 Grip handle
 - 3 Pressure bolt "A"
 - 4 Adjuster bolt (without hole)
 - ⑤ Staking pin (stowed inside grip handle behind rubber cap)
 - 6 Bar

NOTE:

Before staking the joint pin, apply a small quantity of grease to the staking pin ⑤.

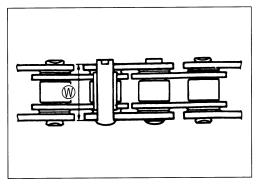

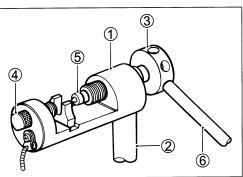


• Stake the joint pin by turning (approximately 7/8 turn) the pressure bolt "A" ③ with the bar until the pin end diameter becomes the specified dimension.


DATA Pin end diameter specification ①

DID	5.50 – 5.75 mm (0.217 – 0.226 in)

CAUTION

- * After joining of the chain has been completed, check to make sure that the link is smooth and no abnormal condition is found.
- * Should any abnormal condition be found, reassemble the chain link using the new joint parts.
- Adjust the drive chain, after connecting it. (2-22)

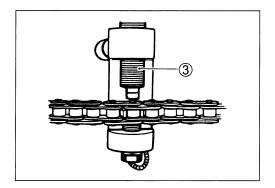

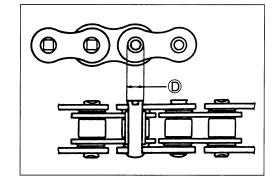

ELECTRICAL SYSTEM


CONTENTS	
CAUTIONS IN SERVICING	9- 2
CONNECTOR	9- 2
COUPLER	9- 2
CLAMP	9- 2
FUSE	9- 2
SEMI-CONDUCTOR EQUIPPED PART	9- 3
BATTERY	9- 3
CONNECTING THE BATTERY	
WIRING PROCEDURE	
USING THE MULTI CIRCUIT TESTER	9- 4
LOCATION OF ELECTRICAL COMPONENTS	9- 5
CHARGING SYSTEM	9- 7
TROUBLESHOOTING	9- 7
INSPECTION	9- 8
STARTER SYSTEM AND SIDE-STAND/IGNITION INTERLOCA	(
SYSTEM	9-11
TROUBLESHOOTING	9-11
STARTER MOTOR REMOVAL AND DISASSEMBLY	9-12
STARTER MOTOR INSPECTION	9-13
STARTER MOTOR REASSEMBLY	9-13
STARTER RELAY INSPECTION	9-14
SIDE STAND/IGNITION INTERLOCK SYSTEM PARTS	
INSPECTION	9-1 <i>5</i>
IGNITION SYSTEM	9-18
TROUBLESHOOTING	9-18
INSPECTION	9-20
COMBINATION METER	9-24
DESCRIPTION	9-24
REMOVAL AND DISASSEMBLY	9-25
INSPECTION	9-26
LAMPS	9-30
HEADLIGHT, BRAKE LIGHT/TAILLIGHT, LICENSE PLAT	E
LIGHT AND TURN SIGNAL LIGHT	
RELAYS	9-31
TURN SIGNAL/SIDE-STAND RELAY	9-31
STARTER RELAY	

FUEL PUMP RELAY	9-31
SWITCHES	9-31
BATTERY	9-33
SPECIFICATIONS	9-33
INITIAL CHARGING	9-33
SERVICING	9-34
RECHARGING OPERATION	9-35

CAUTIONS IN SERVICING

CONNECTOR

- · When connecting a connector, be sure to push it in until a click is felt.
- Inspect the connector for corrosion, contamination and breakage in its cover.

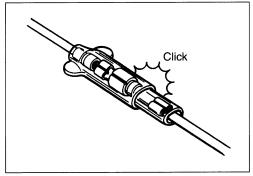

COUPLER


- · With a lock type coupler, be sure to release the lock before disconnecting and push it in fully till the lock works when connecting.
- When disconnecting the coupler, be sure to hold the coupler body and do not pull the lead wires.
- Inspect each terminal on the coupler for being loose or bent.
- Inspect each terminal for corrosion and contamination.


CLAMP


- Clamp the wire harness at such positions as indicated in "WIRE HARNESS ROUTING". (10-14, 15)
- Bend the clamp properly so that the wire harness is clamped securely.
- In clamping the wire harness, use care not to allow it to hang
- Do not use wire or any other substitute for the band type clamp.

FUSE

- · When a fuse blows, always investigate the cause, correct it and then replace the fuse.
- Do not use a fuse of a different capacity.
- Do not use wire or any other substitute for the fuse.

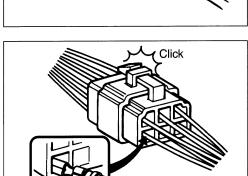


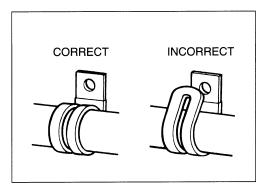

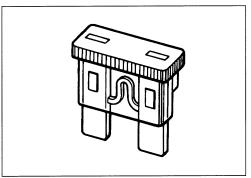

SEMI-CONDUCTOR EQUIPPED PART

- Be careful not to drop the part with semi-conductor built in such as ECM.
- When inspecting this part, follow inspection instruction strictly.
 Neglecting proper procedure may cause damage to this part.

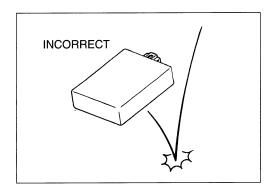


BATTERY


- The MF battery used in this vehicle does not require maintenance (e.g., electrolyte level inspection, distilled water replenishment).
- During normal charging, no hydrogen gas is produced. However, if the battery is overcharged, hydrogen gas may be produced. Therefore, be sure there are no fire or spark sources (e.g., short circuit) nearby when charging the battery.
- Be sure to recharge the battery in a well-ventilated and open area.
- Note that the charging system for the MF battery is different from that of a conventional battery. Do not replace the MF battery with a conventional battery.

CONNECTING THE BATTERY

- When disconnecting terminals from the battery for disassembly or servicing, be sure to disconnect the
 — battery lead wire, first.
- If the terminal is corroded, remove the battery, pour warm water over it and clean it with a wire brush.
- After connecting the battery, apply a light coat of grease to the battery terminals.
- Install the cover over the

 battery terminal.

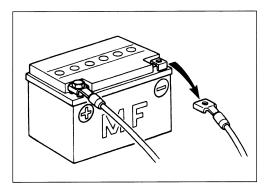

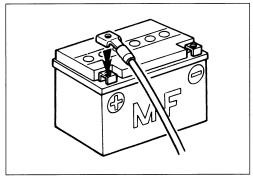

WIRING PROCEDURE


• Properly route the wire harness according to the "WIRE ROUTING" section. (10-14, 15)


USING THE MULTI CIRCUIT TESTER

- Properly use the multi circuit tester ⊕ and ⊖ probes. Improper use can cause damage to the motorcycle and tester.
- If the voltage and current values are not known, begin measuring in the highest range.
- When measuring the resistance, make sure that no voltage is applied. If voltage is applied, the tester will be damaged.
- After using the tester, be sure to turn the switch to the OFF position.

CAUTION

Before using the multi circuit tester, read its instruction manual.

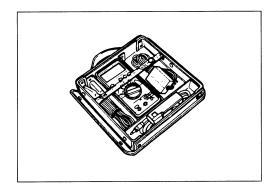

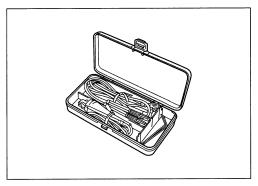

LOCATION OF ELECTRICAL COMPONENTS



- 1 Ignition coil (No.1, 2, 3, 4)
- ② Camshaft position sensor (CF4-60)
- ③ Fuel injector (4-51)
- 4 Intake air pressure sensor (4-60)
- 5 Engine coolant temperature sensor (4-61)
- 6 Intake air temperature sensor (34-61)
- 7 Secondary throttle position sensor (4-62)
- 8 Secondary throttle valve actuator (4-45)
- 9 Throttle position sensor (74-60)


- 10 Turn signal/side-stand relay
- 11) Fuse box
- ② Atmospheric pressure sensor
- **3** Starter motor
- (Crankshaft position sensor (4-60)
- 15 Oil pressure switch
- 16 Horn
- 17 Cooling fan thermo-switch



- ① Fuel pump (ご 5-7)
- 2 Fuel level switch
- 3 Battery
- **4** ECM (Engine Control Module)
- 5 Starter relay/Main fuse
- ⑥ Fuel pump relay (☐₹5-9)
- 7 Tip over sensor (4-61)

- 8 Regulator/Rectifier
- 9 Mode selection switch coupler (4-23)
- 10 Cooling fan (27-6)
- 11) Speedometer sensor
- 12 Gear position switch
- 3 Side-stand switch
- **4** Generator

CHARGING SYSTEM

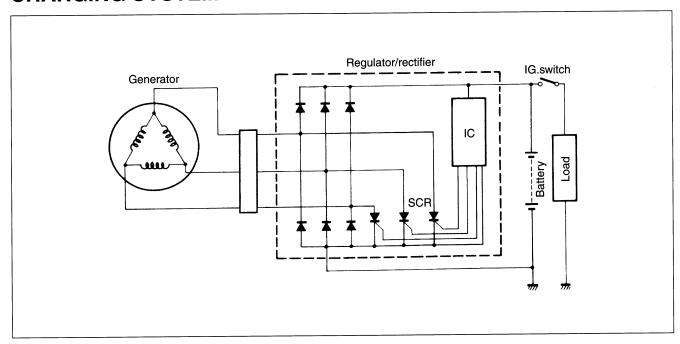

TROUBLESHOOTING

Battery runs down quickly

Step 1

1) Check accessories which use excessive amounts of electricity. Are accessories being installed?

YES	Remove accessories.
NO	Go to Step 2.

Step 2

1) Check the battery for current leaks. (9-8) Is the battery for current leaks OK?

YES	Go to Step 3.
NO	Short circuit of wire harness.
NO	Faulty electrical equipment.

Step 3

1) Measure the regulated voltage between the battery terminals. ($\bigcirc \mathcal{F}$ 9-9) Is the regulated voltage OK?

YES	Faulty battery.Abnormal driving condition.
NO	Go to Step 4.

Step 4

1) Measure the resistance of the generator coil. (9-9) Is the resistance of generator coil OK?

YES	Go to Step 5.
NO	Faulty generator coil.
	Disconnected lead wires.

Step 5

1) Measure the generator no-load voltage. (9-9) Is the generator no-load voltage OK?

YES	Go to Step 6.
NO	Faulty generator.

Step 6

1) Inspect the regulator/rectifier. (9-10) Is the regulator/rectifier OK?

YES	Go to Step 7.
NO	Faulty regulator/rectifier.

Step 7

Inspect wirings.Is the wirings OK?

YES	Faulty battery
NO	Short circuit of wire harness.
	Poor contact of couplers.

Battery overcharges

- Faulty regulator/rectifier.
- Faulty battery.
- Poor contact of generator lead wire coupler.

INSPECTION

BATTERY CURRENT LEAKAGE

- Remove the front seat. (8-6)
- Turn the ignition switch to the OFF position.

Measure the current between \bigcirc battery terminal and the \bigcirc battery lead wire using the multi circuit tester. If the reading exceeds the specified value, leakage is evident.

o9900-25008: Multi circuit tester set


Battery current (leak): Under 3 mA


Tester knob indication: Current (---, 20 mA)

CAUTION

- * Because the current leak might be large, turn the tester to high range first to avoid tester damage.
- * Do not turn the ignition switch to the "ON" position when measuring current.

When checking for excessive current leakage, remove the couplers and connectors, one by one, so as to locate the position of trouble.

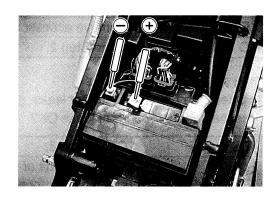

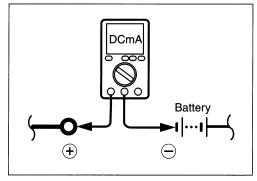

REGULATED VOLTAGE

- Remove the front seat. (8-6)
- Start the engine and keep it running at 5 000 r/min. with lighting switch turned ON and dimmer switch turned HI position.

Measure the DC voltage between the \oplus and \bigcirc battery terminals using the multi circuit tester. If the voltage is not within the specified value, inspect the generator and regulator/rectifier. (\bigcirc 9-10 and 9-11)

NOTE:


When making this test, be sure that the battery is in fully-charged condition.


09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

Regulated voltage (Charging output):

14.0 - 15.5 V at 5 000 r/min.

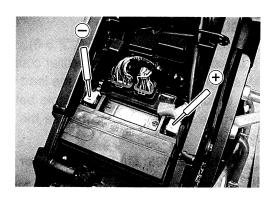

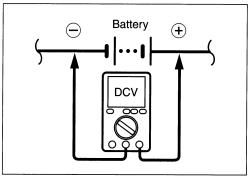



• Disconnect the generator coupler.

Measure the resistance between the three lead wires.

If the resistance is out of specified value, replace the stator with a new one. Also, check that the generator core is insulated properly.

09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

Generator coil resistance: $0.2 - 0.9 \Omega$ (Yellow – Yellow)

 $\infty \Omega$ (Yellow – Ground)

NOTE:

When making above test, it is not necessary to remove the generator.

GENERATOR NO-LOAD PERFORMANCE

• Start the engine and keep it running at 5 000 r/min.

Using the multi circuit tester, measure the voltage between three lead wires.

If the tester reads under the specified value, replace the generator with a new one.


09900-25008: Multi circuit tester set


₩₩ Tester knob indication: Voltage (~)

DATA Generator no-load performance:

More than 65 V at 5 000 r/min (When engine is cold)



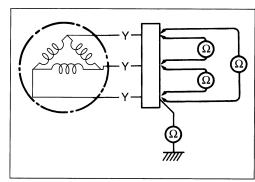

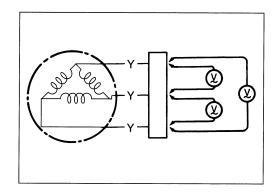

REGULATOR/RECTIFIER

- Remove the frame cover. (\$\sumsymbol{1} 8-6)
- Disconnect the regulator/rectifier coupler.

Measure the voltage between the lead wires using the multi circuit tester as indicated in the table below. If the voltage is not within the specified value, replace the regulator/rectifier with a new one.

09900-25008: Multi circuit tester set

Tester knob indication: Diode test (⊢←)


-	Init:	١

		Probe of tester to:				
[i]		B/R	B1	B2	В3	B/W
tester	B/R		0.4 - 0.7	0.4 - 0.7	0.4 - 0.7	0.5 - 1.2
ftes	B1	*		*	*	0.4 - 0.7
oe of	B2	*	*		*	0.4 - 0.7
Probe	В3	*	*	*		0.4 - 0.7
1	B/W	*	*	*	*	

*1.4 V and more (tester's battery voltage)


NOTE:

If the tester reads 1.4 V and below when the tester probes are not connected, replace its battery.

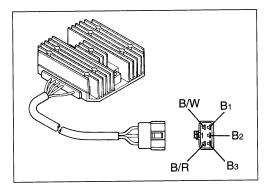

WIRE COLOR B: Black, B/R: Black with Red tracer, B/W: Black with Whith White tracer

STARTER SYSTEM AND SIDE-STAND/IGNITION INTERLOCK SYSTEM

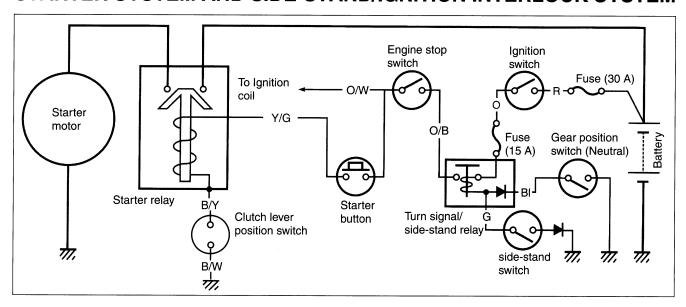

TROUBLESHOOTING

Starter motor will not run

Step 1

- 1) Shift the transmission to neutral.
- 2) Pull the clutch lever, turn on the ignition switch with the engine stop switch in the "RUN" position and listen for a click from the starter relay when the starter button is pushed.

 Is a click sound heard?

YES	Go to Step 2.
NO	Go to Step 3.

Step 2

1) Check if the starter motor runs when its terminal is connected to the battery \oplus terminal. (Do not use thin "wire" because a large amount of current flows.)

Does the starter motor run?

YES	Faulty starter relay.Loose or disconnected starter motor lead wire.
NO	Faulty starter motor.

Step 3

1) Measure the starter relay voltage at the starter relay connectors (between Y/G ⊕ and B/Y ⊕) when the starter button is pushed.

Is a voltage OK?

YES	Go to Step 4.
NO	 Faulty engine stop switch. Faulty clutch lever position switch. Faulty gear position switch. Faulty turn signal/side-stand relay. Faulty starter button. Faulty ignition switch. Faulty side-stand switch. Poor contact of connector. Open circuit in wire harness.

1) Check the starter relay. (9-14) Is the starter relay OK?

YES	Poor contact of the starter relay.
NO	Faulty starter relay.

Starter motor runs but does not crank the engine Step 1

- 1) The starter motor runs when the transmission is in neutral, but does not run when the transmission is in any position other than neutral, with the side-stand up.
- 2) Check the side-stand switch. (9-15) Is the side-stand switch OK?

YES	Go to Step 2.
NO	Faulty side-stand switch.


Step 2

1) Check the starter clutch. Is the starter clutch OK?


YES	Faulty starter clutch.	
NO	Open circuit in wire harness.	
NO	Poor contact of connector.	

STARTER MOTOR REMOVAL AND DISAS-SEMBLY

• Remove the starter motor.

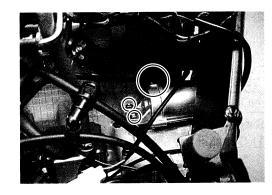

• Disassemble the starter motor as shown in the illustration.

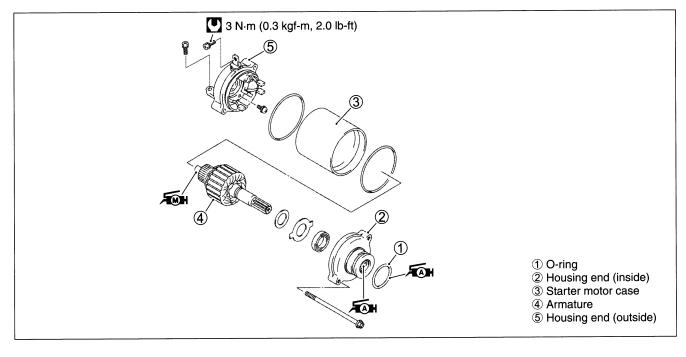


STARTER MOTOR INSPECTION

CARBON BRUSH

Inspect the brushes for abnormal wear, cracks, or smoothness in the brush holder.

If any damages are found, replace the brush assembly with a new one.

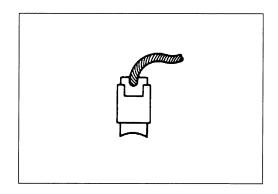


COMMUTATOR

Inspect the commutator for discoloration, abnormal wear or undercut (A).

If abnormal wear is found, replace the armature with a new one. If the commutator surface is discolored, polish it with #400 sand paper and wipe it using a clean dry cloth.

If there is no undercut, scrape out the insulator ① with a saw blade.

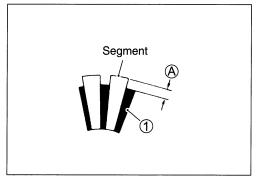


ARMATURE COIL INSPECTION

Check for continuity between each segment and between each segment and the armature shaft using the multi circuit tester. If there is no continuity between the segments or there is continuity between the segments and shaft, replace the armature with a new one.


09900-25008: Multi circuit tester set

Tester knob indication: Continuity test (•)))

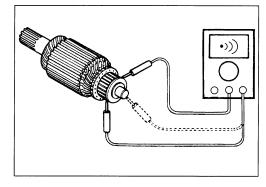

OIL SEAL INSPECTION

Check the oil seal lip for damage or leakage. If any damage is found, replace the housing end.

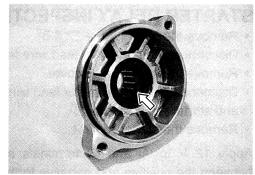

STARTER MOTOR REASSEMBLY

Reassemble the starter motor in the reverse order of disassembly. Pay attention to the following points:

Apply SUZUKI SUPER GREASE to the lip of the oil seal.

ÆA⊪ 99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)




Apply a small quantity of SUZUKI MOLY PASTE to the armature shaft.


1 99000-25140: SUZUKI MOLY PASTE


- Fit the projection of the starter motor case to the depression of the housing end.
- Apply SUZUKI SUPER GREASE to the O-ring.

99000-25030: SUZUKI SUPER GREASE "A" (USA) 99000-25010: SUZUKI SUPER GREASE "A" (Others)

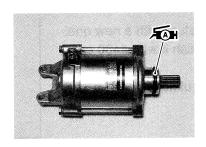


  Tighten the starter motor lead wire mounting nut to the specified torque.



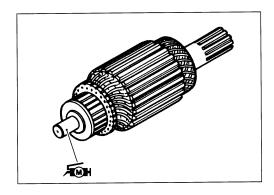



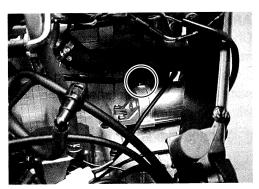

STARTER RELAY INSPECTION

- Remove the front seat. (8-6)
- Disconnect the battery

 lead wire from the battery.
- Remove the starter relay cover.
- Disconnect the starter motor lead wire ①, battery lead wire ② and starter relay coupler ③.
- Remove the starter relay 4.


Apply 12 V to (A) and (B) terminals and check for continuity between the positive and negative terminals using the multi circuit tester. If the starter relay clicks and continuity is found, the relay is ok.




Tester knob indication: Continuity test (•)))

CAUTION

Do not apply battery voltage to the starter relay for more than five seconds, since the relay coil may overheat and get damaged.

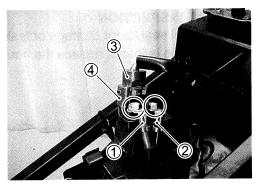


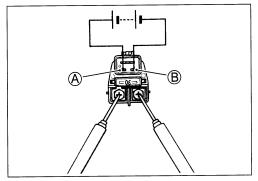

Measure the relay coil resistance between the terminals using the multi circuit tester. If the resistance is not within the specified value, replace the starter relay with a new one.

09900-25008: Multi circuit tester set

DATA Starter relay resistance: $3 - 5 \Omega$

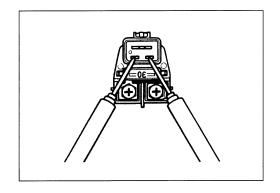

SIDE STAND/IGNITION INTERLOCK SYSTEM PARTS INSPECTION

Check the interlock system for proper operation. If the interlock system does not operate properly, check each component for damage or abnormalities. If any abnormality is found, replace the component with a new one.

SIDE-STAND SWITCH

The side-stand switch coupler is located above the crankcase.

- Lift the fuel tank. (5-5)
- Disconnect the side-stand switch coupler and measure the voltage between Green and Black/White lead wires.


09900-25008: Multi circuit tester set


Tester knob indication: Diode test (→←)

	Green	Black/White
	(+) Probe)	(⊝ Probe)
ON (Side-stand up)	0.4 –	0.6 V
OFF	1.4 V a	nd more
(Side-stand down)	(Tester's battery voltage)	

NOTE:

If the tester reads 1.4 V and below when the tester probes are not connected, replace its battery.

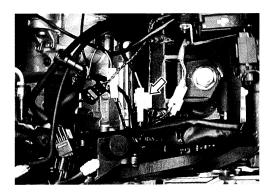

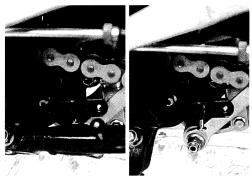

GEAR POSITION SWITCH

• Lift the fuel tank. (5-5)

 Disconnect the gear position switch coupler and check the continuity between Blue and Black/White with the transmission in "NEUTRAL".



Tester knob indication: Continuity test (•)))

	Blue	Black/White
ON (Neutral)	0	O
OFF (Except neutral)		



CAUTION

When disconnecting and connecting the gear position switch coupler, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

- Connect the gear position switch coupler to the wiring harness.
- Turn the ignition switch to "ON" position and side-stand to upright position.

Measure the voltage between Pink and Black/White lead wires using the multi circuit tester when shifting the gearshift lever from low to top.

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

Tester knob indication: Voltage (---)


Gear position switch voltage: 0.6 V and more

(Pink ⊕ – B/W ⊝)

* Except neutral position

NOTE:

Use the special tool, to prevent the rubber of the water proof coupler from damage.

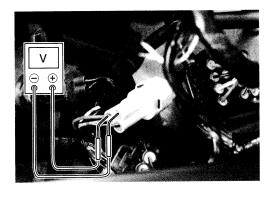

TURN SIGNAL/SIDE-STAND RELAY

The turn signal/side-stand relay is composed of the turn signal relay, side-stand relay and diode.

• Remove the turn signal/side-stand relay.




SIDE-STAND RELAY INSPECTION

First check the insulation between D and E terminals with the tester. Then apply 12 V to terminals D and C (+ to D and - to C) and check the continuity between D and E. If there is no continuity, replace the turn signal/side-stand relay with a new one.

09900-25008: Multi circuit tester set

Tester knob indication: Continuity test (•)))

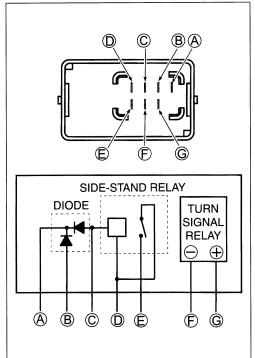

DIODE INSPECTION

Measure the voltage between the terminals using the multi circuit tester. Refer to the following table.


	Probe of tester to:		
ot		©, B	A
Probe ter to:	©, B		1.4 V and more (Tester's battery voltage)
① set	A	0.4 – 0.6 V	

09900-25008: Multi circuit tester set


Tester knob indication: Diode test (⊢←)

NOTE:

If the multi circuit tester reads 1.4 V and below when the tester probes are not connected, replace its battery.

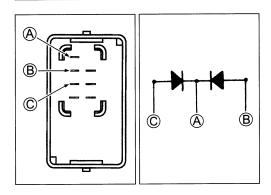

IGNITION SYSTEM

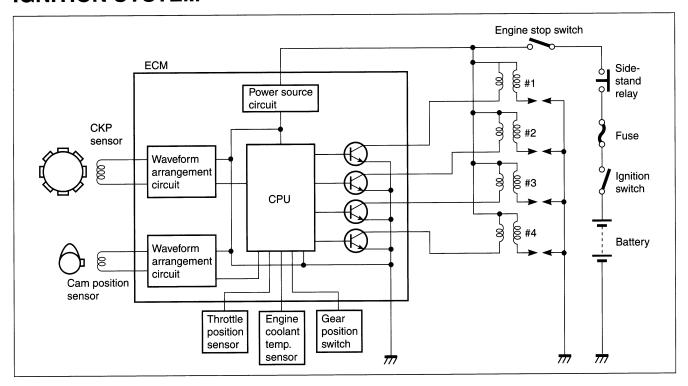

NOTE:

The fuel cut-off circuit is incorporated in this ECM in order to prevent over-running of engine. When engine speed reaches 12 300 r/min, this circuit cuts off fuel at the fuel injector. But under no load, the clutch lever is pulled or the gear position is neutral, this circuit cuts off fuel when engine speed reaches 11 900 r/min. E-03, 33, 24: The circuit cuts off the ignition primary current for all spark plugs.

CAUTION

Under no load, the engine can run over 11 900 r/min though the ignition cut-off circuit is effective, which may possibly cause engine damage. Do not run the engine without load over 11 900 r/min at anytime.

TROUBLESHOOTING

No spark or poor spark

NOTE:

Check that the transmission is in neutral and the engine stop switch is in the "RUN" position. Grasp the clutch lever. Check that the fuse is not blown and the battery is fully-charged before diagnosing.

Step 1

1) Check the ignition system couplers for poor connections. Is there connection in the ignition system couplers?

YES	Go to Step 2.
NO	Poor connection of couplers.

Step 2

1) Measure the battery voltage between input lead wires at the ECM with the ignition switch in the "ON" position. (E-02, 19: O/G and B/W, E-03, 24, 28, 33: O/W and B/W) Is the voltage OK?

YES	Go to Step 3.
	Faulty ignition switch.
NO	Faulty turn signal/side-stand relay.
NO	Faulty engine stop switch.
	 Broken wire harness or poor connection of related circuit couplers.

Step 3

1) Measure the ignition coil primary peak voltage. (9-20)

This inspection method is applicable only with the multi circuit tester and the peak volt adaptor.

Is the peak voltage OK?

YES	Go to Step 4.
NO	Go to Step 5.

Step 4

1) Inspect the spark plugs. (2-6) Is the spark plug OK?

YES	Go to Step 5.
NO	Faulty spark plug (-s).

Step 5

1) Inspect the ignition coil/plug caps. (9-21) Is the ignition coil/plug cap OK?

YES	Go to Step 6.
NO	Poor connection of the ignition coil/plug cap (-s).
NO	Faulty ignition coil/plug cap (-s).

Step 6

1) Measure the crankshaft position sensor peak voltage and its resistance. (9-22, 23)

The crankshaft position sensor peak voltage inspection is applicable only with the multi circuit tester and peak volt adaptor.

Is the peak voltage and resistance OK?

YES	Faulty ECM.
	Poor connection of ignition couplers.
NO	Faulty CKP sensor.

INSPECTION

IGNITION COIL PRIMARY PEAK VOLTAGE

- Remove the air cleaner box. (5-15)
- Disconnect all the ignition coil/plug cap lead wire couplers before removing the ignition coil/plug caps.
- Remove all of the ignition coil/plug caps.

CAUTION

- * Do not remove the ignition coil/plug cap before disconnecting the lead wire coupler, or the lead wire will be damaged.
- * Do not pry up the ignition coil/plug cap with a screwdriver or a bar to avoid damage.
- * Be careful not to drop the ignition coil/plug cap as it may open or short in a circuit.
- Connect the new four spark plugs to each ignition coil/plug cap.
- Connect all the ignition coil/plug cap lead wire couplers to the ignition coil/plug caps respectively, and ground them on the cylinder head (each spark plug hole).

CAUTION

Avoid grounding the spark plugs and suppling the electrical shock to the cylinder head cover (magnesium parts) to prevent the magnesium material from damage.

NOTE:

Be sure that all couplers and spark plugs are connected properly and the battery used is in fully-charged condition.

Inspect each ignition coil primary peak voltage at the ignition coil/plug cap coupler.

 Connect the multi circuit tester with peak voltage adaptor as follows.

No.1 ignition coil/plug cap:

W/BI terminal (⊕ Probe) – Ground (⊕ Probe) terminal No.2 ignition coil/plug cap:

B terminal (Probe) – Ground (Probe) terminal No.3 ignition coil/plug cap:

Y terminal (⊕ Probe) – Ground (⊕ Probe) terminal


No.4 ignition coil/plug cap:


G terminal (+ Probe) - Ground (- Probe) terminal


09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set


CAUTION

Before using the multi circuit tester and peak volt adaptor, be sure to refer to the appropriate instruction manual.

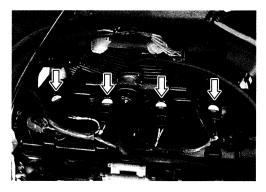

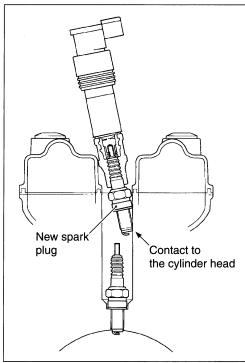

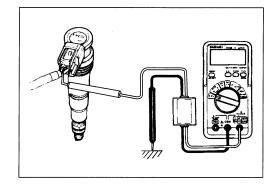

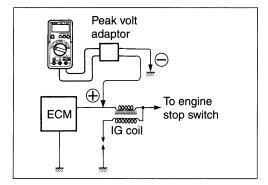

NOTE:

Use the special tool, to prevent the rubber of the water proof coupler from damage.

- Shift the transmission into neutral and turn ignition switch "ON".
- Crank the engine a few seconds with the starter motor by depressing starter button and check the ignition coil primary peak voltage.
- Repeat the above inspection a few times and measure the highest peak voltage.

Tester knob indication: voltage (---)

Ignition coil primary peak voltage: 80 V and more

▲ WARNING

Do not touch the tester probes and spark plugs to prevent an electric shock while testing.

If the peak voltage is lower than the standard range, check the ignition coil/plug cap as follow.

IGNITION COIL/PLUG CAP RESISTANCE


 Check the ignition coil/plug cap for resistance in both primary and secondary coils. If the resistance is not within the standard range, replace the ignition coil/plug cap with a new one.


09900-25008: Multi circuit tester set

Tester knob indication: Resistance (Ω)

DATA Ignition coil/plug cap resistance

Primary : $0.8 - 2.5 \Omega$ (\oplus tap - \ominus tap) Secondary: $8 - 18 k\Omega$ (Plug cap - \ominus tap)

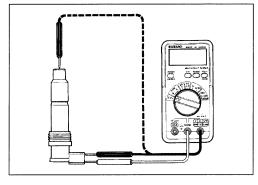

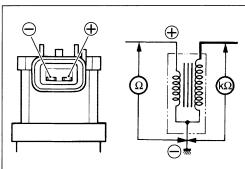

CKP SENSOR PEAK VOLTAGE

• Remove the front seat. (8-6)

NOTE:

Be sure that all couplers are connected properly and the battery used is in fully-charged condition.


- Disconnect the both couplers 1.
- Connect the multi circuit tester with peak volt adaptor as follows.
- Measure the CKP sensor peak voltage between Green/Blue and Green/White lead wires at the ECM coupler ②.


Green/White (⊕ Probe) - Green/Blue (⊝ Probe)

09900-25008: Multi circuit tester set 09900-25009: Needle pointed probe set

CAUTION

Before using the multi circuit tester and peak volt adaptor, be sure to refer to the appropriate instruction manual.

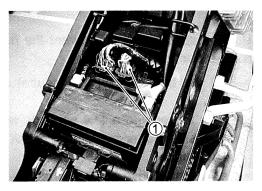

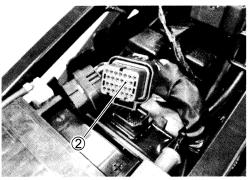




- Shift the transmission into the neutral and turn ignition switch "ON".
- Crank the engine a few seconds with the starter motor by depressing starter button and check the CKP sensor peak voltage.
- Repeat the above test procedure a few times and measure the highest peak voltage.

Tester knob indication: Voltage (===)

DATA CKP sensor peak voltage: 0.5 V and more

(Green/White - Green/Blue)

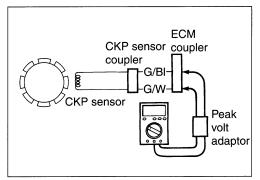

If the peak voltage is lower than the standard range, check the peak voltage at the CKP sensor lead wire coupler.

- Lift up the fuel tank. (5-5)
- Disconnect the CKP sensor lead wire coupler and connect the multi circuit tester with the peak volt adaptor.


Green (⊕ Probe) – Black (⊝ Probe)


 Measure the CKP sensor peak voltage at the CKP sensor lead wire coupler.

Tester knob indication: Voltage (---)

CKP sensor peak voltage: 0.5 V and more (Green – Black)

If the peak voltage is lower than the standard range, check each coupler at both ends of the circuit or replace the CKP sensor and inspect it again.

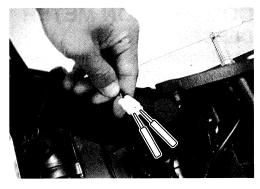

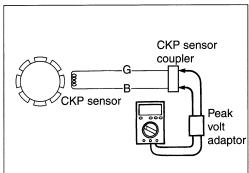

CKP SENSOR RESISTANCE


 Measure the resistance between the lead wires and ground. If the resistance is not as specified, the CKP sensor must be replaced.

09900-25008: Multi circuit tester set

 \square Tester knob indication: Resistance (Ω)

DATA CKP sensor resistance: $70 - 220 \Omega$ (Green – Black)

: ∞ Ω (Green – Ground)

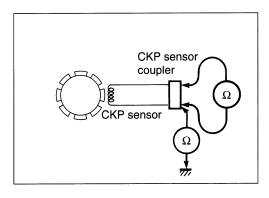

COMBINATION METER DESCRIPTION

This combination meter mainly consists of the stepping motor, LCD (Liquid Crystal Display) and LED (Light Emitting Diode). This combination meter is light, thin and of high response compared to those currently in use because of this composition.

The rpm pointer is driven by the stepping motor.

The LCDs indicate speed, Odo/Trip1/Trip2/Clock and engine coolant temp./FI respectively.


LED (Light Emitting Diode)

LED is used for the illumination light and each indicator light.

LED is maintenance free. LED is less electric-power consuming and stronger to vibration resistance compared to the bulb.

Engine revolution indicator lamp

This speedometer is equipped the engine revolution indicator lamp. The engine revolution indicator lamp is adjustable from $5\,000-12\,000$ rpm. (every 500rpm, initial setting: 11 000rpm)

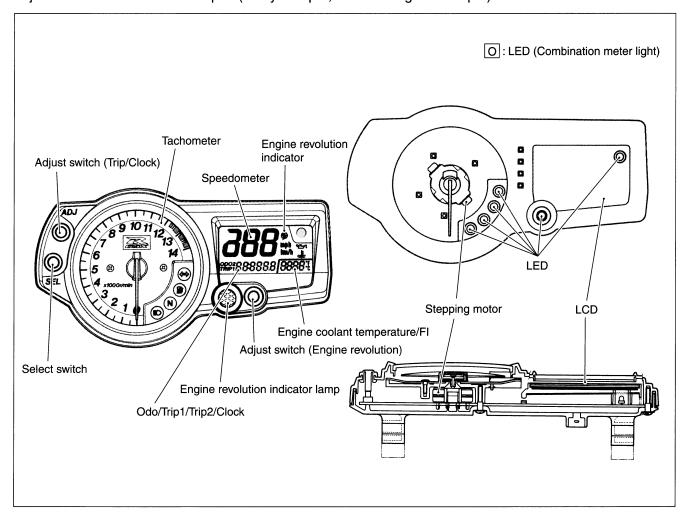


REMOVAL AND DISASSEMBLY

- Remove the screws ①.
- Draw out the hook 2 from the headlamp housing.
- Disconnect the lead wire coupler.
- Remove the combination meter.

CAUTION


When disconnecting and reconnecting the combination meter coupler, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

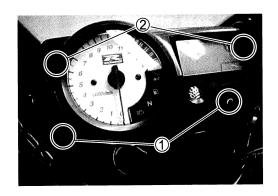

• Disassemble the combination meter as follows.

CAUTION

Do not attempt to disassemble the combination meter unit $\ensuremath{\mathfrak{D}}.$

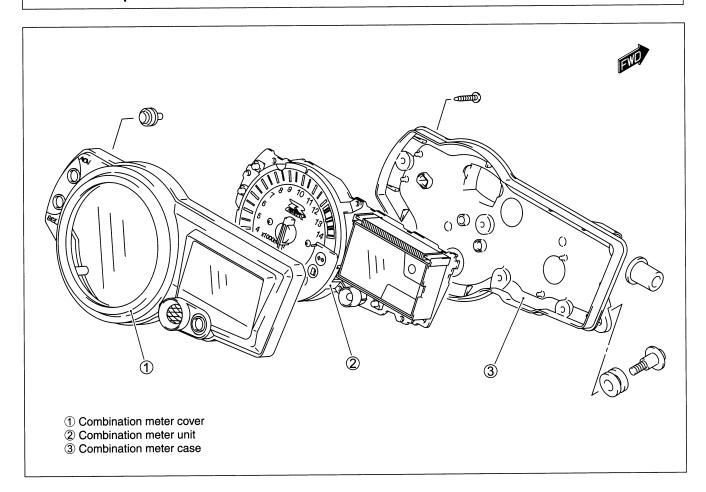

LED (LIGHT EMITTING DIODE)


Check that the LED lights immediately after turning the ignition switch on.

If the LED fails in operation, replace the combination meter unit with a new one after checking its wire harness/coupler.

STEPPING MOTOR

Check that the pointer calibrates itself immediately after turning the ignition switch on and stops at zero point.

If abnormal condition is found, replace the combination meter unit with a new one after checking its wire harness/coupler.

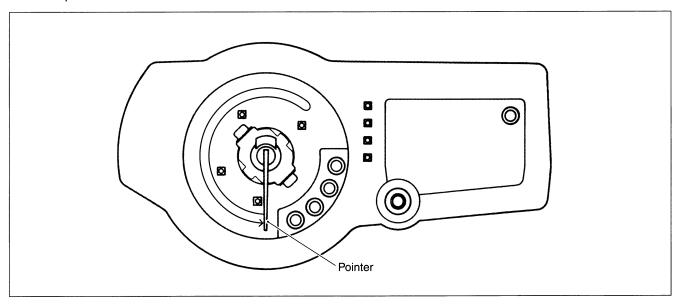


NOTE:

The pointer may not return to the proper position even turning the ignition switch on under low temperature condition. In that case, you can reset the pointer to the proper position by following the instruction below:

- 1) With the function switch (A) pressed, turn the ignition switch on.
- 2) Release the function switch (A), 3 to 5 seconds after turning the ignition switch on.
- 3) Press the function switch (A) twice (within 1 second). →Reset
- Complete the operation within 10 seconds after the ignition switch has been turned on.

Time	Ignition switch	Adjuster switch (A)
	OFF	PUSH
0	ON	
3 sec		
5 sec	<u> </u>	Release
•		Push
•	↓	Push→Reset
10 sec		

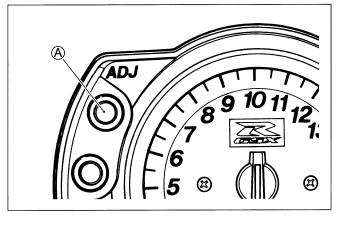

Pointer will return to the starting point right after the completion of the operation. In the case of the pointer not returning to the proper position after doing above, replace the combination meter unit.

ENGINE COOLANT TEMPERATURE METER AND INDICATOR

Engine coolant temperature sensor inspection. (27-8)

- Lift up the fuel tank. (5-5)
- Disconnect the engine coolant temperature sensor coupler 1.

CAUTION

When connecting and disconnecting the engine coolant temperature sensor lead wire coupler, make sure to turn OFF the ignition switch, or electronic parts may get damaged.

- Connect the variable resistor (A) between the terminals.
- Turn the ignition switch ON.
- Check the LCD and LED operations when the resistance is adjusted to the specified values.

Resistance A	LED ®	LCD ©	LCD ①	Water temperature
2.45 k Ω and over	OFF	""		66 °F and below
Approx. 0.811 kΩ	OFF	"122"		Approx. 122 °F
Approx. 0.1 kΩ ON	ON	"248" – "282"	Flicker	248 – 282 °F
0Ω (Jumper wire)	ON	"HI"	Flicker	284 °F and over


If either one or all indications are abnormal, replace the combination meter with a new one.


NOTE:


If the engine stop switch is turned OFF while the ignition switch is ON, the LCD displays "CHEC". But it is not a malfunction.

This condition implies that combination meter receives no signal from the ECM.

In that case, they are restored to normal indication by turning the engine stop switch to RUN position.

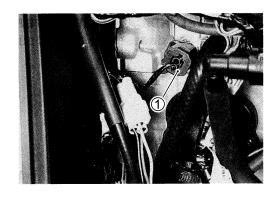

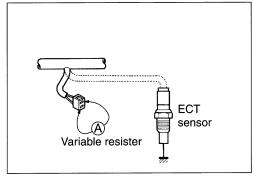


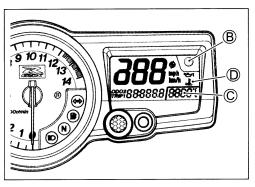


FUEL LEVEL INDICATOR SWITCH INSPECTION

Remove and disassemble the fuel pump assembly.
 (5-10, 11)

 Connect 12 V battery and test bulb (12 V, 3.4 W) to the fuel level indicator switch as shown in the right illustrations. The bulb should come on after one minutes if the switch is in good condition.

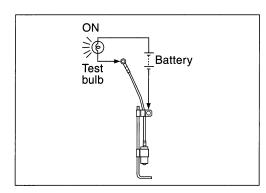


When the switch is immersed in water under the above condition, the bulb should go out. If the bulb remains lit, replace the unit with a new one.

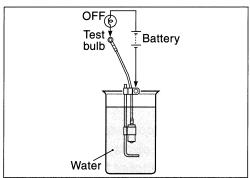

FUEL LEVEL INDICATOR LIGHT INSPECTION

If the fuel level indicator light does not function properly, check the fuel level indicator switch and its lead wire/coupler.

If the fuel level indicator switch and its lead wire/coupler are functioning properly, replace the combination meter with a new one.

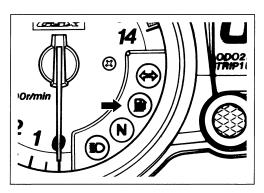

SPEEDOMETER

If the speedometer, odometer or trip meter does not function properly, inspect the speedometer sensor and connection of couplers. If the speedometer sensor and connection are functioning properly, replace the meter with a new one.

SPEEDOMETER SENSOR

- Lift and support the fuel tank with its prop stay. (5-5)
- Disconnect speedometer sensor coupler.
- Remove the speedometer sensor ① by removing its mounting bolt.
- Connect 12 V battery, 10 $k\Omega$ resistor and the multi circuit tester as shown in the right illustration.

B/R: Black with Red tracer B/W: Black with White tracer

B: Black

09900-25008: Multi circuit tester set

Tester knob indication: Voltage (---)

 Under above condition, if a suitable screwdriver touching the pick-up surface of the speed sensor is moved, the tester reading voltage changes (0 V→12 V or 12 V→0 V). If the tester reading voltage does not change, replace the speedometer sensor with a new one.

NOTE:

The highest voltage reading in this test will be the same as that of battery (12 V).


OIL PRESSURE INDICATOR


NOTE:


Before inspecting the oil pressure switch, check if the engine oil level is correct. (2-13)


- Remove the under cowling. (8-3)
- Disconnect the oil pressure switch lead wire from the oil pressure switch.
- Turn the ignition switch ON.


If any indications are abnormal, replace the combination meter with a new one after checking connection of couplers.

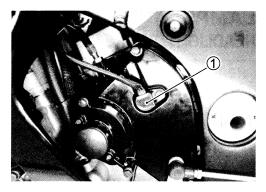

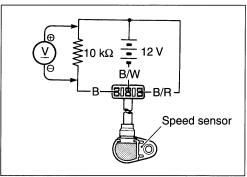


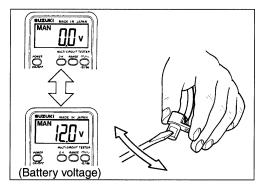

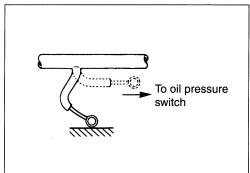

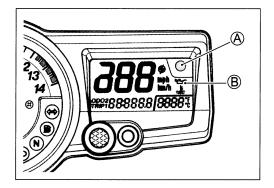

LAMPS HEADLIGHT, BRAKE LIGHT/TAILLIGHT, LICENSE PLATE LIGHT AND TURN SIGNAL LIGHT

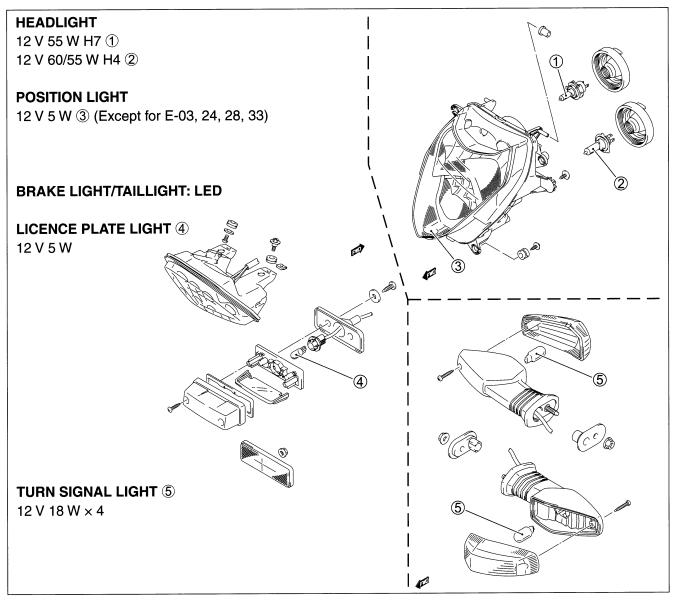

CAUTION


If you have touched and the bulb with your bare hands, clean it with a cloth moistened with alcohol or soapy water to maintain lens clarity.

HEADLIGHT BEAM ADJUSTMENT

- Remove the body cowling cover. (8-4)
- Adjust the headlight beam by using a screw driver +, both vertical and horizontal.
 - A: Horizontal adjuster
 - **B**: Vertical adjuster

NOTE:

To adjust the headlight beam, adjust the beam horizontally first, then adjust vertically.

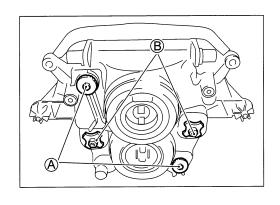

RELAYS

TURN SIGNAL/SIDE-STAND RELAY

The turn signal/side-stand relay is composed of the turn signal relay, side-stand relay and diode.



INSPECTION

Before removing the turn signal/side-stand relay, check the operation of the turn signal light.

If the turn signal light does not illuminate, inspect the bulb, turn signal switch and circuit connection.

If the bulb, turn signal switch and circuit connection are OK, the turn signal relay may be faulty. In this case, replace the turn signal/side-stand relay with a new one.

NOTE:

- * Make sure that the battery is fully charged.
- * Refer to the page 9-16 for the side-stand relay and diode inspection.

STARTER RELAY

79-14

FUEL PUMP RELAY

₹5-9

SWITCHES

IGNITION SWITCH REMOVAL

- Disconnect the coupler.
- Remove the ignition switch mounting bolts with the special tools.


09930-11920: Torx bit JT40H 09930-11940: Bit holder


CAUTION

When reusing the ignition switch bolt, clean thread and apply the THREAD LOCK.

√1342 99000-32050: THREAD LOCK "1342" (USA)

+1322 99000-32110: THREAD LOCK SUPER "1322" (Others)

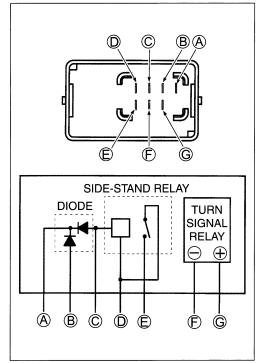

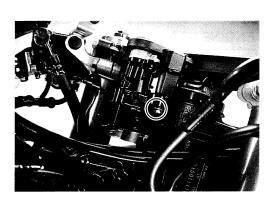

Inspect each switch for continuity with a tester. If any **STARTER BUTTON** abnormality is found, replace the respective switch assemblies with new ones.

HAZARD SWITCH

Color Position	В	Lbl	Lg
• (OFF)			
△ (ON)	0	$\overline{}$	

IGNITION SWITCH

Color Position	R	0	O/Y	Br
ON	0-	- 0-	<u> </u>	
OFF				
LOCK				
Р	0			

DIMMER SWITCH

Color Position	W	Υ	0
HI (≣▷)		0	$\overline{}$
LO (≦□)	0		———

TURN SIGNAL SWITCH

Color Position	Lg	Lbl	В
L		0-	0
PUSH			
R	0	0	

PASSING LIGHT SWITCH

Color Position	0	Υ
•		
PUSH	0	

ENGINE STOP SWITCH

Color Position	O/B	O/W
OFF (XX)		
RUN (∩)	0	

Color Position	O/W	Y/G
•		
PUSH	0	

HORN BUTTON

Color Position	O/G	G
•		
PUSH	0	

FRONT BRAKE SWITCH

Color	B/R	B/BI
OFF		
ON	0	0

REAR BRAKE SWITCH

Color Position	O/G	W/B
OFF		
ON	0	0

CLUTCH LEVER POSITION SWITCH

Color	B/Y	B/Y
OFF		
ON	0	

OIL PRESSURE SWITCH

Color Position	G/Y	Ground
ON (engine is at stop)	0	
OFF (engine is running)		

NOTE:

Before inspecting the oil pressure switch, check if the engine oil level is correct. (2-13)

WIRE COLOR


В : Black Lbl : Light blue R:Red Lg : Light green Y: Yellow Br : Brown W: White Gr : Grav O :Orange : Green

B/BI : Black with Blue tracer B/W : Black with White tracer B/Y: Black with Yellow tracer B/R : Black with Red tracer G/Y: Green with Yellow tracer O/B : Orange with Black tracer O/BI: Orange with Blue tracer O/G : Orange with Green tracer O/R : Orange with Red tracer O/W: Orange with White tracer O/Y : Orange with Yellow tracer W/B: White with Black tracer Y/G : Yellow with Black tracer

Y/W: Yellow with White tracer

BATTERYSPECIFICATIONS


Type designation	FTX12-BS
Capacity	12 V, 36 kC (10 Ah)/10 HR

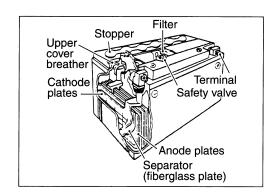

INITIAL CHARGING

Filling electrolyte


• Remove the aluminum tape ① sealing the battery electrolyte filler holes.

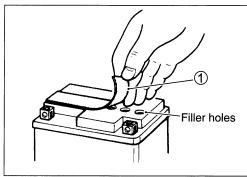


• Remove the caps 2.

NOTE:


- * After filling the electrolyte completely, use the removed cap ② as sealing caps of battery-filler holes.
- * Do not remove or pierce the sealed areas ③ of the electrolyte container.

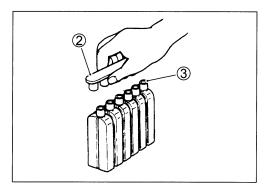

Insert the nozzles of the electrolyte container into the battery's electrolyte filler holes, holding the container firmly so that it does not fall. Take precaution not to allow any of the fluid to spill.

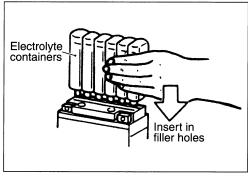

Make sure air bubbles 6 are coming up each electrolyte container, and leave in this position for about more than 20 minutes.

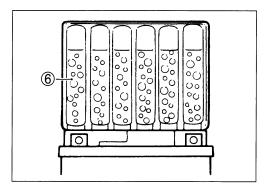


If no air bubbles are coming up from a filler port, tap the bottom of the electrolyte container two or three times.


Never remove the container from the battery.

- After confirming that the electrolyte has entered the battery completely, remove the electrolyte containers from the battery. Wait for about more than 20 minutes.
- Insert the caps into the filler holes, pressing in firmly so that the top of the caps do not protrude above the upper surface of the battery's top cover.

CAUTION

 - * Never use anything except the specified battery.
- * Once the caps have been installed to the battery, do not remove the caps.
- * Do not tap the caps with a tool such as hammer when installing them.

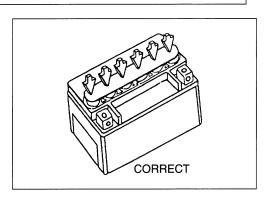





CAUTION


- * For charging the battery, make sure to use the charger specially designed for MF battery. Otherwise, the battery may be overcharged resulting in shortened service life.
- * Do not remove the cap during charging.
- * Position the battery with the cap facing upward during charging.

SERVICING

Visually inspect the surface of the battery container. If any signs of cracking or electrolyte leakage from the sides of the battery have occurred, replace the battery with a new one. If the battery terminals are found to be coated with rust or an acidic white powdery substance, clean the battery terminals with sandpaper.

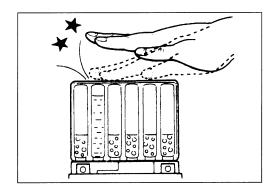

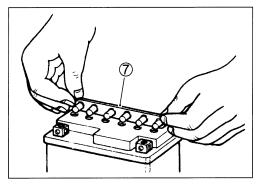

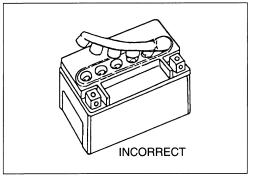

RECHARGING OPERATION

• Using the multi circuit tester, check the battery voltage. If the voltage reading is less than the 12.0 V (DC), recharge the battery with a battery charger.

CAUTION


- * When recharging the battery, remove the battery from the motorcycle.
- * Do not remove the caps on the battery top while recharging.


Recharging time: 5 A for 1 hour or 1.2 A for 5 to 10 hours

CAUTION

Be careful not to permit the charging current to exceed 5 A at any time.

- After recharging, wait for more than 30 minutes and check the battery voltage with a multi circuit tester.
- If the battery voltage is less than the 12.5 V, recharge the battery again.
- If battery voltage is still less than 12.5 V, after recharging, replace the battery with a new one.
- When the motorcycle is not used for a long period, check the battery every 1 month to prevent the battery discharge.

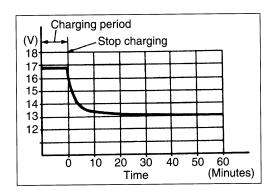

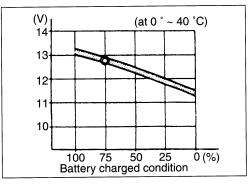

SERVICING INFORMATION

CONTENTS	
TROUBLESHOOTING10-	2
FI SYSTEM MALFUNCTION CODE AND DEFECTIVE	
CONDITION10-	2
ENGINE10-	4
RADIATOR (COOLING SYSTEM)10-	9
CHASSIS10-	10
BRAKES10-	11
ELECTRICAL10-	12
BATTERY10-	13
WIRING HARNESS, CABLE AND HOSE ROUTING10-	14
WIRING HARNESS ROUTING10-	14
CABLE ROUTING10-	17
FUEL TANK DRAIN HOSE ROUTING10-	18
COOLING SYSTEM HOSE ROUTING10-	19
FRONT BRAKE HOSE ROUTING10-	
REAR BRAKE HOSE ROUTING10-	21
PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING10-	
FUEL TANK SET-UP10-	23
COWLING SET-UP10-	
FRAME COVER SET-UP10-	
HEAT SHIELD SET-UP10-	
SIDE-STAND SET-UP10-	
GEARSHIFT PEDAL SET-UP10-	
SEAT LOCK CABLE ROUTING10-	
HANDLEBAR BALANCER10-	
SPECIAL TOOLS10-	
TIGHTENING TORQUE10-	<i>33</i>
ENGINE10-	
FI SYSTEM AND INTAKE AIR SYSTEM10-	
COOLING SYSTEM10-	
CHASSIS10-	
TIGHTENING TORQUE CHART10-	36
SERVICE DATA10-	<i>37</i>

TROUBLESHOOTING FI SYSTEM MALFUNCTION CODE AND DEFECTIVE CONDITION

MALFUNCTION	DETECTED ITEM	DETECTED FAILURE CONDITION	
CODE		CHECK FOR	
C00	NO FAULT		
	Camshaft position sensor	The signal does not reach ECM for 4 sec. and more, after receiving the starter signal.	
C11		The camshaft position sensor wiring and mechanical parts. (Camshaft position sensor, intake cam pin, wiring/coupler connection)	
	Crankshaft position	The signal does not reach ECM for 4 sec. and more, after	
C12	sensor	receiving the starter signal.	
012		The crankshaft position sensor wiring and mechanical parts.	
		(Crankshaft position sensor, lead wire/coupler connection)	
	Intake air pressure	The sensor should produce following voltage.	
C13	sensor	0.5 V ≤ sensor voltage < 4.85 V	
		Without the above range, C13 is indicated.	
		Intake air pressure sensor, lead wire/coupler connection.	
	Throttle position sen-	The sensor should produce following voltage.	
C14	sor	0.2 V ≤ sensor voltage < 4.8 V	
017		Without the above range, C14 is indicated.	
		Throttle position sensor, lead wire/coupler connection.	
	Engine coolant tem-	The sensor voltage should be the following.	
	perature sensor	0.15 V ≤ sensor voltage < 4.85 V	
C15		Without the above range, C15 is indicated.	
		Engine coolant temperature sensor, lead wire/coupler connec-	
		tion.	
	Intake air temperature	The sensor voltage should be the following.	
C21	sensor	0.15 V ≤ sensor voltage < 4.85 V	
_ "		Without the above range, C21 is indicated.	
		Intake air temperature sensor, lead wire/coupler connection.	
	Atmospheric pressure	The sensor voltage should be the following.	
C22	sensor	0.5 V ≤ sensor voltage < 4.85 V	
		Without the above range, C22 is indicated.	
		Atm. pressure sensor, wiring/coupler connection.	
	Tip over sensor	The sensor voltage should be the following for 2 sec. and more,	
C23		after ignition switch turns ON.	
		0.2 V ≤ sensor voltage ≤ 4.8 V	
		Without the above value, C23 is indicated.	
		Tip over sensor, lead wire/coupler connection.	
C24/C25 C26/C27	Ignition signal	Crankshaft position sensor (pick-up coil) signal is produced, but	
		signal from ignition coil is interrupted continuous by 8 times or	
		more. In this case, the code C24, C25, C26 or C27 is indicated.	
		Ignition coil, wiring/coupler connection, power supply from the	
		battery.	

MALFUNCTION	DETECTED ITEM	DETECTED FAILURE CONDITION	
CODE		CHECK FOR	
	Secondary throttle	When no actuator control signal is supplied from the ECM or	
	valve actuator	communication signal does not reach ECM or operation voltage	
C28		does not reach STVA motor, C28 is indicated. STVA can not	
		operate.	
		STVA lead wire/coupler.	
	Secondary throttle	The sensor should produce following voltage.	
	position sensor	0.15 V ≤ sensor voltage < 4.85 V	
C29		Without the above value, C29 is indicated.	
		Secondary throttle position sensor, lead wire/coupler connec-	
		tion.	
	Gear position signal	Gear position signal voltage should be higher than the following	
		for 3 seconds and more.	
C31		(Gear position sensor voltage > 0.6 V)	
031		Without the above value, C31 is indicated.	
		Gear position sensor, wiring/coupler connection. Gearshift cam	
		etc.	
	Fuel injector	Crankshaft position sensor (pickup coil) signal is produced, but	
C32/C33		fuel injector signal is interrupted continuous by 4 times or more.	
		In this case, the code C24, C25, C26 or C27 is indicated.	
		Injector, wiring/coupler connection, power supply to the injector.	
	Fuel pump relay	No voltage is applied to the fuel pump, although fuel pump relay	
		is turned ON, or voltage is applied to fuel pump although fuel	
C41		pump relay is turned OFF.	
		Fuel pump relay, connecting lead wire, power source to fuel	
		pump relay, fuel injectors.	
C42	Ignition switch	Ignition switch signal is not input in ECM.	
		Ignition switch, lead wire/coupler.	
	Exhaust control valve	EXCVA position sensor produces following voltage.	
_	actuator	0.1 V ≤ sensor voltage < 4.9 V	
C46		Without the above value, C46 is indicated. EXCVA motor can	
		not move.	
		EXCVA, EXCVA adjustment, lead wire/coupler.	

ENGINE

Complaint	Symptom and possible causes	Remedy
Engine will not start	Compression too low	
or is hard to start.	Out of adjustment tappet clearance.	Adjust.
	2. Worn valve guides or poor seating of valves.	Repair or replace.
	3. Mistiming valves.	Adjust.
	4. Excessively worn piston rings.	Replace.
	5. Worn-down cylinder bores.	Replace.
	6. Too slowly starter motor cranks.	See electrical section.
	7. Poor seating of spark plugs.	Retighten.
	Plug not sparking	
	Fouled spark plugs.	Clean.
	2. Wet spark plugs.	Clean and dry.
	3. Defective ignition coil.	Replace.
	4. Defective CKP sensor.	Replace.
	5. Defective ECM.	Replace.
	Open-circuited wiring connections.	Repair or Replace.
	No fuel reaching the intake manifold	
	Clogged fuel filter or fuel hose.	Clean or replace.
	Defective fuel pump.	Replace.
	Defective fuel pressure regulator.	Replace.
	Defective fuel injector.	Replace.
	Defective fuel pump relay.	Replace.
	6. Defective ECM.	Replace.
	Open-circuited wiring connections.	Check and repair.
	Incorrect fuel/air mixture	
	 Out of adjustment TP sensor. 	Adjust.
	Defective fuel pump.	Replace.
	Defective fuel pressure regulator.	Replace.
	Defective TP sensor.	Replace.
	Defective CKP sensor.	Replace.
	Defective IAP sensor.	Replace.
	7. Defective ECM.	Replace.
	8. Defective ECT sensor.	Replace.
	Defective IAT sensor.	Replace.
	10. Defective AP sensor.	Replace.

Complaint	Symptom and possible causes	Remedy
Engine idles poorly.	Out of adjustment tappet clearance.	Adjust.
	2. Poor seating of valves.	Replace or repair.
	3. Defective valve guides.	Replace.
	4. Worn down camshafts.	Replace.
	5. Too wide spark plug gaps.	Adjust or repalace.
	6. Defective ignition coil/plug caps.	Replace.
	7. Defective CKP sensor.	Replace.
	8. Defective ECM.	Replace.
	9. Defective TP sensor.	Replace.
	10. Defective fuel pump.	Replace.
	11. Imbalanced throttle valve.	Adjust.
	12. Damaged or cracked vacuum hose.	Replace.
Engine stalls easily.	Incorrect fuel/air mixture	
	Defective IAP sensor or circuit.	Repair or replace.
	2. Clogged fuel filter.	Clean or replace.
	3. Defective fuel pump.	Replace.
	4. Defective fuel pressure regulator.	Replace.
	5. Defective ECT sensor.	Replace.
	6. Defective thermostat.	Replace.
	7. Defective IAT sensor.	Replace.
	Improperly working fuel injector	
	Defective fuel injector.	Replace.
	2. No injection signal from ECM.	Repair or replace.
	3. Open or short circuited wiring connection.	Repair or replace.
	4. Defective battery or low battery voltage.	Replace or recharge.
	Improperly working control circuit or sensors	
	Defective ECM.	Replace.
	Defective fuel pressure regulator.	Replace.
	3. Defective TP sensor.	Replace.
	Defective IAT sensor.	Replace.
	5. Defective CMP sensor.	Replace.
	6. Defective CKP sensor.	Replace.
	7. Defective ECT sensor.	Replace.
	8. Defective fuel pump relay.	Replace.
	Improperly working engine internal parts	
	Fouled spark plugs.	Clean.
	Defective CKP sensor or ECM.	Replace.
	3. Clogged fuel hose.	Clean.
	Out of adjustment tappet clearance.	Adjust.

Complaint	Symptom and possible causes	Remedy
Noisy engine.	Excessive valve chatter	
	1. Too large tappet clearance.	Adjust.
	2. Weakened or broken valve springs.	Replace.
	3. Worn tappet or cam surface.	Replace.
	4. Worn and burnt camshaft journal.	Replace.
	Noise seems to come from piston	
	1. Worn down pistons or cylinders.	Replace.
	2. Fouled with carbon combustion chambers.	Clean.
	3. Worn piston pins or piston pin bore.	Replace.
	4. Worn piston rings or ring grooves.	Replace.
	Noise seems to come from timing chain	
	1. Stretched chain.	Replace.
	2. Worn sprockets.	Replace.
	3. Not working tension adjuster.	Repair or replace.
	Noise seems to come from clutch	
	1. Worn splines of countershaft or hub.	Replace.
	2. Worn teeth of clutch plates.	Replace.
	3. Distorted clutch plates, driven and drive.	Replace.
	4. Worn clutch release bearing.	Replace.
	5. Weakened clutch dampers.	Replace the primary
		driven gear.
	Noise seems to come from crankshaft	
	1. Due to wear rattling bearings.	Replace.
	2. Worn and burnt big-end bearings.	Replace.
	3. Worn and burnt journal bearings.	Replace.
	4. Too large thrust clearance.	Replace thrust bearing.
	Noise seems to come from balancer	
	1. Worn and burnt journal bearings.	Replace.
	Noise seems to come from transmission	
	1. Worn or rubbing gears.	Replace.
	2. Worn splines.	Replace.
	3. Worn or rubbing primary gears.	Replace.
	4. Worn bearings.	Replace.
	Noise seems to come from water pump	
	Too much play on pump shaft bearing.	Replace.
	2. Worn or damaged impeller shaft.	Replace.
	3. Worn or damaged mechanical seal.	Replace.
	4. Touches pump case and impeller.	Replace.

Complaint	Symptom and possible causes	Remedy
Engine runs poorly	Defective engine internal/electrical parts	
in high speed range.	Weakened valve springs.	Replace.
	2. Worn camshafts.	Replace.
	3. Valve timing out of adjustment.	Adjust.
	4. Too narrow spark plug gaps.	Adjust.
	5. Ignition not advanced sufficiently due to poorly	Replace ECM.
	working timing advance circuit.	
	6. Defective ignition coils.	Replace.
	7. Defective CKP sensor.	Replace.
	8. Defective ECM.	Replace.
	9. Clogged air cleaner element.	Clean.
	10. Clogged fuel hose, resulting in inadequate fuel	Clean and prime.
	supply to injector.	
	11. Defective fuel pump.	Replace.
	12. Defective TP sensor.	Replace.
	13. Defective STP sensor or STV actuator	Replace.
	Defective air flow system	
	Clogged air cleaner element.	Clean or replace.
	2. Defective throttle valve.	Adjust or replace.
	3. Defective secoundary throttle valve.	Adjust or replace.
	4. Sucking air from throttle body joint.	Repair or replace.
	5. Defective ECM.	Replace.
	6. Imbalancing throttle valve synchronization.	Adjust.
	Defective control circuit or sensor	
	Low fuel pressure.	Repair or replace.
	2. Defective TP sensor.	Replace.
	3. Defective IAT sensor.	Replace.
	4. Defective CMP sensor.	Replace.
	5. Defective CKP sensor.	Replace.
	6. Defective GP sensor.	Replace.
	7. Defective IAP sensor.	Replace.
	8. Defective ECM.	Replace.
	Out of adjustment TP sensor.	Replace.
	10. Defective STP sensor and/or STV actuator.	Replace.

Complaint	Symptom and possible causes	Remedy
Engine lacks power.	Defective engine internal/electrical parts	
	Loss of tappet clearance.	Adjust.
	2. Weakened valve springs.	Replace.
	Out of adjustment valve timing.	Adjust.
	4. Worn piston rings or cylinders.	Replace.
	5. Poor seating of valves.	Repair.
	6. Fouled spark plugs.	Clean or replace.
	7. Incorrect spark plugs.	Adjust or replace.
	8. Clogged injectors.	Clean.
	Out of adjustment TP sensor.	Adjust.
	10. Clogged air cleaner element.	Clean.
	11. Imbalancing throttle valve synchronization.	Adjust.
	12. Sucking air from throttle valve or vacuum hose.	Retighten or replace.
	13. Too much engine oil.	Drain out excess oil.
	14. Defective fuel pump or ECM.	Replace.
	15. Defective CKP sensor and ignition coils.	Replace.
	Defective control circuit or sensor	
	Low fuel pressure.	Repair or replace.
	2. Defective TP sensor.	Replace.
	3. Defective IAT sensor.	Replace.
	4. Defective CMP sensor.	Replace.
	5. Defective CKP sensor.	Replace.
	6. Defective GP sensor.	Replace.
	7. Defective IAP sensor.	Replace.
	8. Defective ECM.	Replace.
	9. Defective AP sensor.	Replace.
	10. Out of adjustment TP sensor.	Replace.
	11. Defective STP sensor and/or STV actuator.	Replace.
	12. Defective EXCV actuator.	Replace.
Engine overheats.	Defective engine internal parts	
	Heavy carbon deposit on piston crowns.	Clean.
	2. Not enough oil in the engine.	Add oil.
	Defective oil pump or clogged oil circuit.	Replace or clean.
	4. Sucking air from intake pipes.	Retighten or replace.
	5. Use incorrect engine oil.	Change. See radiator section.
	6. Defective cooling system. Lean fuel/air mixture	See radiator section.
	Short-circuited IAP sensor/lead wire.	Repair or replace.
	Short-circuited IAT sensor/lead wire. Short-circuited IAT sensor/lead wire.	Repair or replace.
	Sucking air from intake pipe joint.	Clean or replace.
	Sucking all from linake pipe joint. Defective fuel injectors.	Repair or replace.
	Defective ruer injectors. Defective ECT sensor.	Replace.
	The other factors	Tiopiaco.
	In Ignition timing is too advanced due to defective	Replace.
	timing advance system (ECT sensor, GP sensor,	Tiopiaco.
	CKP sensor and ECM.)	
	2. Drive chain is too tight.	Adjust.

Complaint	Symptom and possible causes	Remedy
Dirty or heavy	Too much engine oil in the engine.	Check with inspection
exhaust smoke.		window drain out
		excess oil.
	Worn piston rings or cylinders.	Replace.
	3. Worn valve guides.	Replace.
	4. Scored or scuffed cylinder walls.	Replace.
	5. Worn valves stems.	Replace.
	6. Defective stem seal.	Replace.
	7. Worn oil ring side rails.	Replace.
Slipping clutch.	Weakened clutch springs.	Replace.
	Worn or distorted pressure plates.	Replace.
	3. Distorted clutch plates or pressure plates.	Replace.
Dragging clutch.	Some clutch spring weakened while others	Replace.
	are not.	
	2. Distorted pressure plates or clutch plates.	Replace.
Transmission will	Broken gearshift cam.	Replace.
not shift.	2. Distorted gearshift forks.	Replace.
	3. Worn gearshift pawl.	Replace.
Transmission will	Broken return spring on shift shaft.	Replace.
not shift back.	2. Rubbing or stickily shift shaft.	Repair or replace.
	3. Distorted or worn gearshift forks.	Replace.
Transmission jumps	Worn shifting gears on driveshaft or	Replace.
out of gear.	countershaft.	
	2. Distorted or worn gearshift forks.	Replace.
	3. Weakened stopper spring on gearshift stopper.	Replace.
	4. Worn gearshift cam plate.	Replace.

RADIATOR (COOLING SYSTEM)

Complaint	Symptom and possible causes	Remedy
Engine overheats.	Not enough engine coolant.	Add coolant.
	2. Clogged with dirt or trashes radiator core.	Clean.
	3. Faulty cooling fan.	Repair or replace.
	4. Defective cooling fan thermo-switch.	Replace.
	5. Clogged water passage.	Clean.
	6. Air trapped in the cooling circuit.	Bleed out air.
	7. Defective water pump.	Replace.
	8. Use incorrect coolant.	Replace.
	9. Defective thermostat.	Replace.
Engine overcools.	Defective cooling fan thermo-switch.	Replace.
-	2. Extremely cold weather.	Put on the radiator cover.
	3. Defective thermostat.	Replace.

Complaint	Symptom and possible causes	Remedy
Heavy steering.	Overtightened steering stem nut.	Adjust.
	2. Broken bearing in steering stem.	Replace.
	3. Distorted steering stem.	Replace.
	4. Not enough pressure in tires.	Adjust.
Wobbly handlebars.	1. Loss of balance between right and left front forks.	Adjust.
	2. Distorted front fork.	Repair or replace.
	3. Distorted front axle or crooked tire.	Replace.
	Loose steering stem nut.	Adjust.
	Worn or incorrect tire or wrong tire pressure.	Adjust or replace.
	6. Worn bearing/race in steering stem.	Replace.
Wobbly front wheel.	Distorted wheel rim.	Replace.
	2. Worn front wheel bearings.	Replace.
	3. Defective or incorrect tire.	Replace.
	4. Loose axle or axle pinch bolt.	Retighten.
	5. Incorrect front fork oil level.	Adjust.
Front suspension	1. Weakened springs.	Replace.
too soft.	2. Not enough fork oil.	Replenish.
	3. Wrong weight fork oil.	Replace.
	4. Improperly set front fork spring adjuster.	Adjust.
	Improperly set front fork damping force adjuster.	Adjust.
Front suspension	Too viscous fork oil.	Replace.
too stiff.	2. Too much fork oil.	Drain excess oil.
	3. Improperly set front fork spring adjuster.	Adjust.
	4. Improperly set front fork damping force adjuster.	Adjust.
	5. Bent front axle.	Replace.
Noisy front	Not enough fork oil.	Replenish.
suspension.	Loose bolts on suspension.	Retighten.
Wobbly rear wheel.	Distorted wheel rim.	Replace.
	2. Worn rear wheel bearing or swingarm bearings.	Replace.
	Defective or incorrect tire.	Replace.
	4. Worn swingarm and rear suspension bearings.	Replace.
	5. Loose nuts or bolts on rear suspensions.	Retighten.
Rear suspension	Weakened spring of shock absorber.	Replace.
too soft.	2. Leakage oil or gas of shock absorber.	Replace.
!	3. Improperly set rear spring pre-load adjuster.	Adjust.
	4. Improperly set damping force adjuster.	Adjust.
Rear suspension	Bent shock absorber shaft.	Replace.
too stiff.	2. Bent swingarm.	Replace.
	3. Worn swingarm and rear suspension bearings.	Replace.
	4. Improperly set rear spring pre-load adjuster.	Adjust.
	5. Improperly set damping force adjuster.	Adjust.
Noisy rear	Loose nuts or bolts on rear suspension.	Retighten.
suspension.	Worn swingarm and suspension bearings.	Replace.

BRAKES


Complaint	Symptom and possible causes	Remedy	
Insufficient brake	1. Leakage of brake fluid from hydraulic system.	Repair or replace.	
power.	2. Worn pads.	Replace.	
	3. Oil adhesion of engaging surface of pads/shoe.	Clean disc and pads.	
	4. Worn disc.	Replace.	
	5. Air in hydraulic system.	Bleed air.	
	6. Not enough brake fluid in the reservoir.	Replenish.	
Brake squeaking.	 Carbon adhesion on pad surface. 	Repair surface with	
		sandpaper.	
	2. Tilted pad.	Modify pad fitting or	
		replace.	
	3. Damaged wheel bearing.	Replace.	
	4. Loosen front-wheel axle or rear-wheel axle.	Tighten to specified	
		torque.	
	5. Worn pads.	Replace.	
	6. Foreign material in brake fluid.	Replace brake fluid.	
	7. Clogged return port of master cylinder.	Disassemble and	
		clean master cylinder.	
Excessive brake	Air in hydraulic system.	Bleed air.	
lever stroke.	Insufficient brake fluid.	Replenish fluid to specified	
		level; bleed air.	
	3. Improper quality of brake fluid.	Replace with correct fluid.	
Leakage of brake	Insufficient tightening of connection joints.	Tighten to specified torque.	
fluid.	2. Cracked hose.	Replace.	
	3. Worn piston and/or cup.	Replace piston and/or cup.	
Brake drags.	1. Rusty part.	Clean and lubricate.	
	2. Insufficient brake lever or brake pedal	Lubricate.	
	pivot lubrication.		


Complaint	Symptom and possible causes	Remedy		
No sparking or poor	Defective ignition coils or CKP sensor.	Replace.		
sparking.	2. Defective spark plugs.	Replace.		
	3. Defective sensor.	Replace.		
	4. Defective ECM.	Replace. Replace.		
	5. Defective tip over sensor.			
	6. Open-circuited wiring connections.	Check and repair.		
Spark plug soon	1. Mixture too rich.	Inspect FI system.		
become fouled with	2. Idling speed set too high.	Adjust fast idle or throttle		
carbon.		stop screw.		
	3. Incorrect gasoline.	Change.		
	4. Dirty element in air cleaner.	Clean or replace.		
	5. Too cold spark plugs.	Replace with hot type plug.		
Spark plug become	Worn piston rings.	Replace.		
fouled too soon.	2. Worn piston or cylinders.	Replace.		
	3. Excessive clearance of valve stems in valve	Replace.		
	guides.			
	4. Worn stem oil seal.	Replace.		
Spark plug elec-	1. Too hot spark plugs.	Replace with cold type		
trodes overheat or		plugs.		
burn.	2. Loose spark plugs.	Retighten.		
	3. Too lean mixture.	Inspect FI system.		
Generator does not	Open or short lead wires, or loose lead	Repair or replace or		
charge.	connections.	retighten.		
3	2. Shorted, grounded or open generator coils.	Replace.		
	3. Shorted or punctured regulator/rectifier.	Replace.		
Generator does	Lead wires tend to get shorted or open-circuited	Repair or retighten.		
charge, but charg-	or loosely connected at terminals.			
ing rate is below the	2. Grounded or open-circuited generator coils or	Replace.		
specification.	generator.			
•	3. Defective regulator/rectifier.	Replace.		
	4. Defective cell plates in the battery.	Replace the battery.		
Generator	Internal short-circuit in the battery.	Replace the battery.		
overcharges.	2. Damaged or defective regulator/rectifier.	Replace.		
, and the second	3. Poorly grounded regulator/rectifier.	Repair, replace, or		
		connect properly.		
Unstable charging.	Lead wire insulation frayed due to vibration,	Repair or replace.		
	resulting in intermittent shorting.			
	2. Internally shorted generator.	Replace.		
	3. Defective regulator/rectifier.	Replace.		
Starter button is not	Run down battery.	Repair or replace.		
effective.	Defective switch contacts.	Replace.		
	Not seating properly brushes on commutator in	Repair or replace.		
	starter motor.			
	Defective starter relay/starter interlock switch.	Replace.		
	5. Defective main fuse.	Replace.		


BATTERY


Complaint	Symptom and possible causes	Remedy		
"Sulfation", acidic	Cracked battery case.	Replace the battery.		
white powdery sub-	2. Battery has been left in a run-down condition for	Replace the battery.		
stance or spots on	a long time.			
surface of cell				
plates.				
Battery runs down	1. Not correct the charging system.	Check the generator, regu-		
quickly.	G G J	lator/rectifier and circuit		
quickly.		connections and make nec-		
		essary adjustments to		
		obtain specified charging		
		operation.		
	Cell plates have lost much of their active material as a result of overcharging.	Replace the battery, and		
		correct the charging sys-		
	material de difection of each of g	tem.		
	3. Internal short-circuit in the battery.	Replace the battery.		
	4. Too low battery voltage.	Recharge the battery fully.		
	5. Too old battery.	Replace the battery.		
Dettem "aulfation"	Incorrect charging rate.	Replace the battery.		
Battery "sulfation".	(When not in use batteries should be checked at			
	least once a month to avoid sulfation.)			
	Lucium and in a cold alimate for	Replace the battery if badly		
		sulfated.		
	too long.			

WIRING HARNESS, CABLE AND HOSE ROUTING **WIRING HARNESS ROUTING**

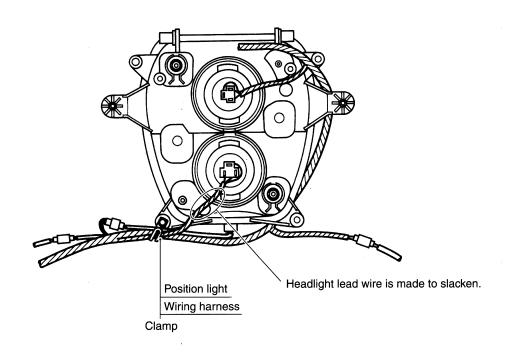


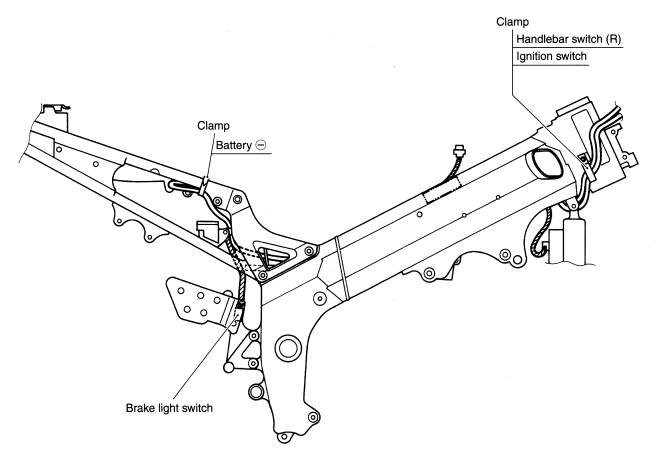


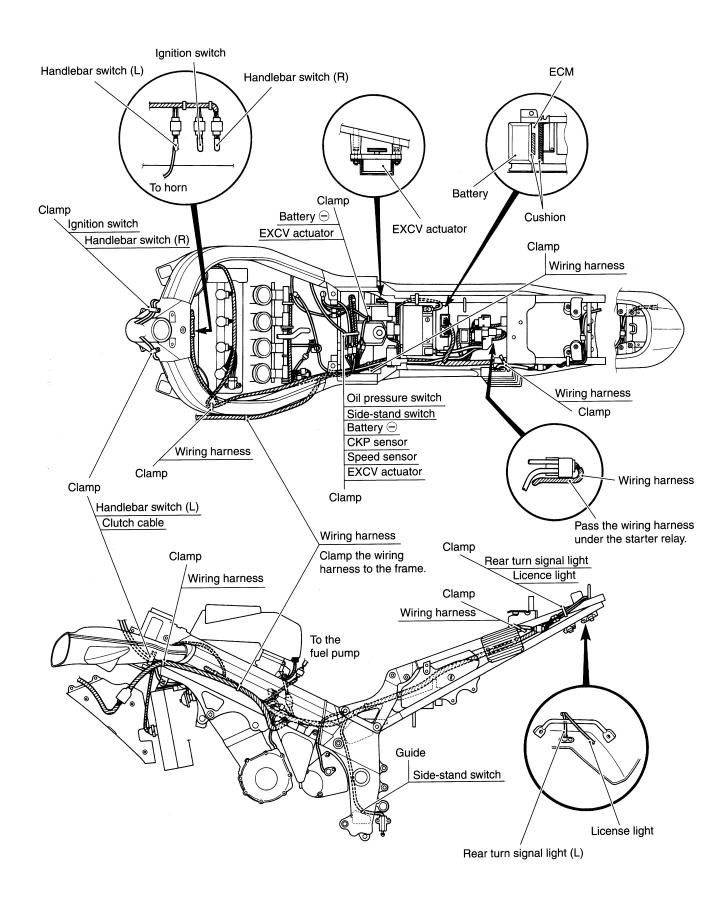

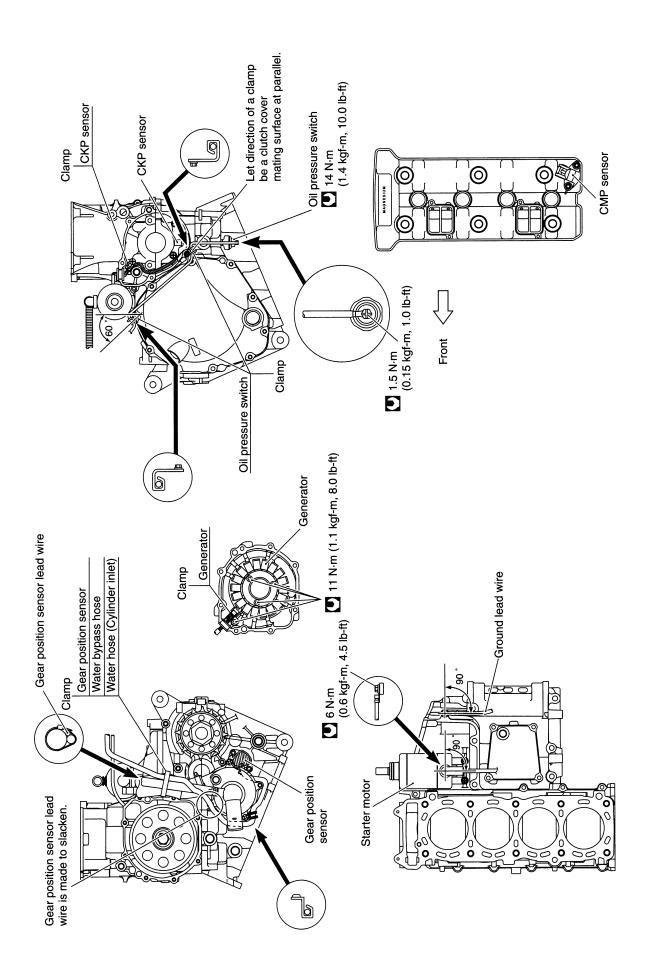


CABLE ROUTING

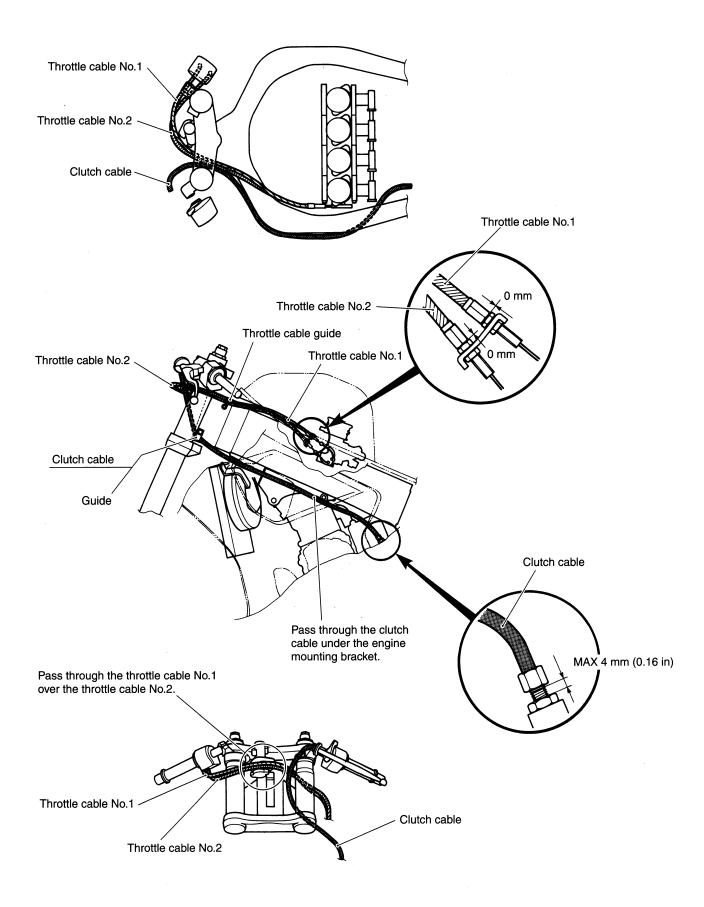


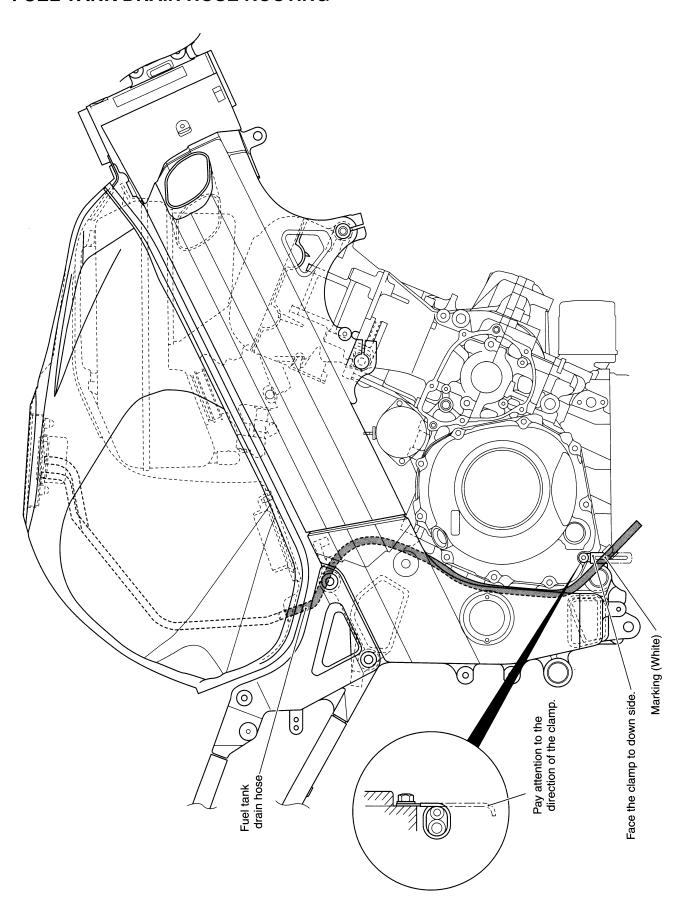


COOLING SYSTEM HOSE ROUTING

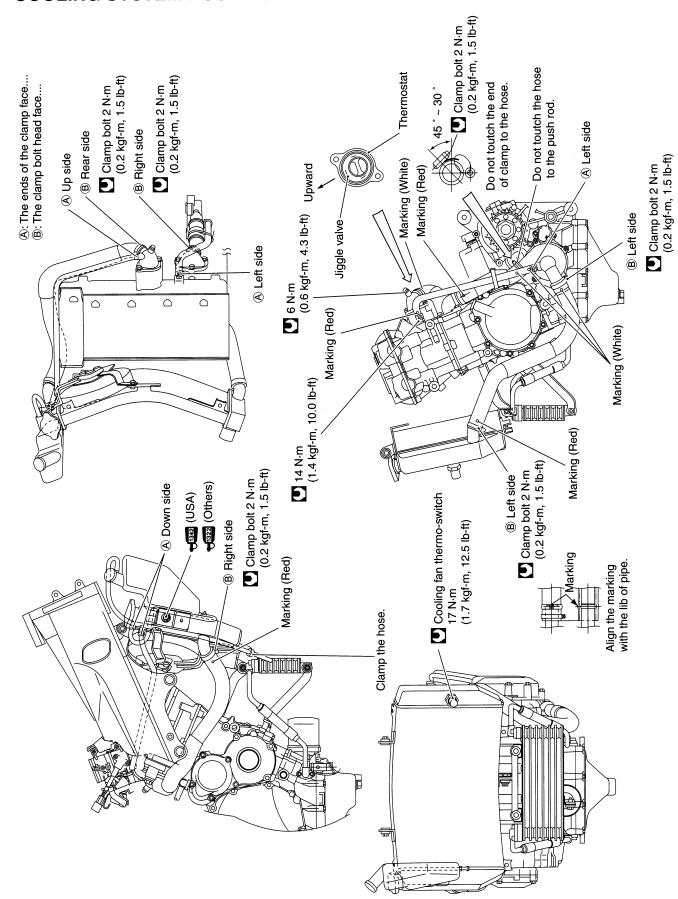


FRONT BRAKE HOSE ROUTING

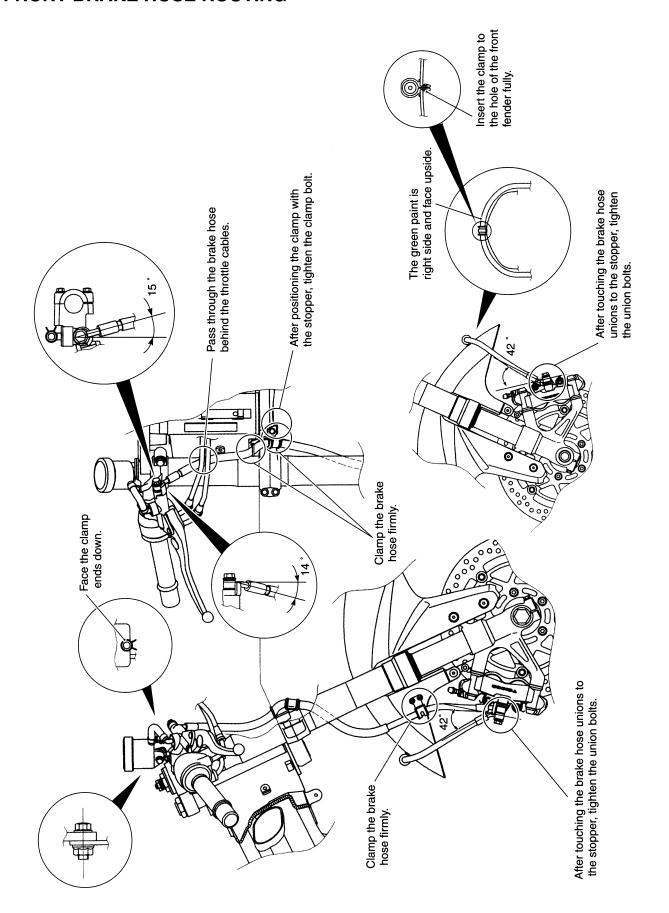


REAR BRAKE HOSE ROUTING

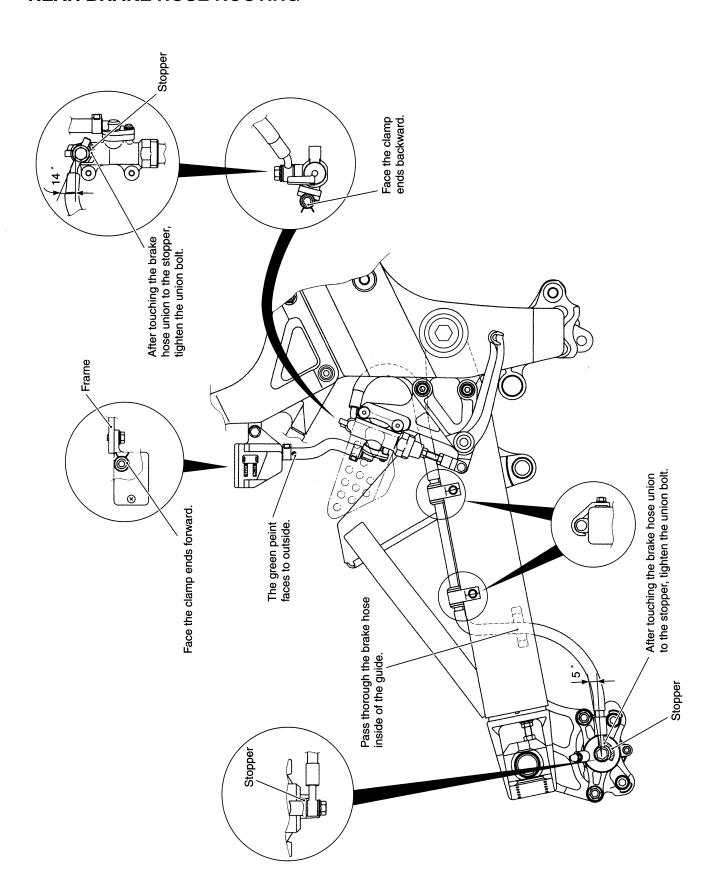


PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING

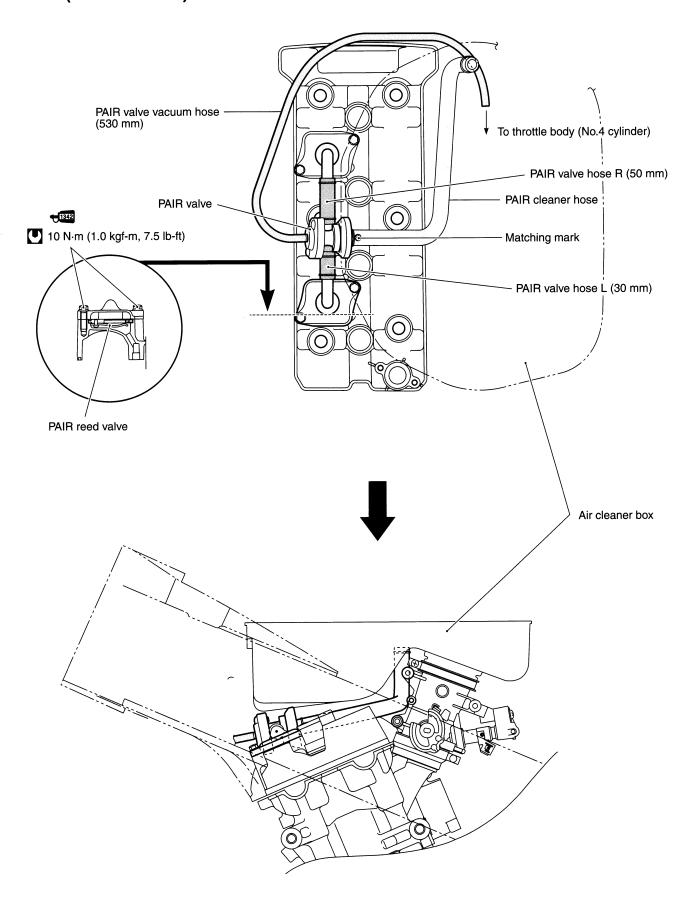


FUEL TANK SET-UP

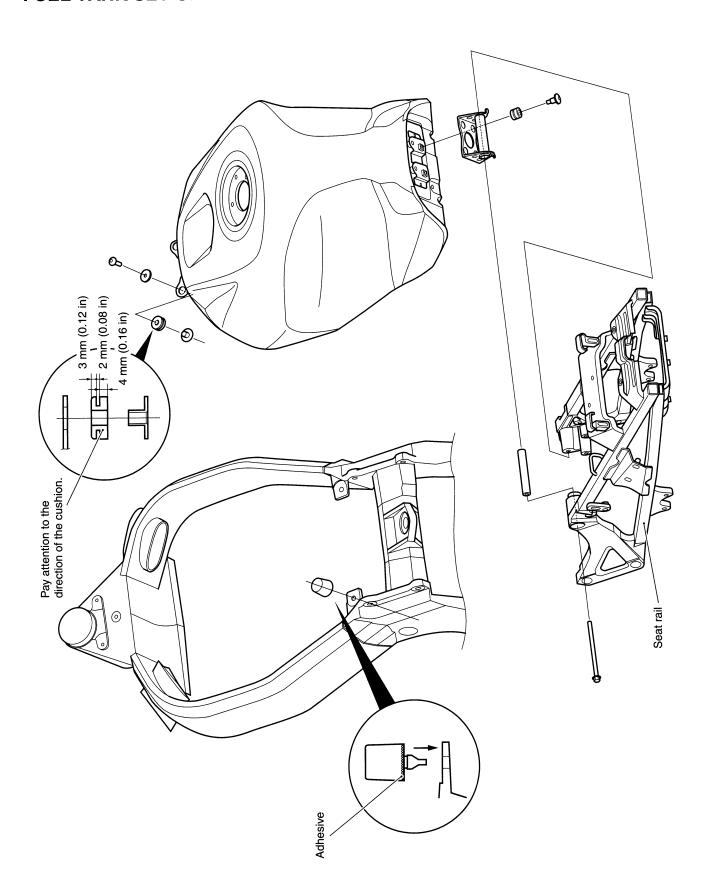


COWLING SET-UP

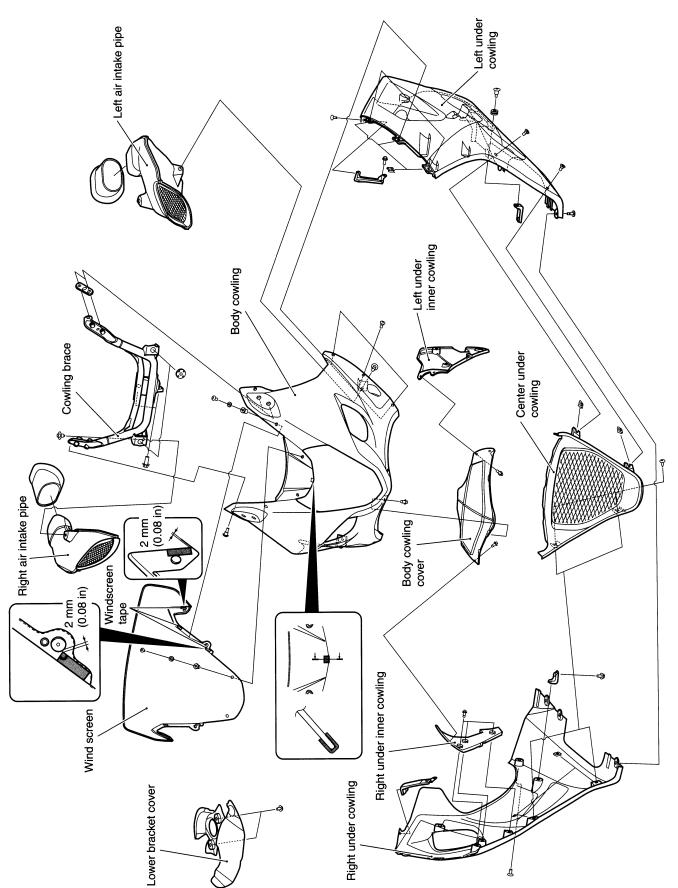


FRAME COVER SET-UP

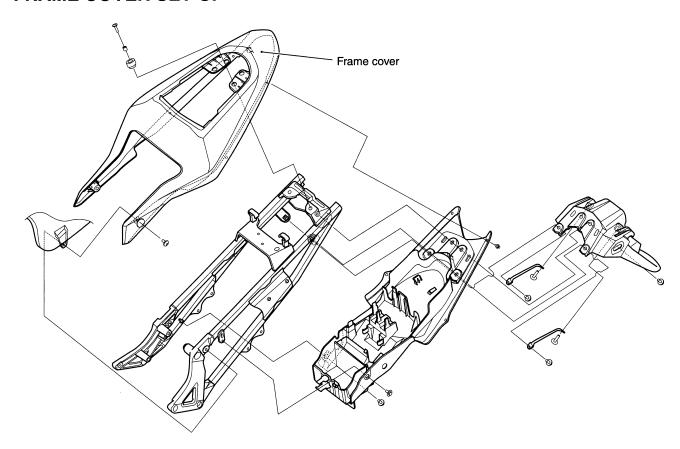


HEAT SHIELD SET-UP

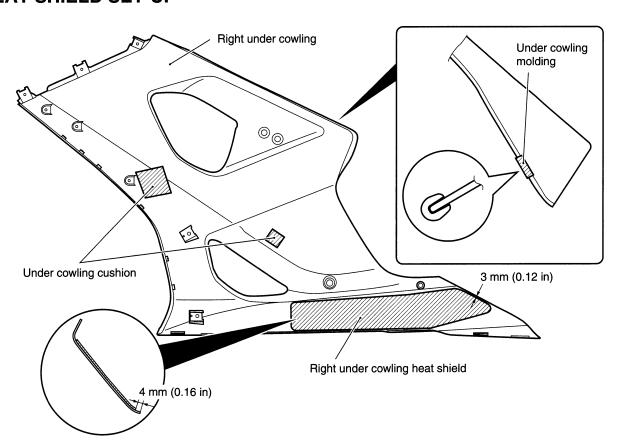


SIDE-STAND SET-UP

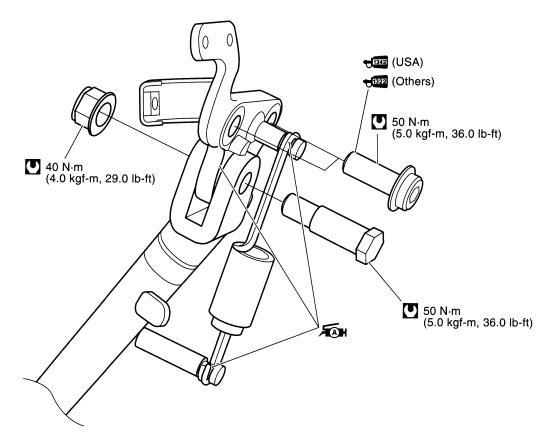


GEARSHIFT PEDAL SET-UP

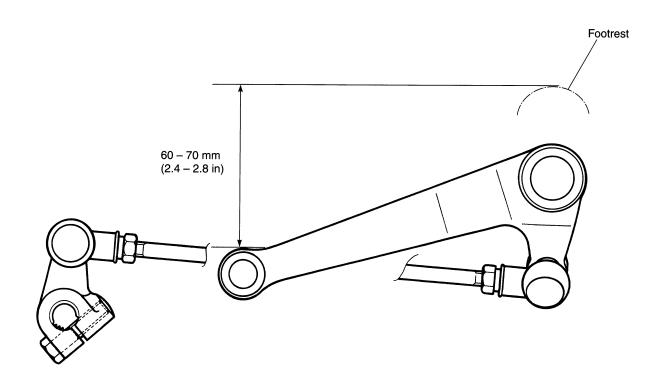

SEAT LOCK CABLE ROUTING

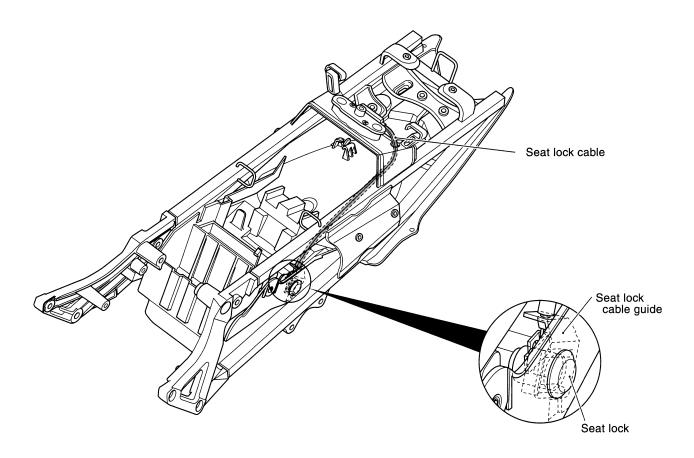



HANDLEBAR BALANCER

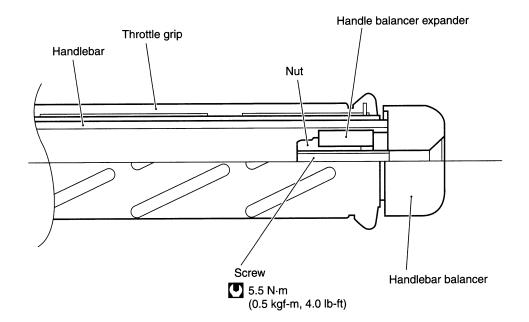

SPECIAL TOOLS



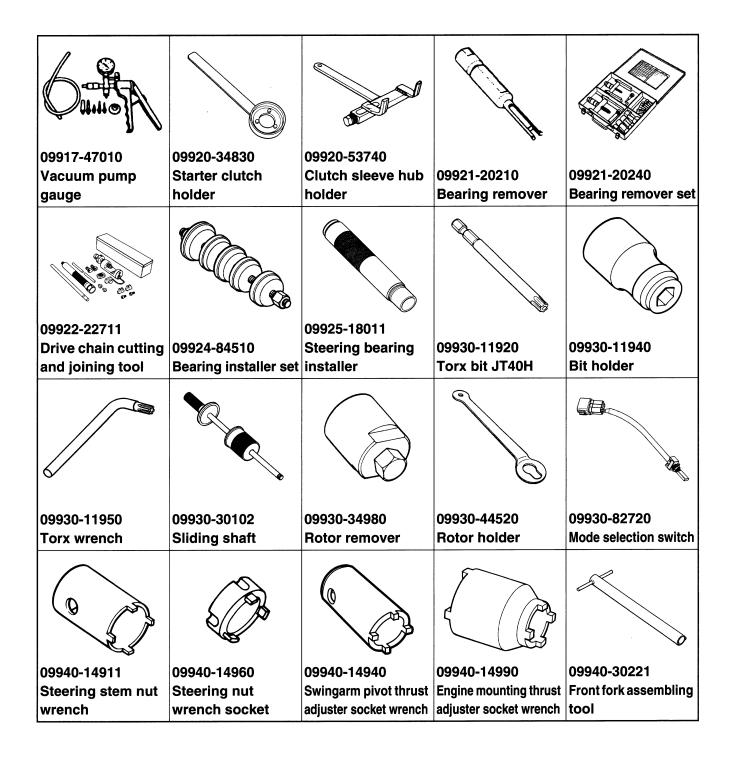

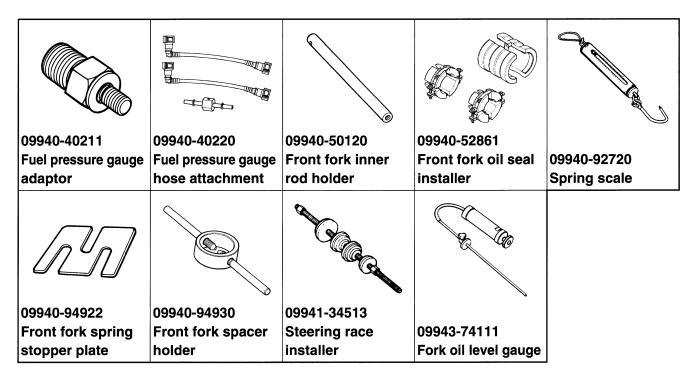

NOTE:

When order the special tool, please confirm whether it is available or not.

TIGHTENING TORQUE ENGINE

ITEM	N⋅m	kgf-m	lb-ft		
Exhaust pipe bolt	23	2.3	16.5		
Muffler connecting nut	25	2.5	18.0		
Muffler mounting nut	23	2.3	16.5		
Speed sensor rotor bolt	20	2.0	14.4		
Engine sprocket nut	115	11.5	83.2		
Engine mounting bolt and nut	(M:12)		75	7.5	54.0
	(M:10)		55	5.5	39.8
Engine mounting thrust adjuster			23	2.3	16.5
Engine mounting thrust adjuster lock-n	ıut		45	4.5	32.5
Engine mounting pinch bolt					16.5
Cylinder head cover bolt			14	1.4	10.0
Spark plug	11	1.1	8.0		
Cam chain guide bolt			10	1.0	7.0
Camshaft journal holder bolt			10	1.0	7.0
Cam chain tension adjuster cap bolt			23	2.3	16.6
Cam chain tension adjuster mounting I	10	1.0	7.0		
Cam chain tensioner bolt			10	1.0	7.0
Cylinder head bolt	(1.1.40)	Temporary	25	2.5	18.0
	(M: 10)	Final	51	5.1	37.6
	(M: 6)		10	1.0	7.0
PAIR reed valve cover bolt	10	1.0	7.0		
Water jacket plug	9.5	0.95	6.9		
Water inlet cover bolt			10	1.0	7.0
Clutch cover bolt			10	1.0	7.0
Clutch sleeve hub nut			150	15.0	108
Clutch spring set bolt			10	1.0	7.0
Starter clutch cover bolt			10	1.0	7.0
Starter idle gear cover bolt			10	1.0	7.0
Valve timing inspection plug			11	1.1	8.0
Starter clutch bolt	55	5.5	40.0		
Generator cover bolt	10	1.0	7.0		
Generator rotor bolt	120	12.0	88.5		
Generator stator set bolt	10	1.0	7.0		
Gearshift cam stopper bolt	11	1.1	8.0		
Gearshift cam stopper plate bolt	13	1.3	9.5		
Oil pressure switch	14	1.4	10.0		
Crankcase bolt	(M: 6)	(Initial)	6	0.6	4.5
	(M: 6)	(Final)	11	1.1	8.0
	(M: 8)	(Initial)	15	1.5	10.8
		(Final)	26	2.6	19.0
	(M: 9)	(Initial)	18	1.8	13.0
	50 °				

ITEM		N⋅m	kgf-m	lb-ft	
Oil gallery plug	(M: 6)	10	1.0	7.0	
	(M: 8)	18	1.8	13.0	
	(M: 10)	18	1.8	13.0	
	(M: 16)	35	3.5	26.5	
Oil drain plug		23	2.3	16.5	
Piston cooling oil jet bolt		10	1.0	7.0	
Oil pump mounting bolt		10	1.0	7.0	
Conrod bearing cap bolt	(Initial)	21	2.1	15.1	
	(Final)		90 ° (1/4 turn)		
Bearing retainer screw		10	1.0	7.0	
Breather cover bolt		10	1.0	7.0	
Oil strainer bolt		10	1.0	7.0	
Oil pan bolt		10	1.0	7.0	
Oil cooler mounting bolt		10	1.0	7.0	
Oil cooler hose		10	1.0	7.0	
Water bypass union		14	1.4	10.0	
Gearshift fork shaft retainer bolt		10	1.0	7.0	
Starter motor mounting bolt		10	1.0	7.0	

FI SYSTEM AND INTAKE AIR SYSTEM

ITEM	N⋅m	kgf-m	lb-ft
CKP sensor mounting bolt	8	0.8	6.0
IAT sensor	18	1.8	13.0
Fuel delivery pipe mounting screw	3.5	0.35	2.5
Fuel pump mounting bolt	10	1.0	7.0
TPS and STPS mounting screw	3.5	0.35	2.5
EXCVA mounting bolt	5	0.5	3.5
EXCVA pulley mounting bolt	5	0.5	3.5

COOLING SYSTEM

ITEM	N⋅m	kgf-m	lb-ft	
Impeller securing bolt	8	0.8	6.0	
Water pump cover screw	6	0.6	4.5	
Water pump mounting bolt	10	1.0	7.0	
Cooling fan thermo-switch	17	1.7	12.5	
ECT sensor	18	1.8	13.0	
Thermostat cover bolt	10	1.0	7.0	


CHASSIS


ITEM	N⋅m	kgf-m	lb-ft
Steering stem head nut	90	9.0	65.0
Steering stem lock-nut	80	8.0	58.0
Steering damper bolt and nut	23	2.3	16.5
Front fork upper clamp bolt	23	2.3	16.5
Front fork lower clamp bolt	23	2.3	16.5
Front fork cap bolt	23	2.3	16.5
Front fork inner rod lock-nut	29	2.9	21.0
Front fork damper rod bolt	23	2.3	16.5
Front axle	100	10.0	72.5
Front axle pinch bolt	23	2.3	16.5
Handlebar clamp bolt	23	2.3	16.5
Front brake master cylinder mounting bolt	10	1.0	7.0
Front brake caliper mounting bolt	39	3.9	28.0
Front brake caliper housing bolt	22	2.2	16.0
Front brake pad mounting pin	16	1.6	11.5
Brake hose union bolt	23	2.3	16.5
Clutch lever holder mounting bolt	10	1.0	7.0
Air bleeder valve	8.0	0.8	6.0
Brake disc bolt (Front)	23	2.3	16.5
Brake disc bolt (Rear)	35	3.5	25.5
Rear brake caliper mounting bolt	25	2.5	18.0
Rear brake caliper housing bolt	37	3.7	27.0
Rear brake pad mounting pin	17	1.7	12.5
Rear brake master cylinder mounting bolt	10	1.0	7.0
Rear brake master cylinder rod lock-nut	18	1.8	13.0
Front footrest bracket mounting bolt	23	2.3	16.5
Swingarm pivot shaft	15	1.5	11.0
Swingarm pivot nut	100	10.0	72.5
Swingarm pivot lock-nut	90	9.0	65.0
Cushion lever mounting nut	78	7.8	56.5
Cushion rod mounting nut	78	7.8	56.5
Rear shock absorber mounting bolt and nut	50	5.0	36.0
(Upper and Lower)	50	5.0	30.0
Rear axle nut	100	10.0	72.5
Rear sprocket nut	60	6.0	43.5
Side-stand mounting bracket bolt	50	5.0	36.0
Cowling brace bolt and nut	25	2.5	18.0
Rear shock absorber bracket nut	115	11.5	83.0
Seat rail bolt	50	5.0	36.0


TIGHTENING TORQUE CHART

For other nuts and bolts not listed in the preceding page, refer to this chart:

Bolt Diameter	Conventional or "4" marked bolt			"7" marked bo	lt	
(mm)	N⋅m	kgf-m	lb-ft	N⋅m	kgf-m	lb-ft
4	1.5	0.15	1.0	2.3	0.23	1.5
5	3	0.3	2.0	4.5	0.45	3.0
6	5.5	0.55	4.0	10	1.0	7.0
8	13	1.3	9.5	23	2.3	16.5
10	29	2.9	21.0	50	5.0	36.0
12	45	4.5	32.5	85	8.5	61.5
14	65	6.5	47.0	135	13.5	97.5
16	105	10.5	76.0	210	21.0	152.0
18	160	16.0	115.5	240	24.0	173.5

 

 

 

Conventional bolt

"4" marked bolt

"7" marked bolt

SERVICE DATA VALVE + VALVE GUIDE

Unit: mm (in)

ITEM		STANDARD	LIMIT
Valve diam.	IN.	29	
	IIN.	(1.14)	_
	EX.	24	
	LA.	(0.94)	
Tappet clearance (when cold)	IN.	0.10 - 0.20	
	IIV.	(0.004 - 0.008)	_
	EX.	0.20 - 0.30	
	EA.	(0.008 – 0.012)	
Valve guide to valve stem	IN.	0.010 - 0.037	
clearance	IIV.	(0.0004 - 0.0015)	
	EX.	0.030 - 0.057	
	<u>Ε</u> Λ.	(0.0012 - 0.0022)	_
Valve guide I.D.	IN. & EX.	4.000 – 4.012	
	IIV. & EA.	(0.1575 – 0.1580)	_
Valve stem O.D.	IN.	3.975 – 3.990	
	IIN.	(0.1565 – 0.1571)	_
	EX.	3.955 – 3.970	
	EA.	(0.1557 – 0.1563)	
Valve stem deflection	IN. & EX.		0.35
	IIV. & LX.	-	(0.014)
Valve stem runout	IN. & EX.	_	0.05
	IIV. & LX.	-	(0.002)
Valve head thickness	IN. & EX.		0.5
	IIV. & LX.		(0.02)
Valve seat width	IN. & EX.	0.9 - 1.1	
	IIV. & LA.	(0.035 - 0.043)	_
Valve head radial runout	IN. & EX.		0.03
	IIV. & LA.	_	(0.001)
Valve spring free length	IN. & EX.		37.0
	IIV. & LA.		(1.46)
Valve spring tension		127 - 147 N (13.0 - 15.0 kgf)	
	IN. & EX.	(28.7 – 33.1 lbs)	_
		at length 32.85 mm (1.29 in)	

CAMSHAFT + CYLINDER HEAD

ITEM		STANDARD	
Cam height	IN.	37.01 – 37.06	36.71
	IIN.	(1.457 – 1.459)	(1.445)
	EX.	35.98 – 36.03	35.68
	EA.	(1.417 – 1.418)	(1.405)
Camshaft journal oil clearance	IN. & EX.	0.032 - 0.066	0.150
	IIN. & EA.	(0.0013 – 0.0026)	(0.0059)

ITEM		STANDARD	
Camshaft journal holder I.D.	IN. & EX.	24.012 - 24.025 (0.9454 - 0.9459)	_
Camshaft journal O.D.	IN. & EX.	23.959 – 23.980 (0.9433 – 0.9441)	_
Camshaft runout		_	0.10 (0.004)
Cam chain pin (at arrow "3")		14th pin	_
Cylinder head distortion		_	0.20 (0.008)

CYLINDER + PISTON + PISTON RING

ITEM			STANDARD	LIMIT
Compression pressure		(13	1 300 – 1 700 kPa – 17 kgf/cm², 185 – 242 psi)	1 000 kPa (10 kgf/cm²,) 142 psi
Compression pressure difference		_		
Piston to cylinder clearance			0.030 - 0.040 (0.0012 - 0.0016)	0.120 (0.0047)
Cylinder bore			73.000 – 73.015 (2.8740 – 2.8746)	Nicks or Scratches
Piston diam.	Mea	72.965 – 72.980 (2.8726 – 2.8732) Measure at 15 mm (0.6 in) from the skirt end.		72.880 (2.8693)
Cylinder distortion				0.02 (0.008)
Piston ring free end gap	1st	R	Approx 8.0 (0.31)	6.4 (0.25)
	2nd	RN	Approx 10.2 (0.40)	8.2 (0.32)
Piston ring end gap	1st	R	0.06 - 0.18 (0.002 - 0.007)	0.50 (0.020)
	2nd	RN	0.06 - 0.18 (0.002 - 0.007)	0.50 (0.020)
Piston ring to groove clearance	1st		_	0.180 (0.0071)
	2nd	ł	_	0.150 (0.0059)
Piston ring groove width	1st		1.01 - 1.03 (0.0398 - 0.0406)	_
	2nd	J	0.81 - 0.83 (0.0319 - 0.0327)	_
	Oil		1.51 - 1.53 (0.0594 - 0.0602)	_

ITEM		STANDARD	
Piston ring thickness	1st	0.97 - 0.99 (0.0382 - 0.0390)	_
	2nd	0.77 - 0.79 (0.0303 - 0.0311)	_
Piston pin bore I.D.		16.002 – 16.008	16.030
		(0.6300 - 0.6302)	(0.6311)
Piston pin O.D.	15.995 – 16.000		15.980
		(0.6297 - 0.6299)	(0.6291)

CONROD + CRANKSHAFT

Unit: mm (in)

ITEM		STANDARD	LIMIT	
Conrod small end I.D.		16.010 - 16.018		
		(0.6303 - 0.6306)	(0.6315)	
Conrod big end side clearance		0.10 - 0.20	0.30	
•		(0.004 - 0.008)	(0.012)	
Conrod big end width		19.95 – 20.00		
		(0.7854 - 0.7874)		
Crank pin width		20.10 – 20.15		
		(0.7913 - 0.7933)		
Conrod big end oil clearance		0.032 - 0.056	0.080	
		(0.0013 – 0.0022)	(0.0031)	
Crank pin O.D.		34.976 – 35.000		
•		(1.3770 – 1.3780)		
Crankshaft journal oil clearance		0.016 - 0.040	0.080	
		(0.0006 – 0.0016)	(0.0031)	
Crankshaft journal O.D.		34.976 - 35.000	_	
		(1.3770 – 1.3780)		
Crankshaft thrust bearing	Right side	2.420 - 2.440		
thickness	Hight side	(0.0953 – 0.0961)		
	Left side	2.360 - 2.500		
	Len side	(0.0929 - 0.0984)		
Crankshaft thrust clearance	0.070 – 0.110		_	
		(0.0028 - 0.0043)		
Crankshaft runout			0.05	
			(0.002)	

BALANCER

ITEM	STANDARD	LIMIT
Balancer shaft journal oil clearance	0.020 - 0.044	0.080
	(0.00079 - 0.00173)	(0.00315)
Balancer shaft journal O.D.	22.984 – 23.000	
	(0.9049 - 0.9055)	_

OIL PUMP

ITEM	STANDARD	LIMIT
Oil pressure (at 60 °C, 140 °F)	100 – 400 kPa	
	(1.0 – 4.0 kgf/cm², 14 – 57 psi)	_
	at 3 000 r/min.	

CLUTCH Unit: mm (in)

ITEM		STANDARD	LIMIT	
Clutch lever play		10 – 15		
		(0.4 - 0.6)	_	
Clutch release screw		1/4 turn back	_	
Drive plate thickness	No. 1. Cond C	2.45 – 2.95	2.15	
	100. 1, 2 and 3	No. 1, 2 and 3 (0.096 – 0.116)		
Drive plate claw width	No. 1. Cond C	13.85 – 13.96	13.05	
	No. 1, 2 and 3	(0.5453 – 0.5496)		
Driven plate distortion				
		_		
Clutch spring free height		77.77 (3.062)		

TRANSMISSION + DRIVE CHAIN

Unit: mm (in) Except ratio

ITEM			STANDARD	LIMIT
Primary reduction ratio		1.553 (73/47)		
Final reduction ratio			2.470 (42/17)	_
Gear ratios	Low		2.687 (43/16)	
	2nd		2.052 (39/19)	_
	3rd		1.681 (37/22)	
	4th		1.450 (29/20)	
	5th		1.304 (30/23)	_
	Тор		1.208 (29/24)	
Shift fork to groove clearar	nce		0.10 - 0.30	0.50
			(0.004 – 0.012)	
Shift fork groove width		5.0 – 5.1		
		(0.197 – 0.201)		
Shift fork thickness		4.8 – 4.9		
		(0.189 – 0.193)		
Drive chain		Type	DID530	
		Links	110 links	_
		20-pitch length	_	319.4 (12.57)
Drive chain slack (on side-stand)		20 – 30		
		(0.79 – 1.18)		_
Gearshift lever height			60 – 70	
			(2.36 - 2.76)	_

THERMOSTAT + RADIATOR + FAN + COOLANT

ITEM	S	STANDARD/SPECIFICATION		
Thermostat valve opening temperature		Approx. 82 °C (180 °F)		
Thermostat valve lift	8 mm ((0.31 in) and over at 95 °C (203 °F)		
ECT sensor resistance	20 °C (68 °F)	Approx. 2.45 kΩ		
	50 °C (122 °F)	Approx. 0.811 kΩ	<u>—</u>	
	80 °C (176 °F)	Approx. 0.318 kΩ		
	110 °C (230 °F)	Approx. 0.142 kΩ		
Radiator cap valve opening		93 – 123 kPa		
pressure	(0.93	3 – 1.23 kgf/cm², 13.2 – 17.5 psi)	_	
Cooling fan thermo-switch	OFF ON	Approx. 105 °C (221 °F)		
operating temperature	ON OFF	Approx. 100 °C (212 °F)		
Engine coolant type		Use an antifreeze/coolant compatible with aluminum radiator, mixed with distilled water only, at the ratio of 50:50.		
Engine coolant	Reserve tank side	Approx. 250 ml (0.3/0.2 US/lmp qt)		
	Engine side	Approx. 2 150 ml (2.3 – 1.9 US/Imp qt)	_	

INJECTOR + FUEL PUMP + FUEL PRESSURE REGULATOR

ITEM	SPECIFICATION	NOTE
Injector resistance	11 – 13 Ω at 20 °C (68 °F)	
Fuel pump discharge amount	Approx. 1.2 L (1.3/1.1 US/lmp qt)/30 sec.	
Fuel pressure regulator operating set pressure	Approx. 300 kPa (3.0 kgf/cm², 43 psi)	

FI SENSORS+ SECONDARY THROTTLE VALVE ACTUATOR

ITEM	SPECIFICATION		NOTE
CMP sensor resistance	0.9 – 1.7 k Ω		
CMP sensor peak voltage	0.5 V and more		When cranking
CKP sensor resistance	70 – 220 Ω		
CKP sensor peak voltage		0.5 V and more	When cranking
IAP sensor input voltage		4.5 – 5.5 V	
IAP sensor output voltage	Д	approx. 2.6 V at idle speed	
TP sensor input voltage		4.5 – 5.5 V	
TP sensor resistance	Closed	Approx. 1.1 kΩ	
·	Opened	Approx. 4.3 kΩ	
TP sensor output voltage	Closed	Approx. 1.1 V	
	Opened	Approx. 4.3 V	
ECT sensor input voltage		4.5 – 5.5 V	
ECT sensor resistance	App	rox. 2.45 kΩ at 20 °C (68 °F)	· · · · · · · · · · · · · · · · · · ·
IAT sensor input voltage		4.5 – 5.5 V	
IAT sensor resistance	App	rox. 2.45 kΩ at 20 °C (68 °F)	
AP sensor input voltage		4.5 – 5.5 V	
AP sensor output voltage	Approx	c. 2.6 V at 760 mmHg (100 kPa)	
TO sensor resistance		19.1 – 19.7 kΩ	
TO sensor voltage	Normal	0.4 – 1.4 V	
Ü	Leaning	3.7 – 4.4 V	When leaning 65 °
GP switch voltage	'	0.6 V and more	From 1st to Top
Injector voltage		Battery voltage	
Ignition coil primary peak voltage		80 V	When cranking
STP sensor input voltage		4.5 – 5.5 V	
STP sensor resistance	Closed	Approx. 0.5 kΩ	
	Opened	Approx. 3.9 kΩ	
STP sensor output voltage	Closed	Approx. 0.5 V	
	Opened	Approx. 3.7 V	
STV actuator resistance		Approx. 6.5 Ω	
EXCVA position sensor			
input voltage		4.5 – 5.5 V	
EXCVA position sensor resistance	Approx. 3.1 kΩ		At adjustment position
EXCVA position sensor	Closed	0.5 – 1.3 V	<u>'</u>
output voltage	Opened	3.7 – 4.5 V	

THROTTLE BODY

ITEM	SPECIFICATION
Bore size	42 mm
I.D. No.	40F5 (For E-33), 40F4 (For the others)
ldle r/min.	1 150 ± 100 r/min.
Fast idle r/min.	2 200 r/min. (After warming up)
Throttle cable play	2.0 – 4.0 mm
	(0.08 – 0.16 in)

ELECTRICAL

ELECTRICAL			1		Unit: mm (in
	EM		SPECIFICATION 1.2.4.3		NOTE
Firing order					
Spark plug			Туре	NGK: CR9E DENSO: U27ESR-N	
			Gap	0.7 – 0.8 (0.028 – 0.031)	
Spark performance	······································			Over 8 (0.3) at 1 atm.	
CKP sensor resista	ince			70 – 220 Ω	
CKP sensor peak v	voltage			0.5 V and more	
Ignition coil resistar	nce		Primary	0.8 – 2.5 Ω	Terminal – Terminal
			Secondary	8 – 18 kΩ	Plug cap – Terminal
Ignition coil primary	peak voltage		80 V		
Generator coil resis	stance			0.2 – 0.9 Ω	
Generator no-load (when engine is col	•		65 V (AC) and more at 5 000 r/min.		
Regulated voltage	· · · · · · · · · · · · · · · · · · ·		14.0 - 15.5 V at 5 000 r/min.		
Starter relay resista	ance			3 – 5 Ω	
GP switch voltage			0.6 V and m	ore (From 1st to top without neutral)	
Battery	Type designa	tion	FTX12-BS		
	Capacity		12 V 36 kC (10 Ah)/10 HR		
Fuse size	Hoodlight	НІ	10 A (E	E-02, 19)/15 A (E-03, 24, 28, 33)	
	Headlight	LO		10 A	
	Signal		10 A		
	Ignition			15 A	
	Fuel			10 A	
	Fan			10 A	
L	Main			30 A	

WATTAGE Unit: W

ITEM		STANDARD/SPECIFICATION			
		E-03, -24, -28, -33	Others		
Headlight	HI	60/55 W	←		
	LO	55/55 W	55 W		
Position/Parking light			5 W		
Brake light/Taillight		LED	←		
Turn signal light		18 W × 4	←		
License plate light		5 W	←		
Combination meter light		on meter light LED			
Turn signal indicator light		icator light LED			
High beam indicator light		LED	←		
Neutral indicator light		eator light LED			
FI indicator light/Oil pressure					
indicator light/Engine coolant		LED	←		
temp. indicator light					
Fuel level indicator light		LED	←		
Engine RPM indicator light		LED	←		

BRAKE + WHEEL

ITEM		STANDARD	
Rear brake pedal height		60 – 70	
		(2.4 - 2.8)	
Brake disc thickness	Front	5.3 – 5.7	5.0
	FIOIIL	(0.209 - 0.224)	(0.177)
	Door	4.8 – 5.2	4.5
	Rear	(0.189 - 0.205)	(0.177)
Brake disc runout			0.30
		-	(0.012)
Master cylinder bore	Front &	14.000 – 14.043	
	Rear	(0.5512 - 0.5529)	_
Master cylinder piston diam	Front	13.957 – 13.984	
	FIOIIL	(0.5495 - 0.5506)	_
	Rear	13.957 – 13.984	
	neai	(0.5495 – 0.5506)	
Brake caliper cylinder bore	Front	30.230 - 30.306	
	Front	(1.1902 – 1.1931)	_
	Daar	38.180 - 38.230	
	Rear	(1.5031 – 1.5051)	_

ITEM		STANDARD	LIMIT
Brake caliper piston diam	Front	30.150 – 30.200	
	Front	(1.1870 – 1.1890)	_
	Rear	38.110 – 38.130	
	near	(1.5004 – 1.5012)	
Brake fluid type		DOT 4	_
Wheel rim runout	Axial	-	2.0
	Axiai		(80.0)
	Dadial	_	2.0
	Radial		(80.0)
Wheel rim size	Front	17 M/C × MT 3.50	_
	Rear	17 M/C × MT 6.00	_
Wheel axle runout	Front		0.25
	Front	_	(0.010)
	Dear		0.25
	Rear		(0.010)

TIRE

ITEM		STANDARD	LIMIT
Cold inflation tire pressure (Solo riding)	Front	250 kPa (2.50 kgf/cm², 36 psi)	_
(Sectionary)	Rear	290 kPa (2.90 kgf/cm², 42 psi)	_
Cold inflation tire pressure (Dual riding)	Front	250 kPa (2.50 kgf/cm², 36 psi)	_
	Rear	290 kPa (2.90 kgf/cm², 42 psi)	_
Tire size	Front	120/70 ZR17 M/C (58 W)	_
	Rear	190/50 ZR17 M/C (73 W)	_
Tire type	Front	BRIDGESTONE: BT011F F	
· ·	Rear	BRIDGESTONE: BT012R F	
Tire tread depth (Recommended depth)	Front	_	1.6 (0.06)
	Rear	_	2.0 (0.08)

SUSPENSION

ITEM	STANDARD		LIMIT
Front fork stroke		120	
		(4.92)	
Front fork spring free length		230.0	
		(9.06)	
Front fork oil level (without spring,		101	
outer tube fully compressed)		(3.98)	
Front fork oil type	SUZUKI FORK OIL L01 or an equivalent fork oil		_
Front fork oil capacity (each leg)		509 ml	
		(17.2/17.9 US/Imp oz)	
Front fork spring adjuster		4.5 th groove from top	
Front fork damping force	Rebound	6 clicks out from stiffest position	_
adjuster	Compression	11 clicks out from stiffest position	
Rear shock absorber spring	179.6		
pre-set length	(7.07)		
Rear shock absorber damping	Rebound	8 clicks out from stiffest position	
force adjuster	Compression	8 clicks out from stiffest position	
Rear wheel travel	130		
	(5.1)		
Swingarm pivot shaft runout	_		0.3
			(0.01)

FUEL + OIL

ITEM	SPECIFICATION		NOTE
Fuel type	octane ($\frac{R+M}{2}$	ded gasoline of at least 90 pump). ning MTBE (Methyl Tertiary Butyl	
	Ether), less than 10 % ethanol, or less than 5 %		E-03, 28, 33
	methanol with appropriate cosolvents and corrosion inhibitor is permissible.		
	Gasoline used should be graded 95 octane or higher. An unleaded gasoline is recommended.		Others
Fuel tank capacity	Including	18 L	
	reserve	(4.8/4.0 US/Imp gal)	
	Fuel level indicator light lighting	Approx. 4.2 L (1.1/0.9 US/Imp gal)	
Engine oil type	SAE 10 W/40, API, SF or SG		
Engine oil capacity	change	3.0 L (3.2/2.6 US/Imp qt)	
	Filter change	3.3 L (3.5/2.9 US/Imp qt)	
	Overhaul	3.6 L (3.8/3.2 US/Imp qt)	


EMISSION CONTROL INFORMATION

CONTENTS	
EMISSION CONTROL SYSTEMS	11- 2
FUEL INJECTION SYSTEM	11- 2
CRANKCASE EMISSION CONTROL SYSTEM	11- 3
EXHAUST EMISSION CONTROL SYSTEM (PAIR	R SYSTEM)11- 4
NOISE EMISSION CONTROL SYSTEM	11- 5
EVAPORATIVE EMISSION CONTROL SYSTEM	(Only for E-33)11- 5
PAIR (AIRSUPPLY) SYSTEM INSPECTION	11- 6
HOSES	11- 6
PAIR REED VALVE	11- 6
PAIR CONTROL VALVE	11- 6
PAIR (AIR SUPPLY) SYSTEM DIAGRAM	11- 7
PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING	11- 8
EVAPORATIVE EMISSION CONTROL SYSTEM INSI	PECTION
(Only for E-33)	11- 9
HOSES	11- 9
EVAP CANISTER	11- 9
TANK PRESSURE CONTROL VALVE	11- 9
EVAP CANISTER HOSE ROUTING (Only for E-33)	11-10

EMISSION CONTROL SYSTEMS FUEL INJECTION SYSTEM


GSX-R1000 motorcycles are equipped with a fuel injection system for emission level control.

This fuel injection system is precision designed, manufactured and adjusted to comply with the applicable emission limits.

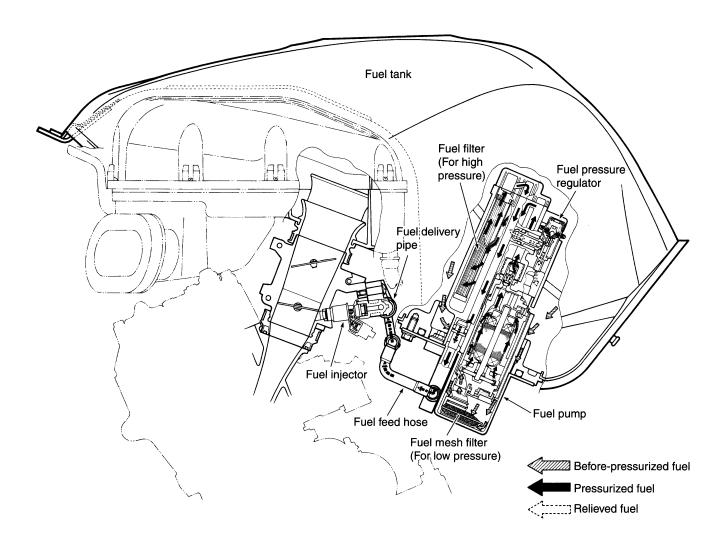


CRANKCASE EMISSION CONTROL SYSTEM

The engine is equipped with a PCV system. Blow-by gas in the engine is constantly drawn into the crankcase, which is returned to the combustion chamber through the PCV (breather) hose, air cleaner and throttle body.

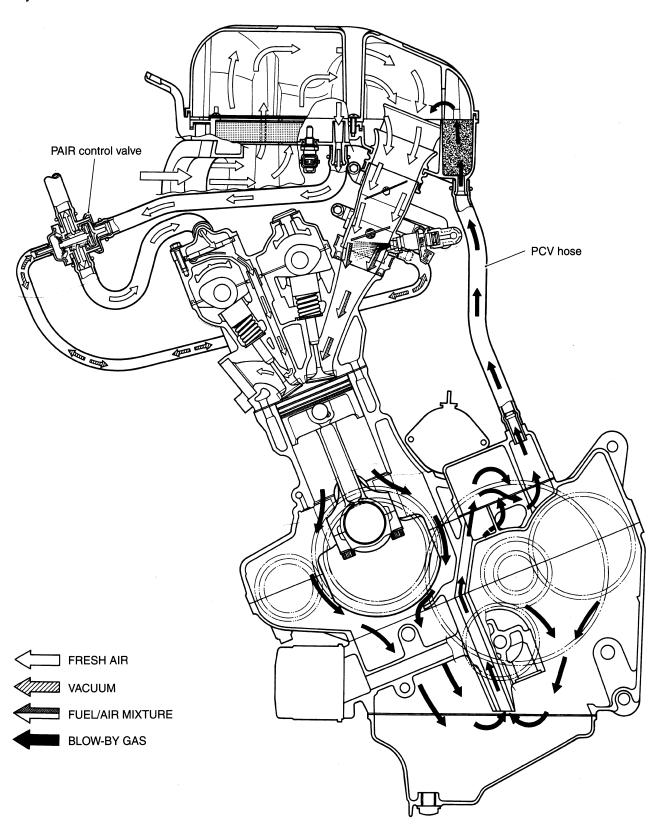

EXHAUST EMISSION CONTROL SYSTEM (PAIR SYSTEM)

The exhaust emission control system is composed of the PAIR system and exhaust control system. The fresh air is drawn into the exhaust port with the PAIR valve and PAIR reed valve. The PAIR valve is operated by the engine vacuum, and the exhaust gas flow is controlled by the ECM by changing the exhaust control valve angle.

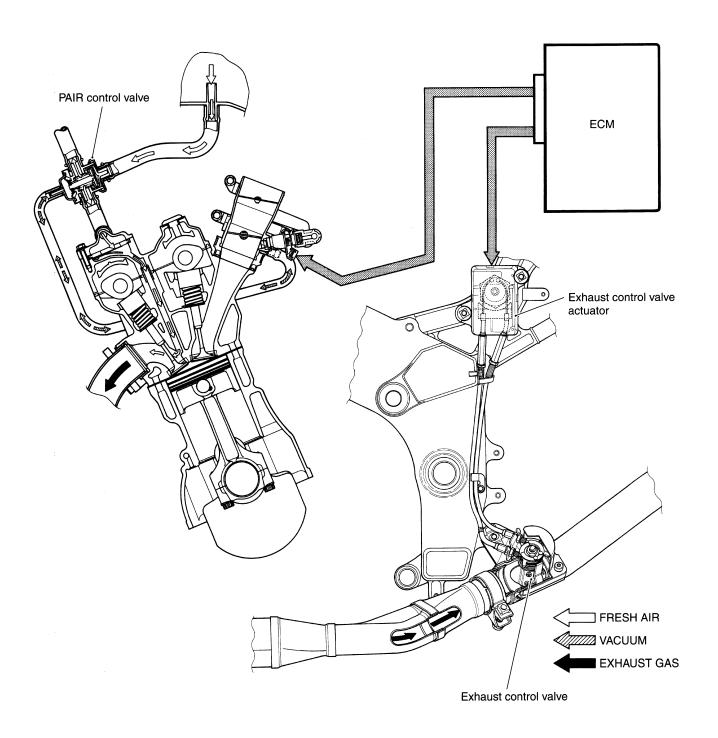

NOISE EMISSION CONTROL SYSTEM


TAMPERING WITH THE NOISE CONTROL SYSTEM PROHIBITED: Federal law prohibits the following acts or the causing thereof:

- 1. The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2. The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:

- Removing or puncturing the muffler, baffles, header pipes, screen type spark arrester (if equipped) or any other component which conducts exhaust gases.
- · Removing or puncturing the air cleaner case, air cleaner cover, baffles or any other component which conducts intake air.
- · Replacing the exhaust system or muffler with a system or muffler not marked with the same model specific code as the code listed on the Motorcycle Noise Emission Control Information label.

EVAPORATIVE EMISSION CONTROL SYSTEM (Only for E-33)

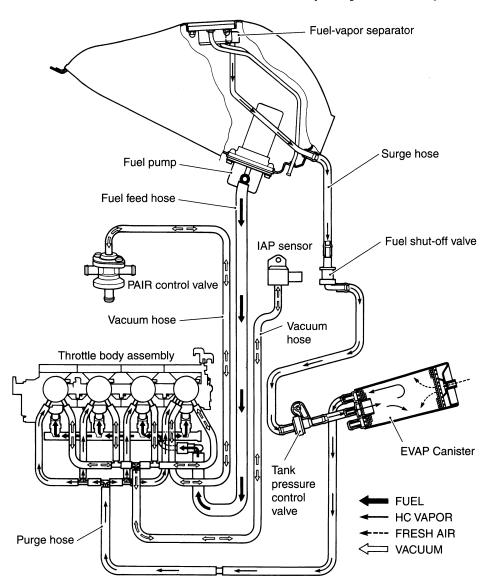

PAIR (AIRSUPPLY) SYSTEM INSPECTION **HOSES**

- Inspect the hoses for wear or damage.
- Inspect that the hoses and pipes are securely connected.


PAIR REED VALVE

- Remove the PAIR reed valve cover.
- Inspect the reed valve for the carbon deposit.
- If the carbon deposit is found in the reed valve, replace the PAIR reed valve with a new one.




PAIR CONTROL VALVE

- · Check that air flows through the PAIR control valve air inlet port to the air outlet ports.
- If air does not flow out, replace the PAIR control valve with a new one.

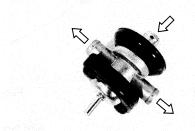

 - · Connect the vacuum pump gauge to the vacuum port of the control valve as shown in the photograph.
- · Apply negative pressure of the specification slowly to the control valve and inspect the air flow.
- If air does not flow to the pump, the control valve is in normal condition.
- If the control valve does not properly function within the specification, replace the control valve with a new one.







09917-47010: Vacuum pump gauge

CAUTION


Use a hand operated vacuum pump to prevent the control valve damage.

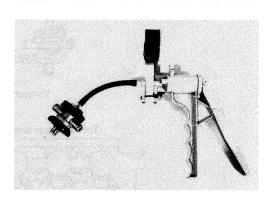

PAIR (AIR SUPPLY) SYSTEM DIAGRAM

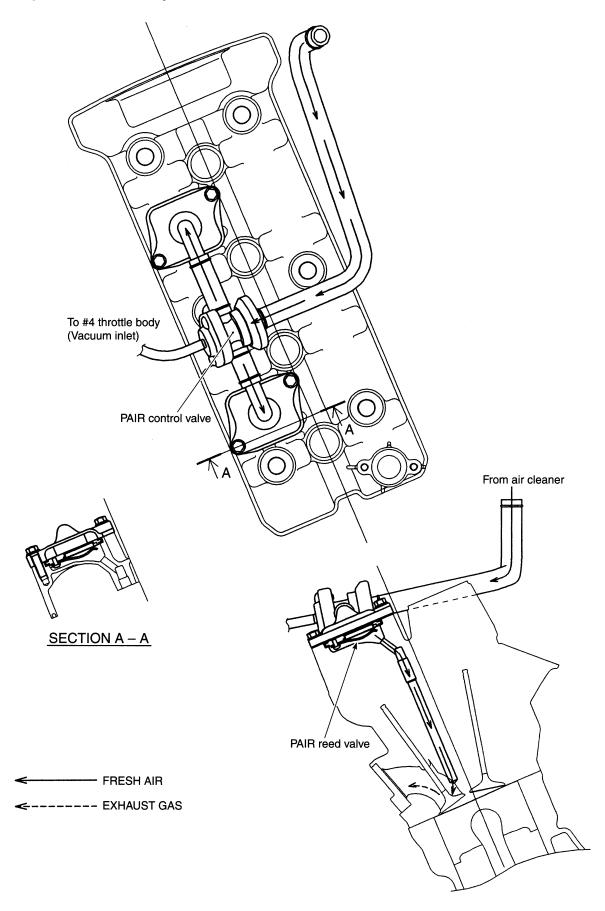

PAIR (AIR SUPPLY) SYSTEM HOSE ROUTING

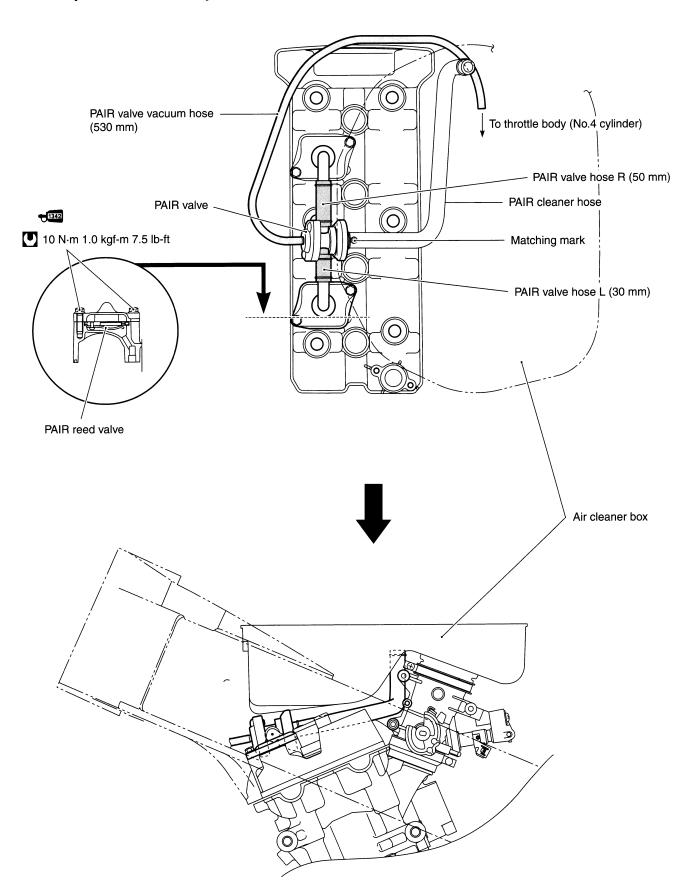

EVAPORATIVE EMISSION CONTROL SYSTEM INSPECTION (Only for E-33)

- Remove the seat and frame cover. (8-6)
- Lift and support the fuel tank with its prop stay. (5-5)

HOSES

Inspect the hoses for wear or damage. Make sure that the hoses are securely connected.


EVAP CANISTER

Inspect the canister for damage to the body.

TANK PRESSURE CONTROL VALVE

Inspect the tank pressure contorol valve body for damage. Inspect the tank pressure control valve operation in the following procedure.

- Remove the tank pressure control valve.
- When air pressure is applied to the tank pressure control valve from the side (A), air should flow out through the purge control valve.
- When air pressure is applied to the tank pressure control valve from the side ®, air should not flow through the purge valve.
- If the tank pressure control valve operates otherwise, it must be replaced.

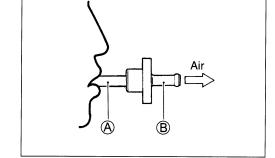


▲ WARNING

Gasoline and gasoline vapor is toxic. A small amount of fuel remains in the tank pressure control valve when checking it.


Do not swallow the fuel when blowing the tank pressure control valve.

NOTE:

When connecting the tank pressure control valve to the hose, the side ® should face toward the fuel shut-off valve side, and the side A should face toward the canister side.

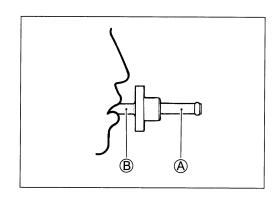


EVAP CANISTER HOSE ROUTING (Only for E-33)

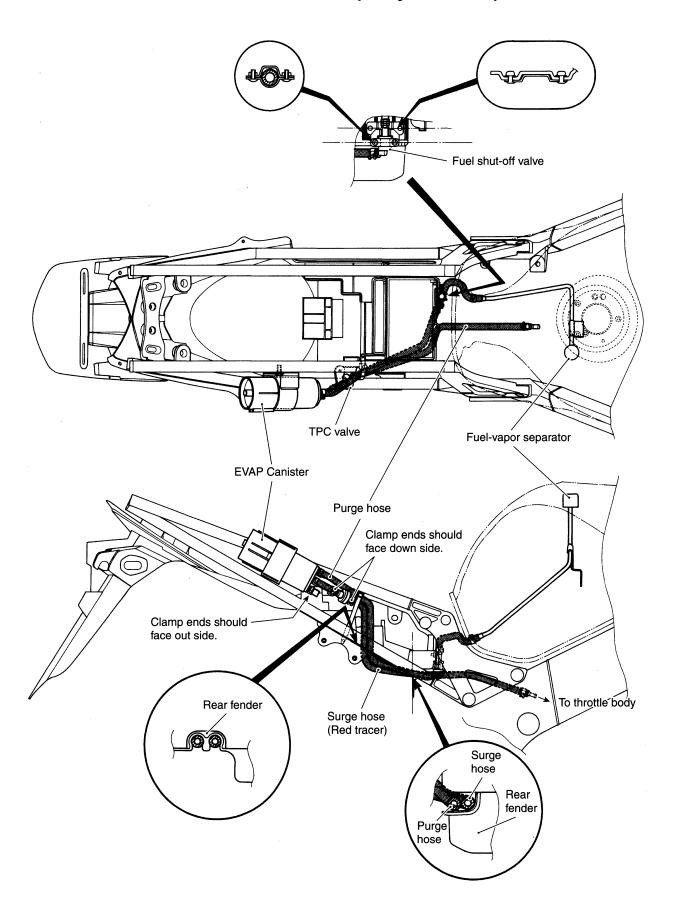


WIRING DIAGRAM

E-03, 24, 28, 33

Wiring diagrams wire color, refer to section "WIRE COLOR".

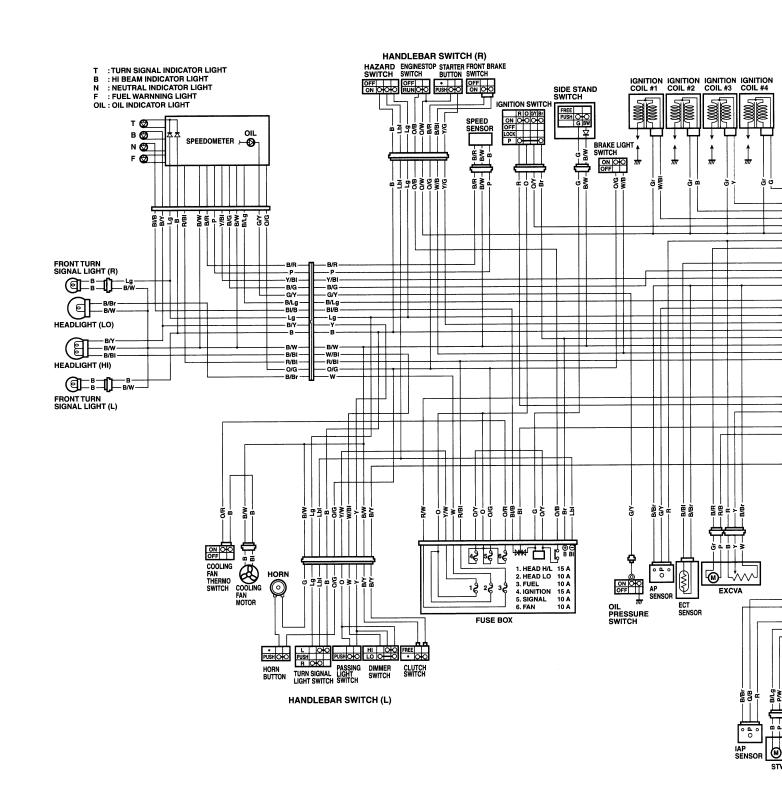

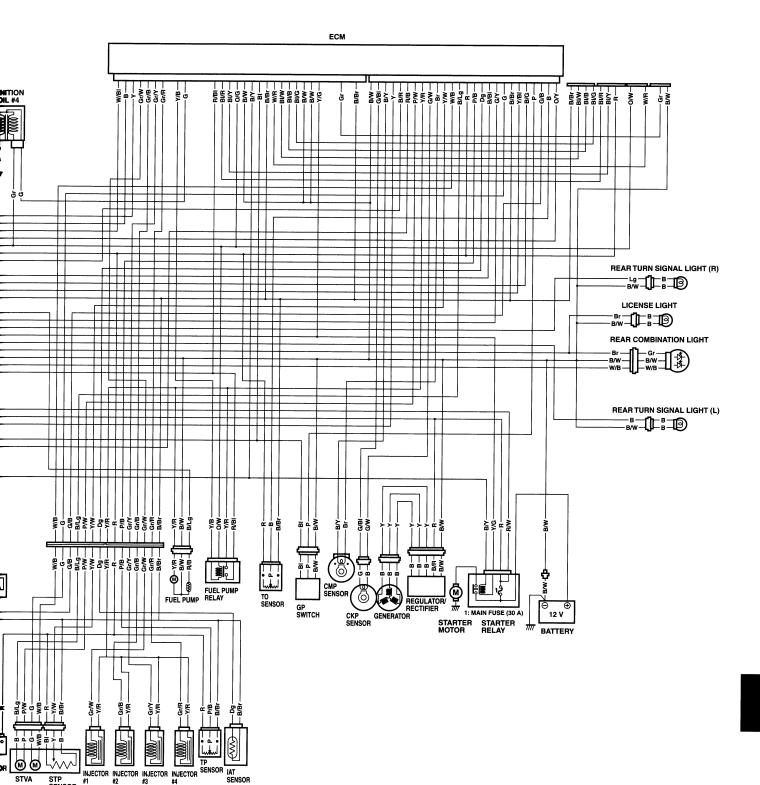

STVA

STP SENSOR

SENSOR

