



- 1 MULTIPLE CONNECTORS
- 2 SPEED SENSOR
- 3 FUEL LEVEL SENSOR
- 4 INSTRUMENT PANEL ( EASY )
- 5 HEAD TEMPERATURE SENSOR
- 6 OIL LEVEL SWITCH
- 7 IGNITION SWITCH
- 8 HORN
- 9 LH DIP SWITCH
- 10 REAR STOP SWITCH (ON LH DIMMER SWITCH)
- 11 RH DIP SWITCH
- 12 FRONT STOP SWITCH (ON RH DIMMER SWITCH)
- 13 LH REAR DIRECTION INDICATOR

- 14 TAIL LIGHT
- 15 DUAL PARKING/STOP BULB
- 16 RH REAR DIRECTION INDICATOR
- 17 NO. PLATE LIGHT (ONLY FOR USA/CH)
- 18 STARTER RELAY
- 19 STARTER MOTOR
- 20 BATTERY
- 21 FUSES
- 22 REGULATOR
- 23 PICK-UP
- 24 GENERATOR
- 25 SPARK PLUG
- 26 TRANSUDER
- 27 AUTOMATIC COLD START
- 28 RH FRONT DIRECTION INDICATOR
- 29 FRONT PARKING LIGHTS ( ONLY CH-USA )
- 30 LOW BEAM
- 31 HIGH BEAM
- 32 LH FRONT DIRECTION INDICATOR
- 33 HEADLIGHT
- 34 SERIAL CONNECTION (DIAG.)