



- \* Antenna
- \* N/A
- \* Antenna
- 6. Yellow. Diagnostic LED Control
- 1. Black / Blue. Output to Indicator Switch. (12v switching on / off)
- 8. Black. Ground
- 3. Purple. Output to HT Coil
- 4. Red / Blue. Input. Battery Voltage live
- 5. White / Red. Input. Battery Voltage when Ignition On. (Orange for ETB)
- 7. White / Black. Input from Choke. To ground only with engine running
- 2. Green. Input. Pulse from Ignition Pickup