


INFORMATION FLASH

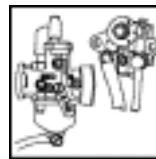

SALES DIVISION
NETWORK TECHNICAL INFORMATION

FOX


Subject: WORN OUT SPARK PLUG

Problem:

Engine does not start, the spark plug is worn out.

After-sales service solution:

Under certain riding circumstances, such as door-to-door deliveries, it might be necessary to modify the vehicle. In this case and only in this case, replace the original spark plug with a BPR6HS spark plug **P/N 735592** and suppress the choke control resistor.

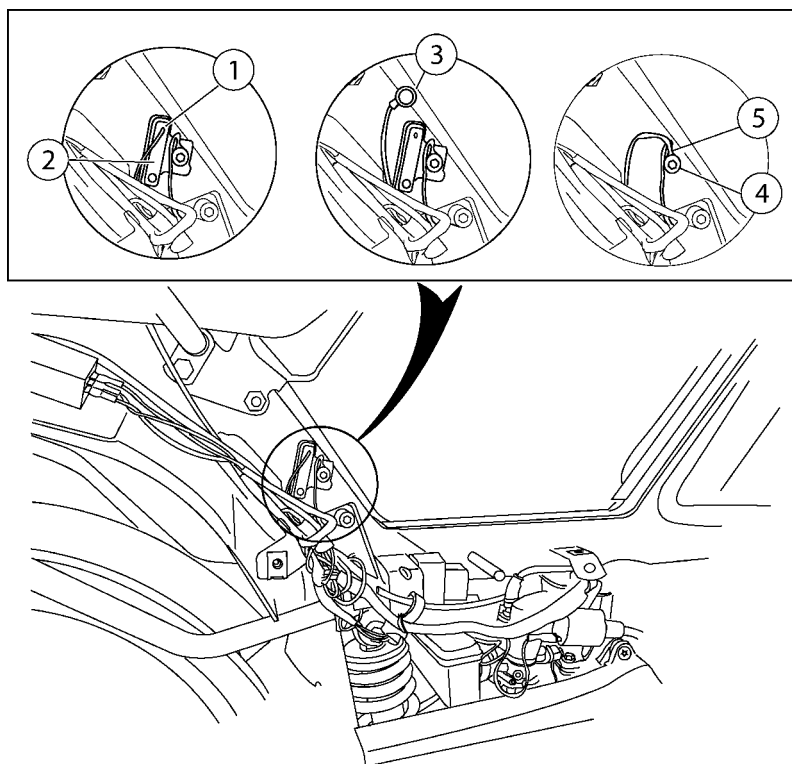

Remove the lower right and rear right fairings.

Cut the wire (1) level with the choke control resistor (2) and crimp a round 6.5 mm diameter terminal (3) **P/N 725364** on the wire.

Remove the screw (4) and suppress the choke control resistor (2).

Re-install the screw (4) while inserting the two round terminals (3) et (5).

Required time: 0.40h Labour code: 7003

	Dealership	Spare parts	Mechanic 1	Mechanic 2	Mechanic n 3
Signature					